

Philips 3000 series  
DVD player



DVP3670

## Enjoy it all - from DVD or USB

With RealMedia Video playback

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

### Play all your movies and music

- RealMedia Video for movie playback from your PC
- ProReader Drive for smooth playback on virtually any disc
- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, RMVB, JPEG
- DivX Ultra Certified for enhanced DivX video playback

### Bring audio and video to life

- 12-bit/108MHz video processing for sharp and natural images
- 192kHz/24 bit audio DAC enhances analogue sound input

### Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives

### Easy to use

- One-touch MP3 creation directly from CDs onto USB sticks

### Fits any space, any lifestyle

- Ultra-slim design that fits anywhere

**PHILIPS**  
sense and simplicity

# Specifications

## Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

## Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 100
- Distortion and Noise (1kHz): 85 dB
- Crosstalk (1kHz): 100 dB
- Dynamic Range (1kHz): 90 dB
- Sound System: Dolby Digital

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DivX, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0
- Video disc playback system: NTSC, PAL

## Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- Compression format: MP3, Dolby Digital, PCM, WMA
- MP3 bit rates: 32 - 320 kbps

## Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Zoom,

Slideshow, Slideshow with MP3 playback

## Connectivity

- Front / Side connections: USB
- Rear Connections: Analog audio Left/Right out, Component Video out Progressive, Composite video (CVBS) output, Digital coaxial out

## Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Simplified Chinese

## Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: < 10 W
- Standby power consumption: <1 W

## Accessories

- Included accessories: Audio/Video cable, Remote Control, World Wide Warranty leaflet, User Manual, 1 x AAA Battery, Quick start guide

## Dimensions

- Packaging dimensions (W x H x D): 400 x 80 x 282 mm
- Set dimensions (W x H x D): 310 x 39 x 209 mm
- Set weight: 1.3 kg
- Weight incl. Packaging: 1.8 kg

## Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: DivX, JPEG Still pictures, MP3

# Highlights

## RealMedia Video

RealMedia Video for movie playback from your PC

## Multimedia RMVB

Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, RMVB, JPEG

## One-touch MP3 creation


Convert the contents of your favorite CDs to MP3 files on your Philips product, and store it directly on a thumbdrive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your living room, without a PC, and even while the CD is playing.

## 12-bit/108MHz video processing



12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.

## 192kHz/24 bit audio DAC

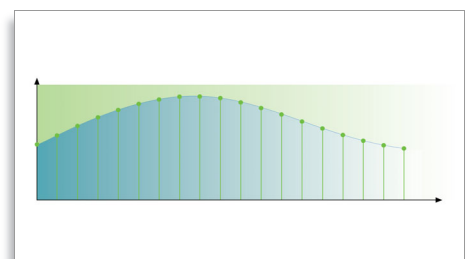

192KHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.



Issue date 2013-02-12

Version: 1.3.5

12 NC: 8670 000 88605  
EAN: 87 12581 63985 3

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)