# Quick Start Guide





Step A Connect

Step B Setup


Step C Enjoy

### What's in the Box?

You should find these items upon opening the box.





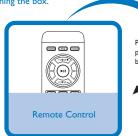







**PHILIPS** 

# Step A Connect


- Connect the AC power cord of the subwoofer to the AC outlet.
- Connect the AC power adaptor of the system.


In case the wireless connection fails due to conflict or strong interference etc., you may need the following procedures for manual pairing:

- In standby mode, press and hold II on the set for three seconds to activate signal transmitting.
  - → "PAIR" flashes on the display screen.
- Press and hold the PAIR button on the rear of the subwoofer for three seconds to activate signal receiving.
  - →The LED indicator on the subwoofer flashes in blue and green alternatively.
- If the connection succeeds, the display shows "PASS".
- If the connection fails or the connection cannot be set up successfully within 60 seconds, the display shows "FAIL".

#### Tip

- See the User Manual for how to connect other equipment to this system.
- Use the supplied AC power adaptor only! Using any other power connection device may damage your main set!



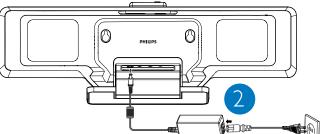


## Step B Setup

## Setting the clock


- In standby mode, press and hold **PROG/SET TIME** on the remote control.
- Press **VOLUME** +/- (or **VOL** +/- on the remote control) to switch between 12 hour and 24 hour display.
- Press **PROG/SETTIME** on the remote control again to confirm.

  The clock digits flash on the display panel.
- Press **VOLUME** +/- (or **VOL** +/- on the remote control) to set the hours.
- Press PROG/SETTIME on the remote control again.

  → The clock digits for the minutes flash.
- Press **VOLUME +/-** (or **VOL +/-** on the remote control) to set the minutes.
- Press PROG/SETTIME on the remote control to confirm the time.

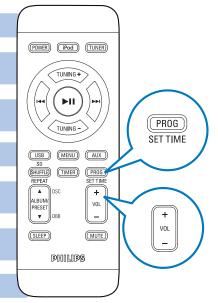



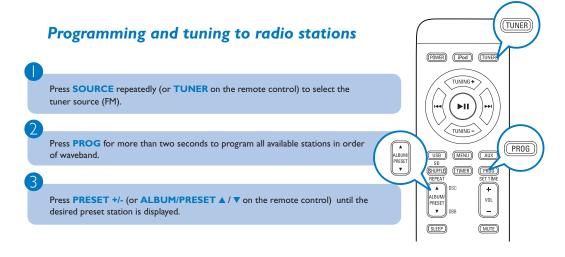

### Playing a USB mass storage device/SD/MMC card

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1) and memory cards

- Insert the USB device's USB plug into the socket or fully insert the SD/MMC card into the SD/MMC slot on the top of the system.
- Press SOURCE once or more (or USB/CARD on the remote control) to select USB/CARD.
- Play the available audio files using playback buttons on the set or remote control (such as



## Playing Apple iPod using DC912

Select the correct dock adaptor, as indicated on each adaptor, then fit it in the dock.

Correctly place the compatible iPod player into the dock.

Press **SOURCE** on the system repeatedly or **iPod** on the remote control to select the iPod source.

Power on your iPod player.

Select and play your favourite songs stored in the iPod player.

#### Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

#### Notes for remote control:

- First select the source you wish to control by pressing one of the source select keys on the remote control (for example iPod, TUNER).
- Then select the desired function (for example ► II, ◄, ►►).



