



Philips  
Soundbar speaker

Bluetooth®



HTL2160



## Bring music to life via Bluetooth

Enjoy richer sound from any TV

Fill your home with superb Bluetooth wireless music. In addition to TV & home theater, it also boosts your gaming console and MP3 player. So start enjoying top-quality Virtual Surround Sound movies and music now.

### Connect and enjoy all your entertainment

- Wireless music streaming via Bluetooth
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Enjoy MP3/WMA music directly from your portable USB devices
- Audio in to enjoy music from iPod/iPhone/MP3 player

### Designed for simplicity

- Ultra-compact 80cm-wide soundbar suits any home décor
- Low-rise profile for the perfect fit in front of your TV


### Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience
- External subwoofer adds thrill to the action
- Twin tweeters for optimum clarity performance

# PHILIPS


# Highlights

## Bluetooth

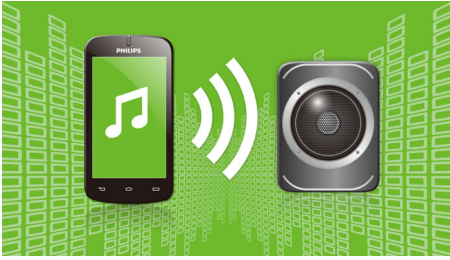

Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

## Virtual Surround Sound

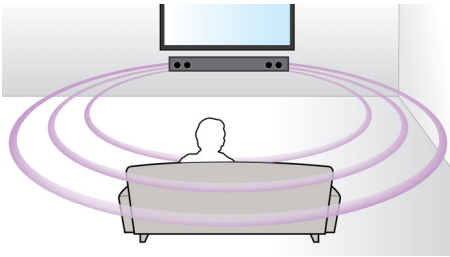

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## External subwoofer




External subwoofer adds thrill to the action

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## Dolby Digital

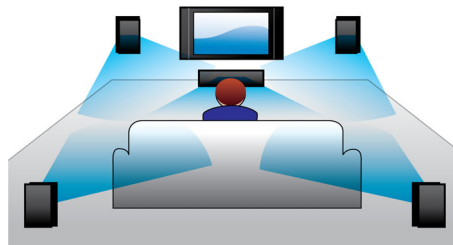

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

## USB



Enjoy MP3/WMA music directly from your portable USB devices

## Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

# Specifications

## Sound

- Sound Enhancement: Virtual Surround Sound, Treble and Bass Control
- Sound System: Dolby Digital
- Speaker output power: 15 W x 2
- Subwoofer output power: 30 W
- Total Power RMS @ 30% THD: 60 W

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 1 woofer, 1 Mylar tweeter
- Speaker Impedance: 4 ohm
- Tweeter Impedance: 8 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer impedance: 8 ohm

## Connectivity

- Integrated Connections: Bluetooth
- Side connections: Audio In (3.5mm), USB
- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Rear Connections: Digital optical in, Subwoofer out, AUX in, Digital coaxial in

## Design

- Wall mountable

## Power

- Power consumption: 30 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.5 W

## Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink

## Dimensions

- Main Unit (W x H x D): 800 x 52.4 x 75.6 mm
- Main Unit Weight: 1.2 kg
- Subwoofer (W x H x D): 165 x 240 x 295 mm
- Subwoofer Weight: 2.6 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 400 x 292 x 349 mm
- Weight incl. Packaging: 5.4 kg

## Accessories

- Included accessories: 1 x AAA Battery, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet



Issue date 2014-05-16

Version: 7.3.6

12 NC: 8670 000 96624  
UPC: 6 09585 22998 3

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)