

Philips
DVD Micro Theatre



MCD149

Turn Any Rooms into Theatre

You're in touch with the latest and the coolest — now get a load of the hot 2-in-1 Micro Hi-Fi with DVD, WMA-CD and MP3-CD playback! Relax to your fave movies and music. Home entertainment will never be the same again!

Enjoy your favourite movies, photos and music

- Play DVD, DivX®, (S)VCD, MP3-CD, WMA-CD, CD(RW) & Picture CD
- Enjoy MP3/WMA music directly from your portable USB devices
- Dolby Digital for ultimate movie experience
- Progressive Scan component video for optimised image quality

Enrich your sound experience

- Digital Sound Control for optimised music style settings
- Dynamic Bass Boost for deep and dramatic sound
- Aux-in to enhance TV sound
- 200 W RMS total output power (2.1 system)


Start the day your way

- Wake-Up and Sleep Timer
- Digital tuning with 40 preset stations for extra convenience

PHILIPS
sense and simplicity

Highlights

Digital Sound Control

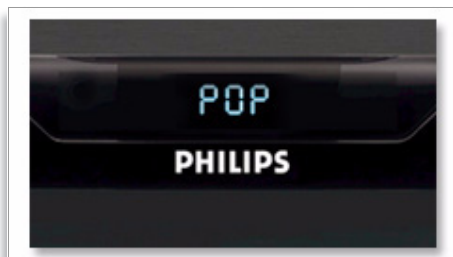

Digital Sound Control offers you a choice of preset Jazz, Rock, Pop and Classical controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

Dynamic Bass Boost



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Progressive Scan

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, it writes both fields at the same time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.



Specifications

Sound

- Output Power: 2 x 50 W + 100 W RMS
- Sound Enhancement: Digital Sound Control 4 modes, Dynamic Bass Boost
- Sound System: Dolby Digital

Loudspeakers

- Main Speaker: 4" woofer
- Subwoofer type: Passive

Video Playback

- Playback Media: DVD+RW, DVD-Video, Picture CD, Video CD/SVCD, DivX, DVD
- Disc Playback Modes: A-B Repeat, Angle, PBC, Slow Motion, Zoom, OSD, Parental control, Resume Playback from Stop
- DVD Region: 2
- Video Enhancement: Progressive Scan

Audio Playback

- Playback Media: WMA-CD, MP3-CD, CD, CD-R, CD-RW
- Disc Playback Modes: 20-Track Programmable, Repeat/one/all/program, Shuffle Play
- Loader Type: Top
- USB Direct Modes: Fast Reverse/Fast Forward, Play/Pause, Previous/Next, Repeat, Shuffle, Stop

Tuner/reception/transmission

- Tuner Bands: FM Stereo
- Auto digital tuning
- Station presets: 40

Connectivity

- Video Output - Analogue: Component Y Pb Pr (cinch), Composite CVBS (yellow cinch), S-Video (on Hosiden), SCART
- Aux in: 1x(L/R)/RCA
- Other connections: Digital audio coaxial out, FM Antenna, Line out
- USB: USB host

Convenience

- Alarms: CD Alarm, Sleep timer, Radio Alarm
- Clock: On main display
- Display Type: White FTD
- OSD Languages: Spanish, French, English, German, Italian, Portuguese
- Eco Power Standby: 1 watt

Accessories

- Included Accessories: Composite video cable (Y), FM antenna
- Remote control: 38-key with Lithium battery
- Cables: D-sub

Dimensions

- Set dimensions (W x H x D):
218 x 90 x 221.5 mm
- Main speaker dimensions (W x H x D):
125 x 250 x 232 mm
- Weight incl. Packaging: 13 kg
- Subwoofer dimensions (W x H x D):
199 x 311 x 390 mm



Issue date 2009-03-13

Version: 1.0.9

12 NC: 8670 000 32902
EAN: 87 12581 35623 1

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com