




Philips Perfect sound
Cordless phone with
answering machine

2000-series
Brilliant pearl

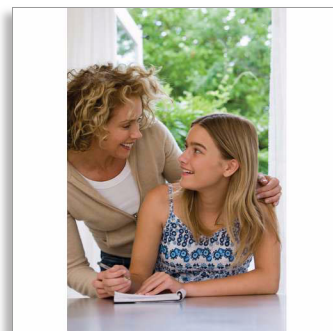

CD2751S

More than words

for unbelievable sound quality

Enjoy unbelievable sound quality with the XHD sound technology while talking to your family and friends. You will hardly want to end the call.

Experience unbelievable sound quality

- XHD sound
- Handset speakerphone allows you to talk hands-free

Benefit from pure convenience

- 2-line amber backlit display
- 12 hours talk time
- 100-name phonebook

Never miss a message

- Direct access answering machine on base and via handset
- 30 minutes recording time and message indicator on base

Save energy

- EcoMode: reduced transmission power between handset and base
- Low power consumption < 0.65 W



asimpleswitch.com



asimpleswitch.com

PHILIPS

Specifications

Picture/Display

- Backlight
- Backlight colour: Amber
- Display colours: Black and White
- Lines of text: 1
- Main Display Type: Dot matrix

Sound

- Sound Enhancement: XHD sound
- Handset ringers: Polyphonic

Convenience

- Alarms: Alarm Clock
- Base station keys
- Battery charging indication
- Call Management: Call Waiting*, Caller ID*
- Ease of Use: Hands-free mode
- Multi-base capability: 1
- Multi-handset capability: Up to 5
- Signal strength indication
- Backlit keypad
- Speakerphone — talk hands-free

Network Features

- Antenna: Integrated on base
- Compatible: GAP
- Dialling: Tone, Pulse

Operator Requirements

- Name and Caller ID

Answering Machine

- Plug and Play Answering machine
- Recording time capacity: 30 min.

Memory Capacity

- Call log entries: 20 entries
- Phonebook: 100 entries
- Redial List Capacity: 5

Dimensions

- Base dimensions: 79.5 x 102.0 x 108.4 (H x D x W)
- Handset dimensions: 164.5 x 27.5 x 46.1 (H x D x W)

Power

- Battery capacity: 550 mAh
- Battery type: AAA
- Kind of Battery: Rechargeable
- Mains power: AC 100-240 V~50/60 Hz
- Number of batteries: 2
- Standby time: 150
- Talk time: 12

Highlights

EcoMode: reduced transmission



Since the base station recognises when the handset is docked on its base, an intelligent embedded system ensures transmitted power is permanently controlled and optimised according to the distance between handset and base unit. It means power emission is automatically reduced by up to 93% when the handset is near its base. When used in Eco Mode, you'll also enjoy a 60% manual reduction of emitted power.

XHD sound



No matter where you are, you can have a phone conversation that is free from noise, with incredible loudness and sound purity in the voice. Thanks to a high-quality speaker, sophisticated technology and to a real acoustic chamber, you can enjoy the unbelievable sound quality in every phone conversation.



Issue date 2015-02-04

Version: 3.0.5

12 NC: 8670 000 58484
EAN: 87 12581 51814 1

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com