



Philips
Cordless phone with
answering machine

30 min answering machine

1.9" display/ white backlight
Handset speakerphone
2 handsets

XL4952S



Comfortable and simple

Enjoy easy simplicity with Philips XL495 Cordless Phone, featuring extra-large display and keys, comfortable handset and useful functions like answering machine, volume boost, hearing-aid compatibility and multiple phone entries.

Smart, simple and easy to use

- 4.8cm (1.9") high contrasted graphical display
- Extra large display and characters for easy reading
- Keypad backlight for fast access even in dark room
- Up to 30 min. message on your answering machine
- Two-field entries for assigning 2 numbers to one contact
- Instantly call your loved ones via 3 direct memory keys
- Advanced privacy: black list, silence mode, call barring*
- Visual ringer flashes to alert you of incoming calls
- Event LED shows charging or call/ message status
- Up to 16 hours talk time on a single charge
- Caller ID – so you always know who is calling*


Hear everything loud and clear

- Hearing aid compatible - reduces unwanted noise
- One touch volume boost for extra loud sound

PHILIPS


Highlights

4.8cm (1.9") graphical display

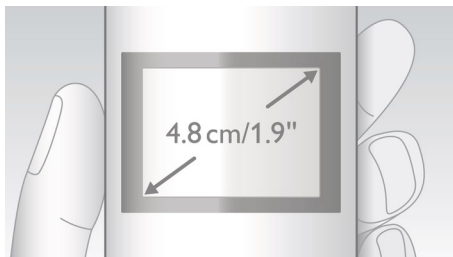

4.8cm (1.9") high contrasted graphical display with white backlight

Advanced privacy settings*

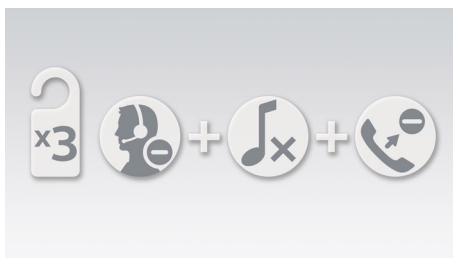

Black list restricts receiving calls from specific numbers or starting with certain digits. You can block 4 sets of numbers. Each set of numbers can consist between 1 to 24 digits. When there is an incoming call that starts with one of these numbers or being one of 4 exact Caller numbers. With silence mode you can disable the ringtones for specific times. Thanks to Call barring you can avoid expensive phone bill surprises by blocking calls to specific numbers starting with certain digits. Anonymous Call restricts incoming calls with hidden numbers. The phone will not ring.

Caller ID*



Sometimes it is good to know who is calling before you answer. And our Caller ID lets you keep track of who is on the other end of the line.

Event notifications

Event LED shows charging or call/ message status

Hearing aid compatible



Hearing aid compatible - reduces unwanted noise

Instant calling

Now calling the people you care about most is easier than ever. With simple one-touch dialing, you will never have to search for their number again, connecting at the touch of a button.

Keypad backlight



The soft amber backlight makes keys easy to read in low light conditions and at night.

Large display and characters

Extra large display and characters for easy reading

Two-field phonebook entries



These days most people have multiple contact numbers. Our contact list makes it easier for

you to manage your phone contacts. Simply save two phone numbers out of a choice of three different field names for home, work or mobile.

Up to 16 hours talk time

Up to 16 hours talk time on a single charge

Visual ringer


Visual ringer flashes to alert you of incoming calls

Volume boost



Do you sometimes wish a caller could speak a little louder? With the one touch volume boost key, you can instantly increase the volume by over 12dB* at the earpiece and over 8dB* at the handsfree speaker. Now you can hear every word and tone loud and clear. No conversation will be misunderstood ever again. *measurement is based on the lowest volume level to the maximum boost up volume level. Users are advised not to put the handset close to the ear when the boost up key is first pressed. Boost up volume will return to normal by ending the call.

Up to 30 min. recording

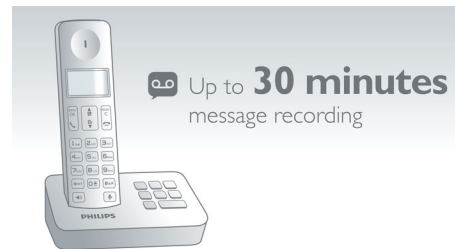

With up to 30 minutes recording time, you'll never miss an important message.

Specifications

Sound

- Hearing Aid Compatible
- Sound Profile: MySound
- Volume control on handset
- Ringtones on handset: 10 polyphonic
- HQ-Sound
- Audio boost

Picture/Display

- Display size: 4.8 cm / 1.9"
- Display type: Dot matrix
- Backlight: Yes
- Backlight color: White

Answering Machine

- Recording time capacity: up to 30 minutes
- Pre-recorded OGM
- Answering machine control: from base and handset
- Loud speaker on base
- Message indication on base: LED (Soft Amber)

Convenience

- Menu structure in the handset: List Menu
- Speakerphone - talk handsfree
- Personalization: Silent mode
- Call barring: Restrict the phone from making specific outgoing calls
- Block callers/ Blacklist*: Restrict the phone from ringing on specific incoming numbers
- Signal strength indicator: 3-bar indicator
- Battery level indicator: 3-bar battery icon
- Intercom - multiple handsets
- Date / Time display
- Alarm Clock
- Programmable hot keys: Key 1 and 2, M1/2/3
- Call Management: Call Waiting*, Caller ID*, Microphone mute, Missed Calls, Received Calls, Dialed calls
- Keypad lock
- Key tone on/off
- Auto Registration
- Auto hang up
- Multi handset capability: Up to 4
- Number of keys: 24
- Backlit keypad: Soft Amber
- Illuminated keypad
- Enlarge dialing digit
- Base Station keys: Paging key, Volume control, Answering machine keys

- Up to 16 hrs talk time
- Up to 250 hrs standby time
- Charge time: 8 hours
- Line cord length: 1.8m
- Power cord length: 1.8m
- Range: Open field <300m; in door <50m
- Family Notes
- Event notifications: for Events status or Charging status
- Non-slip grip: Diamond texture
- Visual ringer

Memory Capacity

- Phonebook: 50 names and numbers + 3 direct memories
- Redial List Capacity: 20 last numbers
- Call log entries: 50 entries
- Phonebook store in the base
- Multiple phonebook entries: up to 2 numbers

Power

- Battery Capacity: 550 mAh
- Battery type: AAA NiMh Rechargeable
- Mains power: AC 100-240V ~50/60Hz

Security

- Transmission encryption : Yes

Network Features

- Compatible: GAP

SAR Value

- Philips handsets: <0.1 W/kg

Eco Design

- EcoMode: automatic & manual
- Eco+

Packaging dimensions

- EAN: 48 95185 60632 3
- Packaging dimensions (W x H x D): 19.7 x 15.7 x 10.2 cm
- Gross weight: 0.8912 kg
- Nett weight: 0.7682 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.123 kg
- Type of shelf placement: Laying



Issue date 2019-06-02

Version: 4.0.3

12 NC: 8670 001 22907
EAN: 48 95185 60632 3

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* **This feature requires additional subscription of Caller ID service.
Please check with your local network operator for details.