



Philips  
Soundbar speaker

### Virtual surround

External subwoofer  
Opt, Coax, Aux in, Audio in  
Bluetooth®



HTL2160



## Powerful sound for any TV

with subwoofer

Fill your home with superb Bluetooth wireless music. In addition to TV & home cinema, this Philips soundbar speaker also boosts your gaming console and MP3 player. So start enjoying top-quality Virtual Surround Sound movies and music now.

#### Connect and enjoy all your entertainment

- Audio in to enjoy music from iPod/iPhone/MP3 player
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Wireless music streaming via Bluetooth
- Enjoy MP3/WMA music directly from your portable USB devices

#### Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Ultra-compact 80cm-wide soundbar suits any home décor

#### Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience
- External subwoofer adds thrill to the action
- Twin tweeters for optimum clarity performance


# PHILIPS

## Soundbar speaker

Virtual surround External subwoofer, Opt, Coax, Aux in, Audio in, Bluetooth®


# Highlights

### Bluetooth

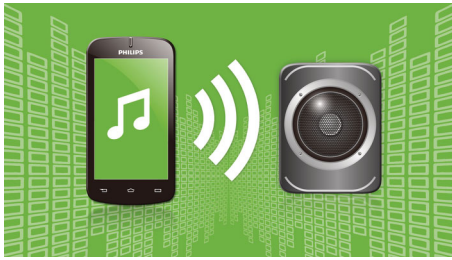

Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

### Virtual Surround Sound

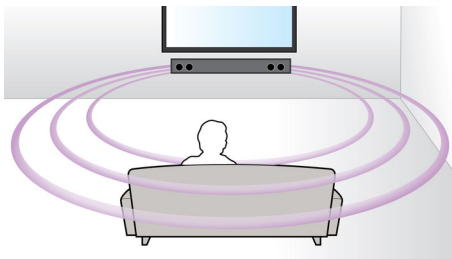


Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

### External subwoofer



External subwoofer adds thrill to the action

### Dolby Digital

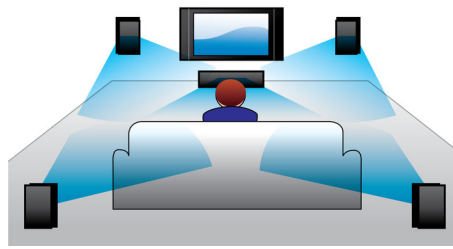

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

### USB



Enjoy MP3/WMA music directly from your portable USB devices

### Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

### Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

HTL2160/61

# Specifications

### Sound

- Sound Enhancement: Virtual Surround Sound, Treble and Bass Control
- Sound System: Dolby Digital
- Speaker output power: 15 W x 2
- Subwoofer output power: 30 W
- Total Power RMS @ 30% THD: 60 W

### Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 1 woofer, 1 Mylar tweeter
- Speaker Impedance: 4 ohm
- Tweeter Impedance: 8 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer impedance: 8 ohm

### Connectivity

- Integrated Connections: Bluetooth
- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Rear Connections: Digital coaxial in, Digital optical in, Subwoofer out, AUX in
- Front / Side connections: Audio in, USB

### Design

- Wall mountable

### Power

- Power supply: 220-240V, 50/60 Hz
- Standby power consumption: < 0.5 W
- Power consumption: 30 W

### Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink

### Dimensions

- Main Unit (W x H x D): 800 x 52.4 x 75.6 mm
- Main Unit Weight: 1.2 kg
- Subwoofer Weight: 2.6 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 400 x 292 x 349 mm
- Subwoofer (W x H x D): 165 x 240 x 295 mm
- Weight incl. Packaging: 5.4 kg

### Accessories

- Included accessories: 1 x CR2025 Battery, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

### Outer Carton

- EAN: 87 12581 69433 3
- Gross weight: 5.534 kg
- Outer carton (L x W x H): 40 x 29.2 x 34.9 cm
- Nett weight: 3.9639 kg
- Number of consumer packagings: 1
- Tare weight: 1.5701 kg

### Packaging dimensions

- Packaging dimensions (W x H x D): 40 x 34.9 x 29.2 cm
- EAN: 87 12581 69433 3
- Gross weight: 5.534 kg
- Nett weight: 3.9639 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 1.5701 kg
- Type of shelf placement: Laying

### Product dimensions

- Product dimensions (W x H x D): 35 x 5.24 x 7.56 cm
- Weight: 0.5905 kg



Issue date 2020-07-08

Version: 2.0.3

12 NC: 8670 001 05472  
EAN: 87 12581 69433 3

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)