




Philips
PC webcam



SPZ3000

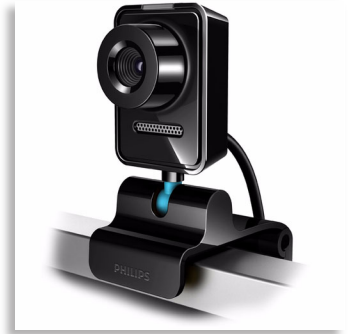

Keep in touch

With enhanced 1.3 megapixel video and photo, face tracking, 3 x digital zoom for close-ups and snapshot button for instant photos, all you need to do is just plug it in and then chat! The universal clamp fits desktop, notebook and screen.

Raising the bar for Internet communications

- Enhanced 1.3 megapixels for greater image clarity
- Never miss a smile with face tracking
- 3 x digital zoom for close-ups
- Smooth video with 30 frames per second

Really easy

- Simple plug-and-chat for quick connection
- Snapshot button for instant photos
- Rotating joint lets you aim wherever you want
- Universal webcam clamp for desktop, notebook or screen
- Camera head folds to front for easy storage

Clear sound from all around

- Noise reduction enhances clarity of speech

PHILIPS
sense and simplicity

Specifications

Mechanics

- Sensor: VGA CMOS
- Lens maximum aperture: F: 2.6
- Lens view angle: 50 degrees
- Lens construction: 3 elements
- White balance: 2600 - 7600 k
- Minimum illuminance: < 5 lux
- Data format: YUY2, MJPEG
- Colour depth: 24 bit

Resolution

- Video resolution: VGA
- Photo resolution: VGA
- Interpolated video resolution: 1.3 MP
- Interpolated photo resolution: 1.3 MP
- Maximum frame rate: 30 fps

Audio

- Microphone: Built-in microphone
- Noise reduction

Additional features

- Digital zoom: 3 x
- Face tracking
- Snapshot button
- On/off activity LED

Software

- Dedicated software: Philips CamSuite
- Add video to: Skype, Windows Live Messenger, Yahoo! Messenger, AOL Instant Messenger

System Requirements

- Operating System: Microsoft Windows XP (SP2), Microsoft Windows 7, Microsoft Windows Vista 32-bit, Microsoft Windows Vista 64-bit



- Processor: 1.6 GHz or equivalent
- RAM memory: 512 MB RAM (for XP) / 1 GB RAM (for Vista and Windows 7)
- Hard disk space: 200 MB
- USB: Free USB port

Connectivity

- Cable length: 1.5 metre
- Interfacing: USB 1.1, USB 2.0
- USB video class: UVC
- Power: Supplied via USB cable

Product dimensions

- Product dimensions (W x H x D): 3.7 x 5 x 1.7 cm
- Product dimensions with stand (W x H x D): 3.7 x 7.1 x 6.2 cm
- Weight (with stand): 0.0905 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 9.5 x 19.5 x 7.5 cm
- Net weight: 0.0905 kg
- Gross weight: 0.29 kg
- Tare weight: 0.1995 kg
- EAN: 87 12581 52644 3
- Number of products included: 1
- Packaging type: Window box

Outer Carton

- Outer carton (L x W x H): 24.5 x 20.5 x 20.5 cm
- Net weight: 0.543 kg
- Gross weight: 1.543 kg
- Tare weight: 1 kg
- EAN: 87 12581 52645 0
- Number of consumer packages: 6

Highlights

Enhanced 1.3 megapixels

Your webcam gives you 1.3 megapixels (software enhanced) for both video and photo resolution. So, you can use it to take high-quality photos that still look great when printed as larger-sized images.

Face tracking

The state-of-the-art camera software automatically detects your face and moves the lens to follow you as you move. You can stay in the centre of the screen even if you move during a video chat. It gives you the freedom to express yourself and converse naturally.

Simple plug-and-chat

Just plug the webcam into a USB port on your computer. It is recognised by the computer and works immediately. You can start video chatting as simple as that.

3 x digital zoom for close-ups

Zoom in and out to get the perfect framing of any image. You can control the zoom entirely via the on-screen interface while you're looking at the image, so you can adjust it perfectly.

Smooth 30 frames/sec. video

Sit back and enjoy superior viewing with 30 frames per second video. This gives you smoother video images and a better all-round video chatting experience.

Easy storage



Camera head folds to front for easy storage

Snapshot button

Snapshot button for instant photos

Free rotating joint

Enjoy easy webcams freedom with this handy pivot joint design. Just turn the camera 360° in any direction to film anywhere you want without moving the webcam at all.

Universal webcam clamp

The universal clamp makes it easy to sit or mount the webcam securely on top of any desktop computer, notebook or LCD screen. The design is especially secure and the webcam won't move or fall when you're in the middle of a conversation.



Issue date 2013-01-10

Version: 2.1.6

12 NC: 8670 000 60174
EAN: 87 12581 52644 3

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com