

Philips
DVD player



DVP3826

Enjoy it all - from DVD or USB

With 5.1 audio and stereo output

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

Play all your movies and music

- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays MP3, WMA and JPEG digital camera photos

Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives

Bring audio and video to life

- 5.1 channel audio output for surround sound
- Progressive Scan component video for optimized image quality
- 12-bit/108MHz video processing for sharp and natural images
- Screen Fit for optimal viewing every time


Easy to use

- One-touch MP3 creation directly from CDs onto USB sticks

PHILIPS


Highlights

USB Media Link

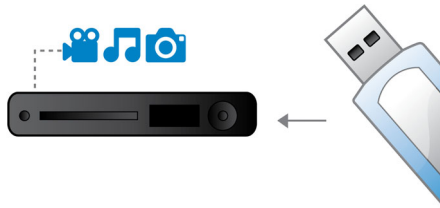


The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

5.1 channel audio output

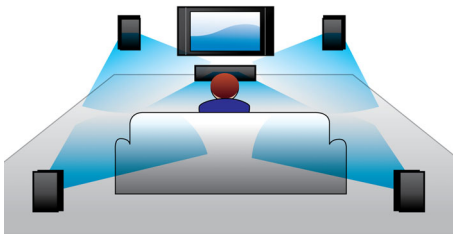

5.1 channel audio output for surround sound

Plays it all

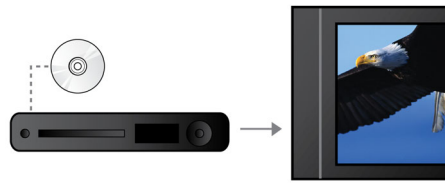


Play virtually any disc you want - whether they be CDs, (S)VCDs, DVDs, DVD+R, DVD-R, DVD+RW or DVD-RW. Experience unbeatable flexibility and the convenience of playing all your discs on one device.

One-touch MP3 creation




Convert the contents of your favorite CDs to MP3 files on your Philips product, and store it directly on a thumbdrive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your living room, without a PC, and even while the CD is playing.

Progressive Scan

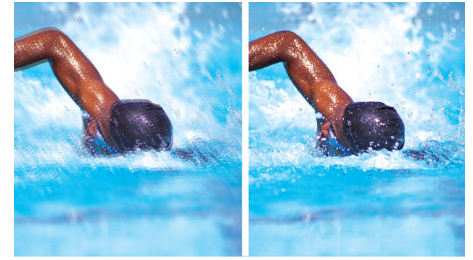

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

Screen Fit

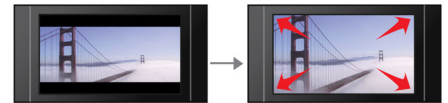

Whatever you're watching, and on any TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full-screen

Specifications

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: > 90
- Distortion and Noise (1kHz): > 65 dB
- Crosstalk (1kHz): > 70 dB
- Dynamic Range (1kHz): > 80 dB
- Sound System: Dolby Digital

Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD+R/+RW, DVD-R/-RW, DVD-Video
- Compression formats: MPEG1, MPEG2
- Video disc playback system: PAL, NTSC

Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- Compression format: MP3, Dolby Digital, PCM, WMA
- MP3 bit rates: 32 - 320 kbps

Still Picture Playback

- Playback Media: DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD

- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate, Zoom, Slideshow, Slideshow with MP3 playback

Multimedia Applications

- Multimedia connections: USB memory class device
- Playback Formats: JPEG Still pictures, MP3

Connectivity

- Rear Connections: Composite video (CVBS) output, Component Video out Progressive, Analog audio Multi-channel out
- Front / Side connections: USB

Convenience

- Child Protection: Child Lock, Parental Control
- On-Screen Display languages: English, Hindi

Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: < 10 W
- Standby power consumption: < 1W

Accessories

- Included accessories: Audio/Video cable, 2 x AAA Batteries, Remote Control, World Wide Warranty leaflet, User Manual

Dimensions

- Set dimensions (W x H x D): 360 x 37 x 210 mm
- Packaging dimensions (W x H x D): 415 x 82 x 282 mm



Issue date 2014-03-17

Version: 1.2.1

12 NC: 8670 000 78487
EAN: 87 12581 60874 3

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com