




Philips
docking speaker with
Bluetooth®

for iPod/iPhone

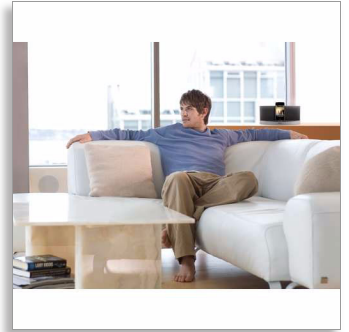

AD620

Music set free wirelessly via Bluetooth

Groove to smooth tunes from your iPod and iPhone. This Philips Docking speaker offers powerful bass with Bass Reflex Speaker System. Stream music wirelessly via Bluetooth, or dock your iPod or iPhone.

Crystal clear sound

- Bass Reflex Speaker System delivers a powerful, deeper bass
- Shielding technology to block mobile phone interference
- 20 W RMS total output power

Enjoy your favourite music

- Play and charge your iPod/iPhone simultaneously
- MP3 Link for portable music playback

Advanced versatility

- Bluetooth wireless music streaming from iPod/iPhone
- Dock any iPod/iPhone, even in its case

PHILIPS

docking speaker with Bluetooth®
for iPod/iPhone

Specifications

iPod compatibility

- Compatible with: iPod classic, iPod mini, iPod nano 1st generation, iPod nano 2nd generation, iPod nano 3rd generation, iPod nano 4th generation, iPod nano 5th generation, iPod nano 6th generation, iPod touch, iPod touch 2nd generation, iPod touch 3rd generation, iPod touch 4th generation

iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4S

Sound

- Output power (RMS): 20 W
- Sound System: Stereo
- Volume Control: Volume Control up/down

Loudspeakers

- Speaker Drivers: 2 x 2.25" full range woofers

Connectivity

- Bluetooth version: 2.1
- Bluetooth profiles: A2DP
- Bluetooth range: line of sight, 10 m or 30 ft
- MP3 Link: 3.5 mm stereo line in

Accessories

- AC/DC adapter

Dimensions

- Product dimensions (WxDxH): 275 x 121 x 117 mm
- Packaging dimensions (WxDxH): 361 x 133 x 148 mm
- Product weight: 1.2 kg
- Weight incl. Packaging: 1.7 kg

Power

- Power supply: 100-240 VAC, 50/60 Hz



AD620/05

Highlights

Bluetooth music streaming

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to other Bluetooth devices, so you can play your favourite music from your iPod or iPhone on your Philips audio system - conveniently, anytime you want.

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimise the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by causing the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a completely new dimension of deep bass.

MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.

Dock iPod/iPhone in its case



Smartly designed spring-loaded docking port effortlessly accommodates any iPod or iPhone, without special adapters. What's more, it works even when most protective cases are on – just dock your iPod or iPhone as it is. Now you can truly have fuss-free enjoyment of your music.



Issue date 2017-04-07

Version: 2.0.6

12 NC: 8670 000 89496
EAN: 87 12581 64256 3

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com