




Philips
wireless portable speaker

Bluetooth® and NFC
with MULTIPAIR
Rechargeable battery
Black

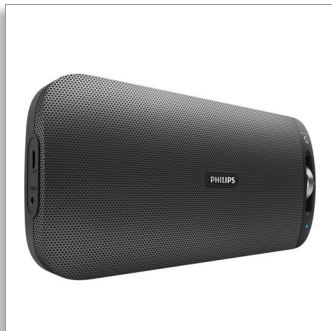

BT3600B

Small size, great sound

Great sound in a body so slim it can fit in anywhere. Built-in NFC makes device pairing just a tap away, and Bluetooth multipair lets you swap music from two different devices instantly.

Impressive sound

- Advanced audio performance with a slim design
- Impressive with 10 W RMS
- Anti-clipping function for loud, distortion-free music

Simplicity in use

- Wireless music streaming via Bluetooth
- Swap music instantly between 2 devices with MULTIPAIR
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Built-in microphone for hands-free phone calls
- Audio-in for easy connection to almost any electronic device

Designed for grab and go

- Built-in rechargeable battery for music playback anywhere


PHILIPS

Wireless portable speaker
Bluetooth® and NFC with MULTIPAIR, Rechargeable battery, Black

BT3600B/00

Highlights

Wireless music streaming

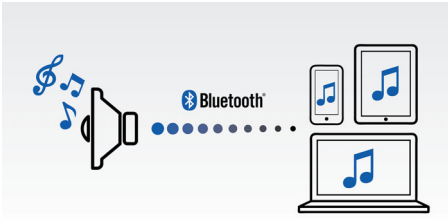


Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

Swap music between 2 devices

Pair with 2 smart devices simultaneously so you can stream music from whichever device you want, without the hassle of un-pairing and re-pairing. To play a song on a different device, pause the song on the original device first and then play the new song on a different device to take over. It's perfect for sharing music with friends, at parties, or just playing different songs stored on different devices. Let friends and family pair at the same time, so you can swap between each other's music easily.

Anti-clipping function

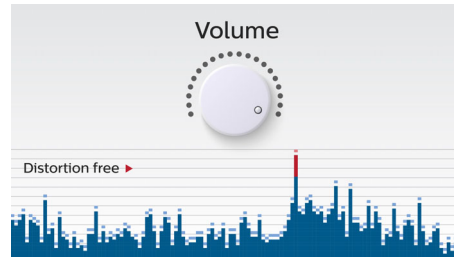

Anti-Clipping lets you play music louder and keeps the quality high, even when the battery is low. It accepts input signals from 300 mV to 1000 mV and keeps your speakers safe from damage by distortion. This speaker handles anti-clipping through a dedicated audio limiter IC. This monitors the musical signal as it goes through the amplifier and keeps peaks within the amp's range, preventing the audio distortion caused by clipping without affecting loudness. A speaker's ability to reproduce musical peaks decreases along with battery power, but anti-clipping reduces peaks caused by low battery.

Built-in rechargeable battery



Play music out loud - anytime, anywhere. The built-in rechargeable battery lets you enjoy your personal music without the fuss of tangled power cords and the inconvenient

search for an electrical socket. Enjoy great music with the freedom of portability now.

Built-in microphone


With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

Audio-in



Audio-in for easy connection to almost any electronic device

NFC technology

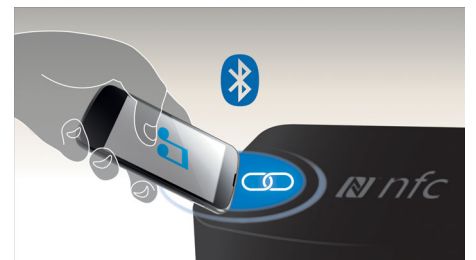

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.

Specifications

Compatibility

- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus
- iPod touch: 3rd generation or later
- Android tablets and smartphones: with Android 2.1 and Bluetooth 2.1 or above
- other music devices: with Bluetooth 2.1 or above

Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth range: Line of sight, 10 m or 30 ft
- NFC: Tap-to-pair Bluetooth; works with Android 4.0 or above, and Windows phone 8 or above
- Audio in (3.5 mm)

Convenience

- Built-in microphone: for speaker conference

Sound

- Output power (RMS): 10 W
- Sound System: Stereo

Loudspeakers

- Speaker drivers: 2 x 1.5"

Power

- Battery type: lithium polymer (built-in)
- Operating time on battery: 10 hr

Accessories

- Included accessories: USB cable for PC charging, World Wide Warranty leaflet, Quick install guide

Dimensions

- Product dimensions (WxDxH): 207 x 34 x 97 mm
- Packaging dimensions (WxDxH): 230 x 46 x 175 mm
- Product weight: 0.43 kg
- Weight incl. Packaging: 0.59 kg



Issue date 2016-03-06

Version: 1.0.8

12 NC: 8670 001 22574
EAN: 04 89518 56059 06

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com