

PHILIPS



Faro design cordless phone

30 min answering machine

1.8" display/white backlight

Hands-free speakerphone



M7751B

A new form of conversation

The boldly sculptured Philips Faro elevates cordless phone design to a modern art form. Refined lines unify the phone with its secondary base display. Enjoy smart functions like instant access to speakerphone and easy alarm snooze.

Eco-conscious product

- Zero power emission when ECO+ mode is activated

Ultimate calling experience

- HQ-Sound: high quality acoustic engineering for superb sound
- High-contrast 4.6 cm (1.8") white-on-black graphical display
- Easy-access snooze button for extra sleep time
- Black list, anonymous call, silence mode, call barring
- Hearing aid compatible - reduces unwanted noise
- Instant-access speakerphone for easy hands-free chats
- Up to 30 minutes of messages on your answering machine
- Visual ringer flashes to alert you of incoming calls

Exquisite design with high quality execution

- Finely crafted, bold and sculptural
- Calibrated, seamlessly integrated keys for precise dialling
- Charge handset either way around

Highlights

4.6 cm (1.8") graphical display



A high-contrast, white-on-black reverse LCD display ensures easy reading and also blends perfectly with the Philips Faro overall sleek design language.

Bold and sculptural

Finely crafted, bold and sculptural

Calibrated keypad



The calibrated keypad allows you to clearly feel every keystroke whenever you are dialling a number or entering a contact from your phonebook. Detailed study of keypad materials and structures, as well as extensive user tests, have resulted in the right balance between the key pressing force and the key response to ensure precise dialling

Easy alarm snooze

At the touch of a dedicated button on the base station, you can easily respond to the alarm and choose to snooze for a few more minutes — for up to a maximum of 3 times. Just set the easy

alarm feature and ensure that the handset is docked in the base station. An icon on the base display will indicate that the alarm has been set.

ECO+ mode



Philips phones are energy efficient and designed to be respectful to the environment. When ECO mode is activated the emitted radiation is reduced by up to 60%, and up to 95% when the phone is charging. With ECO+ mode activation the radiation drops to zero.

Extended privacy settings

Black list restricts receiving calls from specific numbers or starting with certain digits, keeping unwanted calls away from you away. You can block 4 sets of numbers. Each set of numbers can consist of between 1 to 24 digits. When there is an incoming call that starts with one of these numbers or being one of 4 exact caller numbers, the phone will not ring. With silent mode you can disable ringtones at specific times to enjoy peace and silence. Thanks to call barring, you can avoid expensive phone bill surprises by blocking calls to specific numbers starting with certain digits.

Hassle-free charging

For reliability and convenience the handset can be charged in both directions of the docking station.

Hearing aid compatible

This feature enables the phone to couple with the hearing aid to amplify conversation while reducing ambient noise and the buzzing, humming or whining noise that can otherwise occur.

Instant-access speakerphone



The phone's built-in loudspeaker amplifies the caller's voice so that you can enjoy conversations hands free. This allows you to multitask while taking important calls. Just hit the dedicated speakerphone button on the base station and start your hands-free conversation with the handset docked. The smart speaker design on top of the handset guarantees superb sound delivery in speakerphone mode — always.

Secondary display on the base



The Philips Faro high contrast white-on-black display seamlessly and stylishly integrates with its base. The display shows the caller ID when there is an incoming call and the time when in idle mode. You can choose to turn off the base display so as not to be disturbed by any light at any time.

Highlights


Up to 30 min. recording

With 30 minutes' recording time on your answering machine, you'll never miss an important message.

Visual ringer

Become aware of any incoming call with the smart visual ringer feature. The display and keypad backlight flash so you know that a call is coming in.

HQ-Sound

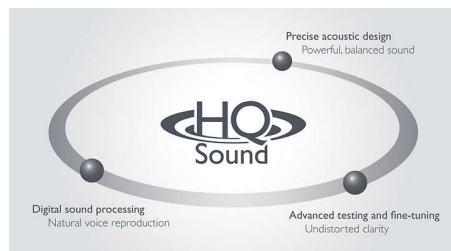

HQ-Sound: high quality acoustic engineering for superb sound reproduction. We build upon decades of experience and breakthrough

innovations in developing Hi-Fi audio products and high-end headphones to deliver excellent voice clarity on our DECT phones. When it comes to improving sound quality, our acoustics engineers and architects have thought of everything — high quality components, digital signal processing, precise acoustic design, advanced testing and fine-tuning. The result is sound that is crisp, clear and authentic. Sound so good and natural, it is almost like being there in person.

Specifications

Sound

Hearing Aid Compatible
Sound Profile: MySound
Volume control on handset
Ringtones on handset: 10 polyphonic
HQ-Sound

Convenience

Alarms: Alarm Clock, Repeat alarm (snooze)
Menu structure in the handset: List Menu
Number of keys: 23
Speakerphone — talk hands-free
Personalisation: Silent mode
Call Management: Caller ID*, Call Waiting*,
Dialled calls, Microphone mute, Missed Calls,
Received Calls
Call barring: Restrict the phone from making
specific outgoing calls
Backlit keypad: White
Signal strength indicator: 3 bar indicator
Battery level indicator: 3 bar battery icon
Intercom — multiple handsets
Date/Time display
Multi-handset capability: Up to 4
Programmable hot keys: Key 1 and 2
Keypad lock
Key tone on/off
Auto hang up
Illuminated keypad
Enlarge dialling digit
Base station keys: Paging key, alarm snooze
button, speaker
Up to 16 hrs talk time

Up to 250 hrs standby time
Charge time: 8 hours
Line cord length: 1.8 m
Power cord length: 1.8 m
Range: Open field < 300 m (984 ft); indoor <
50 m (164 ft)
Block callers/Blacklist*: Restrict the phone from
ringing on specific incoming numbers
Premium MMI: Standard
Event notifications: For events status
Visual ringer

Power

Battery Capacity: 550 mAh
Mains power: AC 100-240 V ~ 50/60 Hz
Battery type: 2 x AAA, NiMH rechargeable
Power Consumption: < 1.4 W

Packaging dimensions

Height: 22.5 cm
Packaging type: Carton
Type of shelf placement: Laying
Width: 12.1 cm
Depth: 10.1 cm
Number of products included: 1
EAN: 48 95229 10704 5
Gross weight: 0.518 kg
Nett weight: 0.375 kg
Tare weight: 0.143 kg

Picture/Display

Backlight colour: White
Backlight: Yes
Base display size: 7.0 cm/2.77"
Base display type: Reversed dot matrix
Handset display size: 4.6 cm/1.8"
Handset display type: Reversed dot matrix

Answering Machine

Recording time capacity: Up to 30 minutes
Pre-recorded OGM
Answering machine control: From handset

Memory Capacity

Call log entries: 50 entries
Phonebook: 100 names and numbers
Redial List Capacity: 20 entries
Phonebook store in the base
Multiple phonebook entries: 3 field

Security

Transmission encryption

SAR Value

Philips handsets: < 0.1 W/kg

Eco Design

Eco Mode: Automatic and manual
Eco+

Network Features

Compatible: GAP

