




Philips Fidelio  
Wireless sound system

with AirPlay  
Dock for iPod/iPhone/iPad

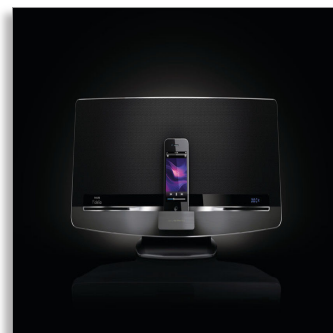

DCW8010

## Enjoy music wirelessly with AirPlay

### Obsessed with sound

Music goes wireless with AirPlay. This sleek Philips Fidelio DCW8010/10 wireless sound system streams music via Airplay from the iPhone/iPad/iPod Touch - offering powerful sound and the deep bass of wOOx™. Also enjoy CDs, MP3s and FM radio.

#### Enjoy your music from multiple sources

- Play MP3/WMA-CD, CD and CD-RW
- Play and charge your iPod/iPhone/iPad
- USB Direct for MP3/WMA music playback
- Digital tuning with preset stations for extra convenience
- Stream music with AirPlay wireless technology
- One step AirPlay setup

#### Enrich your sound experience

- wOOx™ loudspeaker Technology for deep and powerful bass
- Fullsound™ to bring your MP3 music to life
- 40W RMS total output power

#### Advanced versatility

- SoundStudio app for complete control of audio settings

**PHILIPS**  
Fidelio

# Highlights

## Play & charge iPod/iPhone/iPad



Enjoy your favorite MP3 music while charging your iPod/iPhone/iPad! The dock lets you connect your portable device directly to the Philips system so you can listen to your favorite music in superb sound. It also charges your iPod/iPhone/iPad while it plays so you can enjoy your music and not have to worry about your portable player battery running out. The system automatically charges your portable device while it is docked.

## USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

## wOOx™ Technology



wOOx technology is a revolutionary loudspeaker concept that allows you to hear and feel profoundly deep bass that is richer than any other audio system. Special speaker drivers work in harmony with the wOOx bass radiator, and precise tuning between the main driver and the tweeter ensures smooth transitions from low-mid to high frequencies. Dual suspension and a totally symmetrical sandwich construction deliver low and precise base without noticeable distortion. wOOx produces exceptionally deep and dynamic bass by using the speaker box full volume to truly magnify the impact of the music.

## AirPlay Wireless Technology



AirPlay lets you stream your entire iTunes music collection to your Philips Fidelio docking

stations. It plays wirelessly from the iTunes program on your computer, iPhone, iPad or iPod Touch - to any AirPlay-enabled speaker in your home. All you have to do is ensure your speakers are connected to your Wi-Fi network. AirPlay also lets you play simultaneously on every speaker in every room. Get your favorite tunes to follow you whichever room you go.

## One step AirPlay setup



With the incredibly simple one step AirPlay set up, your wireless speaker will be connected easily with your home network. Simply connect the speaker with your iPod touch, iPhone, iPad with 30-pin cable or docking connector, press the WiFi set up button and with just one click to allow Wi-Fi set up sharing on your Apple device, you're ready to rock!



# Specifications

## Audio Playback

- Compression format: MP3, WMA
- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD, USB flash drive
- Loader Type: Slot
- USB Direct Modes: Play/Pause, Previous/Next, Stop
- Disc Playback Modes: Fast Forward/Backward, Repeat Play
- Wireless audio playback: via AirPlay or DLNA (DMR)

## Sound

- Output power (RMS): 2x20W
- Sound enhancement: digital sound control, Dynamic Bass Boost, wOOx™ Technology
- Sound Enhancement: FullSound

## Tuner/Reception/Transmission

- Antenna: FM Antenna
- RDS: program type, radio text, RDS clock set, station name
- Station presets: 20
- Tuner bands: FM mono, FM stereo
- Tuner enhancement: auto digital tuning, auto scan

## Connectivity

- Headphone: 3.5 mm
- Wireless connection: Wireless LAN(802.11g), Wireless LAN(802.11b)
- MP3 Link: 3.5mm stereo line in
- USB: USB host

## Convenience

- Clock: On main display, sleep timer
- Alarms: CD Alarm, USB alarm
- Remote control: 1-Way
- Charging device: iPod, iPhone, iPad
- Display Type: VFD display

## Accessories

- Included accessories: FM antenna, Quick start

- guide
- Batteries: 2x AAA
- Remote control: 1-way Remote
- Warranty Card: Warranty Card
- AC/DC Adaptor: AC/DC Adapter
- User Manual: in CD

## Dimensions

- Product dimensions (WxDxH): 500 x 163 x 232 mm
- Packaging dimensions (WxDxH): 540 x 188 x 291 mm
- Gross weight: 5.1 kg
- Net weight: 4.4 kg

## Power

- Power supply: 50Hz, 100-240V

## iPad compatibility

- Compatible with: iPad, iPad 2

## iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4S

## iPod compatibility

- Compatible with: iPod touch, iPod touch 3rd generation, iPod touch 4th generation, iPod touch 2nd generation

## iPod/iPhone/iPad App

- App name: DockStudio, Free download from App store
- 7000+ Internet radio stations
- 5-day weather forecast
- Playback: album/track navigation, playback controls
- Sound settings: 5 band equalizer, Bass, DBB, DSC-Flat,Pop,Rock,Jazz,Classic, FullSound™
- Clock: analog display, digital display
- Alarm: multiple alarms, sleep timer, wake up to music, wake up to nature sounds, wake up to photo



Issue date 2022-06-03

Version: 6.0.8

12 NC: 8670 000 89738  
EAN: 87 12581 64310 2

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)