




Philips  
MP3 portable speaker

Universal 3.5mm

Pink

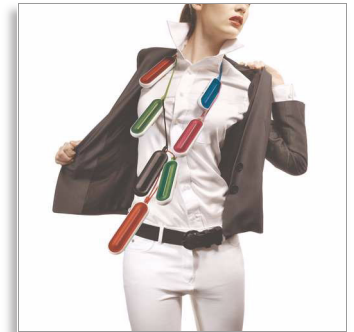

SBA1600PNK

## Stereo sound on the go

from a fun, pocket-sized speaker

Move with your music! Enjoy stereo sound wherever you go on a travel speaker with exceptional battery life. Secure the line-in cable to use as a lanyard for easy portability. Inside, a digital amplifier eliminates mobile-phone interference.

### Enjoy your music in stereo

- Class 'D' digital amplifier for quality sound performance
- Lightweight, portable design for music enjoyment anytime
- Mobile phone shielding technology for static-free sound
- Universal: works via your device's 3.5mm headphone jack

### Take your music with you

- 40 hours of continuous play for worry-free enjoyment
- Battery powered for portability
- Line-in cable becomes a lanyard for easy portability



**PHILIPS**

sense and simplicity

# Specifications

## Design and finishing

- Color(s): pink

## Sound

- Frequency response: 350 - 16,000 Hz
- Impedance: 4
- RMS Power rating: 2 W

## Accessories

- Batteries: not included

## Power

- Battery type: AAA
- Operating time on battery: 40 hr
- Number of batteries: 3

## Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Packaging dimensions (W x H x D): 9.5 x 15 x 3.04 cm
- Packaging dimensions (W x H x D): 3.7 x 5.9 x 1.2 inch
- Gross weight: 0.11838 kg
- Nett weight: 0.05912 kg
- Tare weight: 0.05926 kg
- Gross weight: 0.261 lb

- Nett weight: 0.130 lb
- Tare weight: 0.131 lb
- UPC: 6 09585 19319 2

## Outer Carton

- Number of consumer packagings: 18
- Outer carton (L x W x H): 33 x 21 x 20.5 cm
- Outer carton (L x W x H): 13.0 x 8.3 x 8.1 inch
- Gross weight: 2.7 kg
- Nett weight: 1.06416 kg
- Tare weight: 1.63584 kg
- Gross weight: 5.952 lb
- Nett weight: 2.346 lb
- Tare weight: 3.606 lb
- GTIN: 2 06 09585 19319 6

## Inner Carton

- Number of consumer packagings: 3
- Inner carton (L x W x H): 10 x 10 x 19 cm
- Inner carton (L x W x H): 3.9 x 3.9 x 7.5 inch
- Gross weight: 0.445 kg
- Nett weight: 0.17736 kg
- Tare weight: 0.26764 kg
- Gross weight: 0.981 lb
- Nett weight: 0.391 lb
- Tare weight: 0.590 lb
- GTIN: 1 06 09585 19319 9

# Highlights

## 40 hours of continuous play

Powered by batteries, this speaker offers up to 40 hours of continuous play for worry-free enjoyment when you're listening to your music on the go.

## Battery powered

Powered by batteries, it's easy to take with you for enjoyment on the go - anywhere and everywhere.

## Class 'D' Amplifier

Class 'D' Digital Amplifier takes an analog signal, converts it into a digital signal and then amplifies the signal digitally. The signal then enters a demodulation filter to give the final output. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. In addition, Class 'D' Digital Amplifier has greater than 90% efficiency compared to traditional AB amplifiers. This high efficiency translates into a powerful amplifier with a small footprint.

## Lightweight, portable design



The durable, lightweight material and design mean you can carry the speakers with you wherever you go.

## Line-in doubles as lanyard

These speakers are ready to go! When it's time to take your music on the go, reconnect the line-in cable and secure it in place to use as a convenient lanyard.

## Mobile phone shielding

Mobile phone shielding technology is an advanced circuitry design that cuts out mobile phone interference to ensure static free sound

## Universal 3.5mm headphone jack

Plug and play with any of your mobile devices that have a 3.5mm headphone jack – iPod, iPhone, GoGear, MP3 players, laptops, netbooks, music phones and more.



Issue date 2013-01-22

Version: 1.0.3

12 NC: 8670 000 65458  
UPC: 6 09585 19319 2

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)