



Philips Fidelio SoundBar
Home theater with
Ambisound technology

3D Blu-ray

Aluminium Wall mountable

SoundBar



HTB9150

The slimmest SoundBar with Ambisound yet

Obsessed with sound

Delivering truly immersive surround sound without the constraint of your position, room size or shape, this Philips Fidelio Ambisound home theater system has six precisely angled drivers to create a more embracing surround sound effect.

Ultimate listening experience

- Ambisound technology for surround sound from fewer speakers
- 600W RMS power delivers great sound for movies and music
- Voice Clarity enhancer for true-to-life voices

Designed to enhance your living space

- Super slim design of 87mm depth ideal for wall mounting
- SoundBar design best fitting a 102cm (40") flat TV or larger
- Sophisticated design with high quality aluminum finishing

Connect and enjoy all your entertainment


- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Smart TV Plus to enjoy online services & multimedia on TV
- SimplyShare to connect & stream all entertainment wirelessly
- Internet radio to enjoy the world of online radio channels
- Built-in Wi-Fi to enjoy your connected media wirelessly
- Instant 2D to 3D conversion for a lifelike movie experience

PHILIPS
Fidelio

sense **and** simplicity

Highlights

Ambisound technology

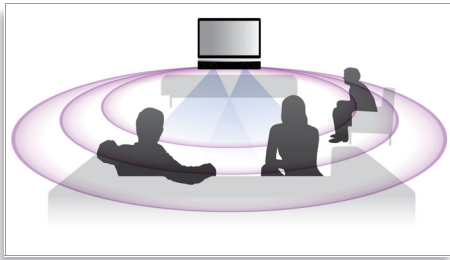

Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.

Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

Smart TV Plus



Philips home theater & Blu-ray player with Smart TV Plus offer you an array of enhanced features, including Net TV, SimplyShare & MyRemote. Net TV brings a wide range of online information & entertainment to your TV for services like video-on-demand. With SimplyShare, you can access photos, music & movies stored on your PC from the comfort of your couch. You can also use your smartphone/tablet to control your home theater via Philips MyRemote app.

SimplyShare



Philips SimplyShare lets you share your music, movies & photos from tablet, smartphone & PCs to your home theater & Blu-ray player. You can stream all entertainment directly from your DLNA-enabled devices or use remote control to access & stream media files from your PC. For the best wireless experience, install the SimplyShare app on your tablet/smartphone. You are now ready to enjoy all your entertainment effortlessly.

Built-in Wi-Fi

With built-in Wi-Fi, you can access your media content wireless. Say goodbye to squinting at

the computer screen, and lean back and enjoy your media files on your TV - in the comfort of your living room.

Internet radio



Internet radio is an audio broadcasting service that is transmitted via the Internet. Some internet stations are affiliated with a traditional (terrestrial) radio station or network while others are internet-only radio stations, which are independent and devote their broadcasts only to the World Wide Web. With Internet Radio, you can enjoy access to online radio stations from anywhere in the world and listen to a wide variety of genres, news, sports and entertainment updates, or connect to favourite or niche stations.

Instant 2D to 3D conversion



Enjoy 3D movie excitement in your home using your existing 2D movie collection. Instant 3D conversion uses the latest digital technology to analyze 2D video content to distinguish between foreground and background objects. This detail generates a depth map that converts normal 2D video formats, into exciting 3D. Along with your compatible 3D TV, you are now ready to experience full HD 3D.

Specifications

Sound

- Philips Branded feature: Ambisound
- Equalizer settings: MySound, Gaming, Movie, Music, News, Original
- Sound Enhancement: Dolby Digital Prologic II, Night Mode, Treble and Bass Control, Voice Clarity Enhancer
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio, DTS-HD Master Audio
- Center speaker output power: 2 x 60 W
- Surround speaker output power: 4 x 90 W
- Subwoofer output power: 120 W
- Total Power RMS @ 30% THD: 600 W

Loudspeakers

- Loudspeaker types: Integrated with main unit, 2 Integrated center speakers, 4 Integrated surround speakers
- Drivers per Center speaker: 1 x 2.5" Full range woofer
- Drivers per Surround speaker: 2 x 2.5" Full range woofers
- Surround speaker freq range: 150 - 20k Hz
- Surround speaker impedance: 6 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm
- Center speaker impedance: 8 ohm

Connectivity

- Integrated Connections: Wi-Fi
- Side connections: Music iLink, USB
- iPod/iPhone: Ready (Dock sold separately), via 3.5mm Music iLink
- Rear Connections: AUX in, Composite video (CVBS) output, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, SD/SDHC Card slot
- Smart TV Plus: MyRemote App, Net TV, SimplyShare
- MyRemote App: MySound, SimplyShare, Virtual Remote

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio

- input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color
- Skype ready: Yes, Camera sold separately

Tuner/Reception/Transmission

- Internet Radio
- Tuner Bands: FM
- Number of Preset Channels: 40

Optical Playback Media

- Playable Discs: 3D Blu-ray, AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

File Format

- Audio: aac, mka, mp3, ra, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, divx, flv, mkv, mp4, mpeg, mpg, wmv

Audio Playback

- Compression format: AAC, MP3, WAV, WMA, FLAC, Ogg Vorbis
- MP3 bit rates: 32 - 320kbps

Video Playback

- Compression formats: DivX Plus HD, MPEG1, MPEG2, MPEG4, RMVB

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Picture/Display

- Philips Branded feature: CinemaPerfect HD
- Picture enhancement: Instant 2D to 3D, HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Design

- Wall mountable

Power

- Power consumption: 85 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.25 W

Sustainability


- Packaging: Electronic User Manual

Dimensions

- Main Unit (W x H x D): 927 x 150 x 87 mm
- Main Unit Weight: 5 kg
- Subwoofer (W x H x D): 196 x 396.5 x 300 mm
- Subwoofer cable length: 4 m
- Subwoofer Weight: 4.79 kg
- Packaging (W x H x D): tbc mm
- Weight incl. Packaging: 15.5 kg

Accessories

- Compatible accessories: Designated Skype Camera*, DCK3061 Dock for iPod/iPhone, STS1100 Table top stand, STS1300 Floor stand
- Included accessories: 2 x AAA Batteries, FM antenna, HDMI cable, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

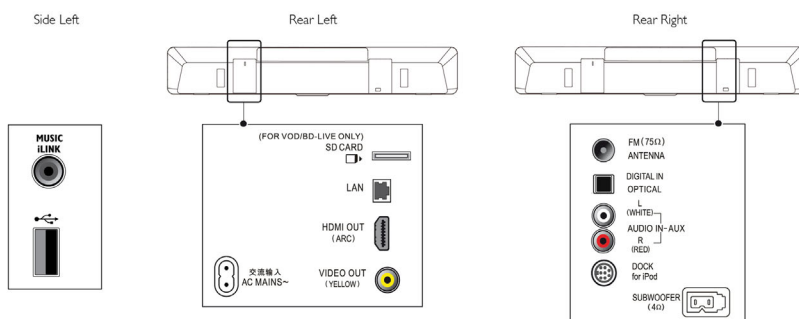

Issue date 2013-03-21

Version: 7.1.4

12 NC: 8670 000 90326
EAN: 87 12581 64489 5

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

* Designated FreeTalk Skype camera <TALK-7191>, for details, please visit www.freetalk.me/philips