





Philips GoGEAR
MP3 video player with
FullSound™

Muse
8GB*

GoGEAR

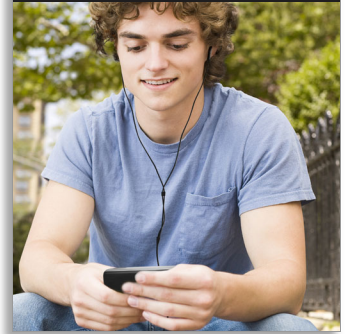

SA1MUS08K

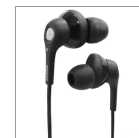

Superior sound experience

with FullSound™ and noise cancelation

Philips GoGear Muse Portable AV Player features FullSound™ technology and noise cancelation headphones for exceptional sound and inspired music enjoyment on the go. Plus, viewing videos is a joy on its 3" Wide-QVGA color display.

The best sound entertainment on the go

- FullSound™ to bring your MP3 music to life
- Built-in active noise cancelation for undisturbed enjoyment
- High-definition headphones for precise sound
- FM radio with RDS and 20 presets for more music options

Easy enjoyment on the go

- More content choice, with Napster, Audible and BBC iPlayer
- 7.6 cm/3" wide-QVGA color display for superb video enjoyment
- Playback DRM-free music from your iTunes library
- Create playlists or delete songs directly on the device
- Up to 25-hour music or 5-hour video playback*

Easy and intuitive experience

- Easy video downloads from the Internet to your GoGear
- Folder view to organize and view media files like on your PC
- SuperScroll™ to find what you want in a fast, simple way

PHILIPS

Highlights

Active noise cancelation

With Noise Canceling technology, you can listen to music on the go without being affected by ambient noise. Earphone microphones detect ambient noise where it impacts you most and then a digital signal processor creates the necessary equal but opposite waveform to effectively cancel out the unwanted noise, thus bringing you closer to silence. The earphones' special design also provides exceptional sound isolation and a choice of three interchangeable ear caps to ensure a perfect fit.

Napster, Audible & BBC iPlayer

Enjoy the best content on your Philips GoGear with Napster, Audible & BBC iPlayer. With the music flatrate Napster To Go you enjoy millions of songs in top quality. Just drag & drop

them to your GoGear without paying for each song separately. Discover new music with services such as automix playlists and radio stations, just as you like it. Audible offers over 75,000 audio books, broadcasts, entertainment and business information. Buy audio books a-la-carte or on a monthly plan to take them with you on your GoGear. In the UK, catch up on BBC TV programs you missed: download, transfer & enjoy!

SuperScroll™

Double action search keys allow easy speed control when scrolling through large libraries. You can choose to move through your playlist one song or video at a time or just press and hold down a little harder to SuperScroll™ swiftly to your desired file.

FullSound™

Philips' innovative FullSound technology faithfully restores sonic details to compressed MP3 music, dramatically enriching and enhancing it, so you can experience CD music without any distortion. Based on an audio post-processing algorithm, FullSound combines Philips' renowned expertise in music reproduction with the power of the latest generation Digital Signal Processor (DSP). The result is fuller bass with more depth and impact, boosted voice and instrument clarity, and rich detail. Rediscover your compressed MP3 music in true-to-life sound that will touch your soul and move your feet.



Specifications

Picture/Display

- Diagonal screen size (inch): 3.0 inch
- Lines of text: 7
- Resolution: WQVGA, 400 x 240 pixels, 262K colours
- Backlight
- Type: LCD

Sound

- Equalizer customizable
- Equalizer settings: Classic, Dance, Electronica, Hip Hop, Jazz, Lounge, Pop, RnB, Rock, Spoken word
- Frequency response: 20 - 18k Hz
- Output Power: 2 x 1.4mW
- Signal to noise ratio: > 84 dB
- THD: 0.05% at 1kHz
- Channel separation: 45 dB
- Sound Enhancement: Noise cancelation, FullSound

Audio Playback

- Compression format: MP3, WAV, WMA, AAC, Ogg Vorbis, FLAC, APE, Real Audio
- ID3 Tag support: Song title, artist, album
- MP3 bit rates: 8-320 kbps and VBR
- WMA bit rates: 5-384 kbps
- WMA sample rates: 8, 11.025, 16, 22.050, 32, 44.1, 48 kHz
- MP3 sample rates: 8, 11.025, 16, 22.050, 24, 32, 44.1, 48 kHz
- Digital Rights Management: Windows Media DRM for Portable Devices, Supports download & subscription music services

Audio Capturing

- Audio file format: MP3
- Built-in microphone: mono
- Voice recording: MP3
- FM radio recording: MP3

Still Picture Playback

- Picture Compression Format: JPEG, BMP, PNG, GIF
- Slide show

Storage Media

- Built-in memory type: NAND Flash
- Built-in memory (RAM): 8 GB

Connectivity

- Headphone: 3.5 mm
- USB: High speed USB 2.0

Convenience

- Battery low indication
- Function: Keypad lock
- Superscroll
- Volume control
- Firmware upgradeable
- Battery charging indication: On User Interface

Accessories

- CD-ROM: Yes, with IFU, Device Manager, Media converter, Napster Software & Windows Media Player
- Headphones: AY3831 - Noise-cancellation headphones
- Pouch: AY4261
- USB cable: AY3930
- Quick start guide

Software

- Device manager: to restore and upgrade
- Napster software
- Windows Media Player 11
- Media Converter for Philips: WMV (.wmv.avi containers);MPEG-4 SP(.avi container only);MPEG-4 ASP(.avi); H.264 (MPEG-4 Part10) (.mp4); Other codec/container combinations supported based on installation of relevant Directshow codecs

Green Specifications

- Lead-free soldered product

System Requirements

- PC OS: Windows XP (SP2) or Windows Vista
- CD-ROM drive
- Internet connection: Yes (for access to updated support documents, manuals, future firmware and PC software upgrades)
- USB: Free USB port

Power

- Battery Capacity: 750mAh
- Playtime on internal battery: Up to 25 hours audio or 5 hours video
- Battery Type: LI-Polymer
- Rechargeable: Yes, via USB

Dimensions

- Product dimensions (WxDxH): 110 x 8.9 x 55 mm
- Product weight: 0.095 kg
- Packaging type: D-box

Tuner/Reception/Transmission

- Tuner Bands: FM
- Station presets: 20
- RDS: Program Type, Radio Text, Station Information, Station Name

Video Playback

- Digital Rights Management: Windows Media DRM for portable devices supports download, subscription rental video services.
- MPEG4 SP/ASP: Upto D1 resolution, 30 fps, bitrates up to 4Mbps in .avi and .mp4 containers
- MPEG4 AVC/H.264 BP: Upto VGA resolution, 30 fps, bitrates up to 1.5Mbps in .mp4 containers
- RMVB: VGA resolution, 30 fps, bitrate upto 1 Mbps in .rmvb container
- WMV9: VGA resolution, 30 fps, bitrate upto 1 Mbps in .wmv container



Issue date 2019-06-11

Version: 4.5.6

12 NC: 8670 000 50756
EAN: 87 12581 47187 3

© 2019 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Actual transfer speed may vary based on your operating system and software configuration.

* 1GB = 1 billion bytes; available storage capacity will be less.

* Supports download and subscription services compatible with WMA DRM10

* Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

* From Philips

* The BBC iPlayer service is available in the UK only