



Philips  
In-Ear Headphones

14.2mm drivers/ open-back  
Earbud

**SHE3205BK**

## Rich bass, clear sound

Designed for ear geometry comfort fit

Designed for optimal fit and comfort, the SHE3205 earphones feature 14.2mm drivers and bass vent for rich bass & clear sound. Built-in mic let you easily switch between music & calls. A choice of 6 vibrant colors to match your Apple watch.

### Enjoy quality sound

- 14.2mm speaker drivers for rich bass and clear sound
- Neodymium magnets enhance bass performance

### Ultimate wearing comfort

- Designed for ear geometry comfort fit

### Design for convenience

- Built-in microphone switches you from music to phone calls
- Flexi-Grip design for durability

# PHILIPS


# Highlights

## 14.2mm speaker drivers



Quality 14.2mm speaker drivers with neodymium magnet delivers rich bass and clear sound.

## Built-in microphone

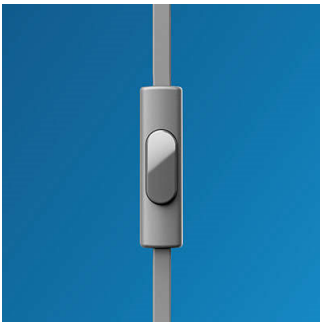


The built-in microphone lets you easily switch from music listening to taking phone calls - easily, so you'll always stay connected with what matter most to you.

## Designed for comfort

The design is based on ear geometry for comfortable wear and snug fit for everyone.

## Flexi-grip

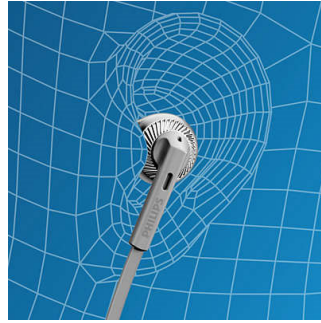

A soft, flexible part connecting the housing and the cable, protects the cable connection from damage even if bended heavily.

## Neodymium magnets



Neodymium is the best material for producing a strong magnetic field for greater sensitivity in a voice coil, providing a better bass response and higher overall sound quality.

# Specifications

## Sound

- Acoustic system: open
- Frequency response: 8 - 24 000 Hz
- Magnet type: Neodymium
- Speaker diameter: 14.2 mm
- Sensitivity: 107 dB
- Maximum power input: 30 mW
- Impedance: 32 ohm

## Connectivity

- Type of cable: copper
- Cable Connection: two-parallel, symmetric
- Finishing of connector: nickel plated
- Cable length: 1 m
- Connector: 3.5 mm

## Design

- Color: Black



Issue date 2024-03-08

Version: 1.0.4

EAN: 69 25970 70596 7

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)