## Register your product and get support at

# www.philips.com/welcome

PET944



EN <b>User manual</b>	3	FR <b>Mode d'emploi</b>	75
DA Brugervejledning	21		93
DE <b>Benutzerhandbuch</b>	39	NL <b>Gebruiksaanwijzing</b>	111
ES <b>Manual del usuario</b>	57	SV <b>Användarhandbok</b>	129

# **PHILIPS**

# Contents

_		
1	Important	4
	Important safety instructions	4
	Notice	6
2	Your portable DVD player	7
	Introduction	7
	What's in the box	8
	Overview of the main unit	9
	Overview of the remote control	11
3	Get started	13
	Charge the battery	13
	Install remote control battery	14
	Connect additional equipment	14
4	Use your player	15
	Turn on	15
	Select OSD language	15
	Play discs	16
	Play options	16
	Play from SD card	17
5	Adjust settings	18
6	Product information	19
7	Troubleshooting	20

## **Important**

## Important safety instructions

- Read these instructions.
- 2 3 4 5 6 7 Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 10 Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.



- (12) Unplug this apparatus during lightning storms or when unused for long periods of time.
- (13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- (16) This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.



- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

## Hearing safety

#### Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

#### To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

### Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

### Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.



• Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

## **Notice**

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

This product complies with the radio interference requirements of the European Community.

This product complies with the requirements of the following directives and guidelines: 2004/108/EC + 2006/95/EC

#### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

### Recycling

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

When you see the crossed-out wheel bin symbol with the chemical symbol 'Pb', it means that the batteries comply with the requirement set by the directive for lead:



Pb

Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Always bring your product to a professional to remove the built-in battery.

The making of unauthorized copies of copyprotected material, including computer programs, files, broadcasts and sound recordings, may be an



infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

"DivX, DivX" Certified, and associated logos are trademarks of DivX, Inc. and are used under license.



#### This apparatus includes this label:



## Norge

Typeskilt finnes på apparatens underside.

Observer: Nettbryteren er sekundert innkoplet. Den innebygde netdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten. For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.

# 2 Your portable DVD player

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

### Introduction

Your portable DVD player plays digital video discs that conform to the universal DVD Video standard. With it, you can play movies with true cinema picture quality and stereo or multi-channel sound (depending on disc and playback set-up).

You can also select sound track, subtitle languages, and different angle of view (again depending on DVD disc). Besides, you can restrict the play of discs that are not suitable for children.

You can play the following discs on the DVD player (including CD-R, CD-RW, DVD $\pm$ R and DVD $\pm$ RW):


VIDEO	DVD-Video
COMPACT DIGITAL VIDEO	Video CD
COMPACT DIGITAL AUDIO	Audio CD
MP3-CD PLAYBACK	MP3 CD
	DivX
	Discs with JPEG files

## What's in the box

Check and identify the contents of your package:

- Portable DVD player
- Remote control
- AC power adaptor, DSA-15P-12 EU 090135 (DVE)
- Car adaptor
- AV cable
- Stand
- User Manual
- Quick Start Guide

## Overview of the main unit

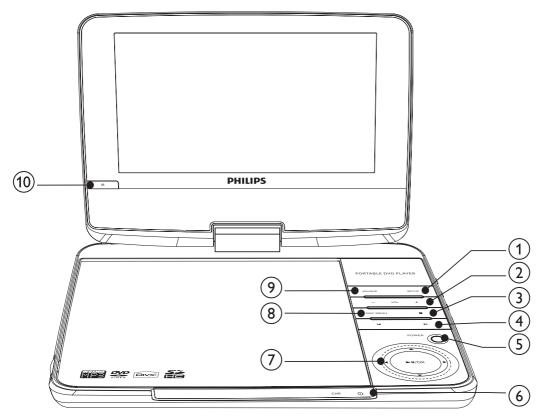

- 1 SETUP
  - Accesses or exits the setup menu.
- (2) VOL +
  - Increases or decreases volume.
- **3** 
  - Stops disc play.
- (4) **|◄**, **▶**|
  - Skips to the previous or next title, chapter, or track.
- (5) POWER
  - Turns on/off DVD player.
- (6) CHR/(1)
  - Charging indicator/Power indicator
- (7) **▲**, **▼**, **◄**, **▶** 
  - Navigates through the menus.
  - ◀, ▶
  - Searches backward/forward at different speeds.

#### ►II/OK

- Confirms an entry or selection.
- Starts, pauses or resumes disc play.

## (8) DISC MENU


- For DVD, accesses or exits disc menu.
- For VCD, turns on or off PBC (Playback Control) mode.
- For VCD version 2.0 or SVCD with PBC turned on, returns to the menu.

## 9 SOURCE

• Switches between DVD and SD.

## (10) IR

Remote control sensor

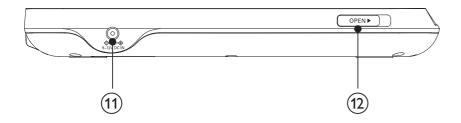


## (11) DC IN

• Power supply socket

### (12) OPEN▶

• Opens the disc compartment.

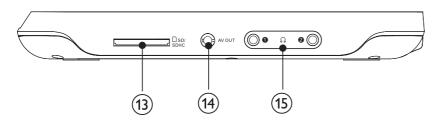

## (13) SD/SDHC

• SD card slot


### (14) AV OUT

Selects video output format to TV system.

## 15)

Headphone jack

## Overview of the remote control

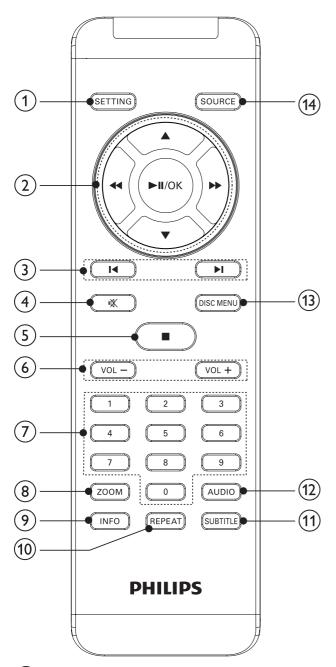

- 1 SETTING
  - Accesses or exits the setup menu.
- 2 ▲, ▼, ◀◀, ▶▶
  - Navigates through the menus.

### **◄◄**, **▶▶**

- Searches backward/forward at different speeds.
- Rotates pictures anti-clockwise/clockwise.

#### ►II/OK

- Confirms an entry or selection.
- Starts, pauses or resumes disc play.

- (3) |◀, ▶|
  - Skips to the previous or next title, chapter, or track.
- 4 🕸
  - Mutes or restores audio output.
- **(5)**
  - Stops disc play.
- 6 VOL +
  - Increases or decreases volume.
- 7 0-9
  - Numeric keypad
- 8 ZOOM
  - Zooms in or out.
- 9 INFO
  - Displays play information.
- (10) REPEAT
  - Repeats a chapter/track/title.
- (11) SUBTITLE
  - Selects DVD subtitle language.
- (12) AUDIO
  - For DVD, selects an audio language.
  - For VCD, selects an audio mode.
- (13) DISC MENU
  - For DVD, accesses or exits disc menu.
  - For VCD, turns on or off PBC (Playback Control) mode.
  - For VCD version 2.0 or SVCD with PBC turned on, returns to the menu.
- (14) SOURCE
  - Switches between DVD and SD.

**EN** 

## 3 Get started



#### Caution

• Use the controls only as stated in this user manual.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your player. The model number and serial number are on the bottom of your player. Write the numbers here:

Model No.	
Serial No.	

## Charge the battery




#### Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the bottom of the player.
- Use only the supplied AC adaptor to charge the battery.



#### Note

- The type plate is located on the bottom of the player.
- 1 Connect the supplied AC adaptor to the player and to the AC outlet.

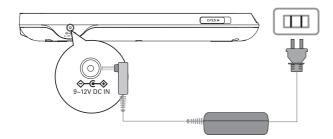

- The charge indicator turns on. When the player is not in use, it will take about 8 hours to fully charge it. However, when in use, it will take more than 16 hours to fully charge it.
- → When the battery is fully charged, the charge indicator turns off.

## Install remote control battery



#### Caution


- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of decreased battery life! Never mix different brands or types of batteries.
- Risk of product damage! When the remote control is not used for long periods, remove the batteries.
- Perchlorate Material special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.

#### For first-time use:

1 Remove the protective tab to activate the remote control battery.

#### To replace the remote control battery:

- 1 Open the battery compartment.
- 2 Insert 1 CR2025 battery with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

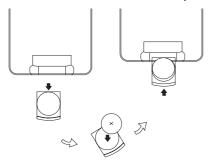


## Connect additional equipment

## Connect a TV


You can connect the player to a TV to enjoy DVD.

 Match the color of the AV cables (not supplied) with the jacks: the yellow cable is for the yellow video jack, the red/white cable is for the red/white audio jacks.

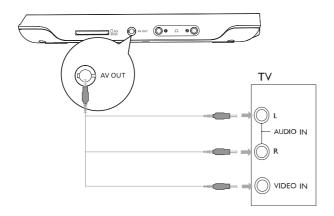

### Connect an SD card

Connect the SD card to the SD CARD jack.

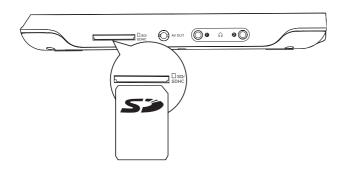

# 4 Use your player

## Turn on

Press POWER.

→ The **POWER** indicator turns on.

## Select OSD language

You can choose a different language for the on-screen display text.

- 1 Press **SETTING**.
  - → The setup menu appears.
- 2 Select [Language] > [On Screen Display].
- 3 Press ►► to select an option.
- 4 Press ► II/OK to confirm.
- 5 Press **SETTING** to exit.

## Play discs

- 1 Slide **OPEN** ▶ on the player.
- 2 Insert the disc with label side facing up.
- **3** Push down to close the disc compartment.
  - → Play starts automatically. If not, press ► II/OK.
  - If a menu appears, select an item, then press ► II/OK to start play.
  - To pause, press ► II/OK. Press again to resume play.
  - To stop, press twice.
  - To select the previous/next item, press **◄** or **▶**1.
  - To start search within video/audio, press ◀◀ or ▶▶ once or more.

## Play options

### Select audio language

For DVDs that contain two or more audio languages.

• During play, press **AUDIO** repeatedly until the language is selected.

## Select subtitle language

For DVDs that contain two or more subtitle languages.

• During play, press **SUBTITLE** repeatedly until the language is selected.

## Repeat

• During play, press **REPEAT** repeatedly to repeat a chapter/track/title.



Tip

For VCDs, if PBC is on, you cannot repeat items.

### Zoom

For DVDs, VCDs and JPEG CDs, you can zoom in and out for video images or pictures.

- 1 Press **ZOOM** repeatedly to zoom in and out.
- When the video image or picture is enlarged, press △, ▼, ◀◀, ▶▶ to pan through it.

#### Select audio mode

When you play VCDs, you can select an audio mode.

• Press AUDIO repeatedly to select audio channel: [L/R], [L/L], or [R/R].


### Rotate pictures

For JPEG CDs only. While the JPEG is displayed:

Press ◄◄/ ▶► to rotate anti-clockwise/clockwise.

## Play from SD card

- 1 Insert an SD card into the SD card slot.
- 2 Press SOURCE.
  - → The home menu appears.

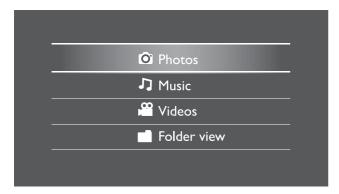

#### To view photos:

- 1 Select [Photos] from the home menu.
  - Thumbnail previews of the photos stored in the card are displayed.
- 2 Press ► II/OK.
  - A slideshow of the stored photos starts from the photo selected.

To listen to music or view videos:

- 1 Select [Music]/[Videos] from the home menu.
- 2 Select a folder/file, then press ► II/OK.
  - → The file is played.



Tip

Alternatively, you can select 

from the main menu and find your files in folder view.

# 5 Adjust settings

To maximize your play experience, use **SETTING** to fine tune your settings.

- 1 Press **SETTING**.
  - → The setup menu is displayed.
- 2 Press ▲▼ to select an option and press ▶ II/OK to confirm.

[Language]	
[On Screen Display]	Select on-screen display language.
[Menu]	Select DVD menu language.
[Audio]	Select audio language.
[Subtitle]	Select DVD subtitle language.
[Screen]	
[Power Save]	Adjust the brightness level of screen backlight.
[Display Type]	Select display ratio.
[Brightness]	Adjust screen brightness.
[Contrast]	Adjust screen contrast.
[Photo]	
[Slideshow Frequency]	Select intervals for JPEG play.
[Slideshow Effect]	Select slideshow effect for JPEG play.
[Display Format]	Select display format.
[Photo Display]	Select photo display mode.
[Custom]	
[Parental Control]	Select parental level.
[DivX VOD]	Get DivX registration code.
[DivX Subtitle]	Select DivX subtitle language.
[Angle Mark]	Select angle mark display options.
[Password]	Change password (3308 by default).
[Default]	Restore original settings.

- 3 Press ◀◀ to go back to previous menu level.
- 4 Press **SETTING** to exit.

# 6 Product information



• Product information is subject to change without prior notice.

Dimensions	$240 \times 178.5 \times 32 \text{ mm}$
Weight	1.0 kg
Power supply	Input: 100-240V 50/60Hz 0.5A Output: DC 9V 1.5A
Power consumption	13.5 W
Operating temperature range	0-45°C
Laser wavelength	DVD: 655 nm CD: 785 nm
Video out	
Video system	NTSC & PAL
Output level	1Vp - p ± 20%
Load impedance	75 <b>Ω</b>
Audio out	
Frequency response	20Hz-20KHz ± 1dB
Signal/noise ratio	≥ 80 dB
Audio distortion + noise	≤ -80 dB(1KHz)
Channel separation	≥ 80 dB
Dynamic range	≥ 80 dB
Audio out (analog audio)	Output level: 2V ± 10%
Load impedance	10 ΚΩ

# 7 Troubleshooting



• Risk of electric shock. Never remove the casing of the player.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using the player, check the following points before requesting service. If the problem remains unsolved, register your player and get support at www.philips.com/welcome.

#### No power

- Ensure that both plugs of the mains cord are properly connected.
- Ensure that there is power at the AC outlet.
- Check if the built-in battery is drained.

#### No sound

• Ensure that the AV cable is connected correctly.

#### Distorted picture

- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Make sure that the video output format of the disc is compatible with the TV.
- Change the video output format to match your TV or program.
- The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points(red, blue, green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

### Cannot play disc

- Ensure the disc label is upwards.
- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Check if the disc is defective by trying another disc.

### No response to the remote control

- Ensure that the path between the remote control and the player is clear from obstacles.
- From a close distance, point the remote control directly at the player.
- Replace the remote control batteries.
- The function does not work for this disc. Refer to the disc instructions.

### The player feels warm

• When the player is in use for a long period of time, its surface will be heated. This is normal.



