

Philips
Portable speaker

Universal



SBP1120

Pure stereo to go

with compact dual-driver speakers


Enjoy your music in lively stereo anywhere on speakers that are compact and ready to go. Separate the two speakers for a wide stereo sound stage, and dual drivers for clear, powerful sound. No batteries required – just plug and play!

Enjoy your music in stereo

- Extra wide soundstage for 3-dimensional and realistic sound
- Two drivers for clear and powerful sound
- Universal: works via your device's 3.5mm headphone jack

Take your music with you

- Plug & play - no batteries required
- Lightweight, portable design for music enjoyment on the go

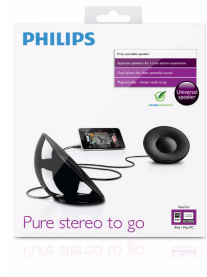

PHILIPS
sense and simplicity

Specifications

Compatibility

- Compatible with: iPod, MP3 players, PCs & laptops, Devices with a 3.5mm jack

Cable specs

- Length: 2 x 0.5m

Sound

- Frequency response: 20-20 000 Hz
- Output Power: 2W
- Speaker driver(s): 2 x 50mm

Packaging dimensions

- Packaging type: Carton
- Number of products included: 1

- Packaging dimensions (W x H x D):

- 11.2 x 14.5 x 10.2 cm
- Gross weight: 0.2525 kg
- Nett weight: 0.174 kg
- Tare weight: 0.0785 kg
- EAN: 69 23410 70623 9

Outer Carton

- Number of consumer packagings: 6
- Outer carton (L x W x H): 36 x 22.4 x 16 cm
- Gross weight: 1.775 kg
- Nett weight: 1.044 kg
- Tare weight: 0.731 kg
- GTIN: 1 69 23410 70623 6

Highlights

Extra wide soundstage

These portable speakers create an extra wide stereo soundstage when they are placed apart, so that each musical instrument appears to occupy a different physical space. The sound is more 3-dimensional and realistic.

Universal 3.5mm headphone jack

Plug and play with any of your mobile devices that have a 3.5mm headphone jack – iPod, iPhone, GoGear, MP3 players, laptops, netbooks, music phones and more.

Lightweight on-the-go design

These speakers are especially designed with travel in mind. From the park to a party, they're small and lightweight without sacrificing stereo-quality sound.

Plug & play - no batteries

Passive speakers are powered by your mobile device itself, so without batteries they're even smaller and lighter – pick them up and take them anywhere you want to enjoy your music out loud.

Two drivers

These speakers feature two drivers, delivering surprisingly clear and powerful sound from a small space.



Issue date 2012-02-28

Version: 3.2.9

12 NC: 8670 000 65494
EAN: 69 23410 70623 9

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com