



Philips
In-Ear Headphones

8.6mm drivers/semi-closed back
In-ear

SHE8100BS



Deep and pure bass – always with solid metal housing

The Philips SHE8100 in-ear headphones boasts high quality drivers for truly deep bass and sturdy aluminum housing for sound purity. Oval sound tubes ensure ergonomic comfort.

Enjoy quality sound

- Re-engineered 8.6mm drivers for responsive deep bass
- Sturdy aluminum housing prevents vibration for sound clarity

Ultimate wearing comfort

- Curved housing and oval sound tubes for ergonomic comfort
- Silicon caps in choice of three sizes for customized fit

Always ready to go

- Anti-tangle slider keeps your cables together neatly
- Durable Flexi-grip for strong headphone-to-cable connection

PHILIPS

Highlights

Aluminum housing



The headphone's housing is crafted from sturdy aluminum, which prevents vibration for the purest sound performance. In addition, it protects the earphones from the wear and tear of everyday use.

Anti-tangle slider



The smart anti-tangle slider helps you easily keep the two earpiece cables neatly together, simply by gliding it up. No more hassles with tangles or knots!

Durable Flexi-grip connection

This soft yet durable and flexible connector between the earphone and cable helps protect against potential damage from repeated bending.

Oval sound tubes


Your in-ear headphones are precisely designed to fit any ear. Its ergonomic oval sound tube and curved architecture ensure an optimized, secure and comfortable fit – always.

Re-engineered 8.6mm drivers



Re-engineered 8.6mm drivers for responsive deep bass

Silicon caps in three sizes

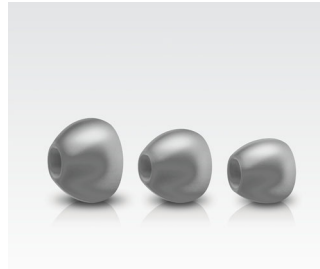

Your in-ear headphones come with a choice of 3 ear caps – from small to large – so you can select the perfect fit for your ears.

Specifications

Sound

- Acoustic system: Semi-closed
- Diaphragm: Mylar dome
- Frequency response: 8 - 24 000 Hz
- Impedance: 16 Ohm
- Magnet type: Neodymium
- Type: Dynamic
- Voice coil: Copper
- Sensitivity: 107 dB
- Speaker diameter: 8.6 mm
- Maximum power input: 30 mW

Design

- Color: Black and gold

Connectivity

- Connector: 3.5 mm stereo
- Type of cable: OFC
- Cable Connection: two-parallel, symmetric
- Cable length: 1.2 m
- Finishing of connector: gold-plated

Packaging dimensions

- EAN: 69 25970 70065 8
- Packaging dimensions (W x H x D): 9.5 x 17.5 x 2.5 cm
- Gross weight: 0.0532 kg
- Nett weight: 0.0169 kg
- Number of products included: 1
- Packaging type: Blister
- Tare weight: 0.0363 kg
- Type of shelf placement: Both

Inner Carton

- Gross weight: 0.1951 kg
- GTIN: 2 69 25970 70065 2
- Inner carton (L x W x H): 18 x 8.6 x 10.5 cm
- Nett weight: 0.0507 kg
- Number of consumer packagings: 3
- Tare weight: 0.1444 kg

Outer Carton

- Gross weight: 1.8488 kg
- GTIN: 1 69 25970 70065 5
- Outer carton (L x W x H): 38 x 19.3 x 25 cm
- Nett weight: 0.4056 kg
- Number of consumer packagings: 24
- Tare weight: 1.4432 kg

Product dimensions

- Product dimensions (W x H x D): 3 x 8 x 3 cm
- Weight: 0.0169 kg

