

Philips
Tower speaker

Bluetooth

FM
USB
120W

SPA1120

Power and elegance

Audio in its highest quality - whether it's with movies, music or karaoke, these 120 W tower speakers deliver every subtle nuance with perfection. It also comes with a wireless mic, so you can sing your heart out with friends and family.

Easy to use

- Hassle-free, space saving with 2.0 Channel Stereo
- Convenient speaker-top controls and connectors

Elegant and durable

- Durable wooden cabinet with matt finish

Multiple connectivity

- FM radio let you enjoy music or news everyday
- Wireless music streaming via Bluetooth
- Audio-in and USB connectivity for easy music playback

Hear every detail

- Wide range performance for exceptionally clear sound
- High quality tweeters for superior high tones

PHILIPS

Specifications

Connectivity

- Microphone: Microphone socket
- USB
- Bluetooth range: Line of sight, 10M or 30FT
- Bluetooth version: 5.0

Accessories

- Included accessories: 3.5 mm to stereo cable, user manual, warranty card, remote control without battery, wireless microphone

Dimensions

- Packaging dimensions (WxDxH): 38.7 x 44.6 x 87.5 cm
- Product dimensions (WxDxH): 16 x 30 x 82.7 cm

Power

- Power supply: 230 V/50 Hz, AC
- Power consumption: 122.7 W
- Display: LED Digital Display XX XX segment
- Standby power consumption: 11.5 W

Audio system

- Frequency range: 30 Hz to 20 KHz
- Signal/Noise ratio: 71 dB
- Satellite output power: 2 x 60 W
- Separation: 37 dB
- Total system power: 120 W RMS

Speaker system

- Speaker driver: 4 inch
- Speaker impedance: 4 ohms
- Woofer driver: 8 inch
- Woofer impedance: 4 ohms
- Woofer magnet size: OD90 x H18 mm
- Speaker magnet size: OD70 x H16 mm
- Tweeter driver: 1.5 inch
- Tweeter impedance: 8 ohms
- Tweeter magnet size: OD34 x H14 mm (double magnet)

Design

- Wooden cabinet

Highlights

Audio-in and USB connectivity

Audio-in and USB connectivity for easy music playback

Speaker-top inputs and control

Power, volume and track controls are located on the top panel of the master speaker unit of this system. In addition to this, the various connectors have also been placed here - all for convenient usage.

Durable wooden cabinet

Durable wooden cabinet with matt finish

Exceptionally clear sound

Thanks to the sophisticated speaker technology and the wide sound range performance you will enjoy exceptionally clear sound from the lowest to the highest tones.

FM radio (Stereo speakers)

FM radio let you enjoy music or news everyday


Hassle-free, space saving

Hassle-free, space saving with 2.0 Channel Stereo

Tweeters

Using a high-end tweeter on each speaker box dramatically improves the reproduction of high frequencies. Music comes to life and movies sound like they were meant to, as the full range of high frequencies is perfectly reproduced.

Bluetooth

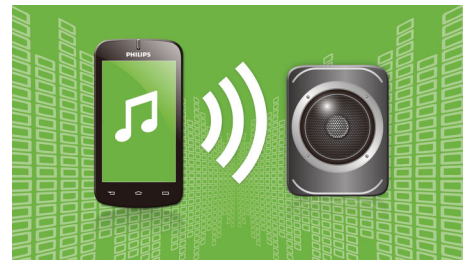

Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.



Issue date 2022-05-12

Version: 1.0.1

12 NC: 8670 001 67711
EAN: 48 95229 10953 7

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com