



Philips
Soundbar 2.1 with wireless
subwoofer

520W Max

2.1 CH wireless subwoofer
Dolby Digital Plus
HDMI ARC



TAB7207

Rich sound for every detail

This fantastic 2.1 channel soundbar with wirelessly connecting subwoofer brings true cinema sound into your living room. Dolby Digital Plus delivers incredible surround sound and two extra tweeters let you widen the soundstage even further.

Immersive cinema experience

- 2.1 channels. 8" wireless subwoofer for deeper bass
- Dolby Digital Plus delivers cinema surround sound
- Two angled speakers for wider sound

Distinctive looks. Easy control

- Distinctive geometric design. Easy placement
- Operate via touch controls on soundbar
- Philips Easylink for convenient control
- Place on your TV table, the wall, or any flat surface


Connectivity and convenience

- Stadium EQ Mode. Bring the stadium home
- Conveniently connect all of your favourite sources
- Connect via HDMI ARC, Optical in, BT, Audio in or USB
- HDMI ARC. Control the soundbar with your TV remote
- Roku TV Ready™. Simple setup. One remote. Quick settings.

PHILIPS


Highlights

2.1 channels. 8" subwoofer

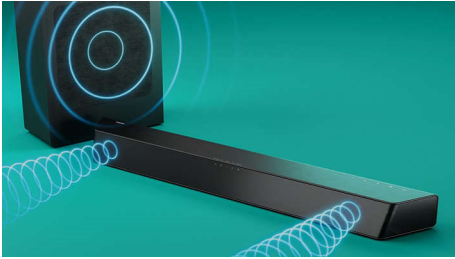

This soundbar's 2.1 channels and wirelessly connecting, 8" subwoofer put you in the center of the action, surrounding you in rich and virtual surround sound no matter what you're watching or listening to. Pick out every detail and lose yourself in the mix!

Dolby Digital Plus

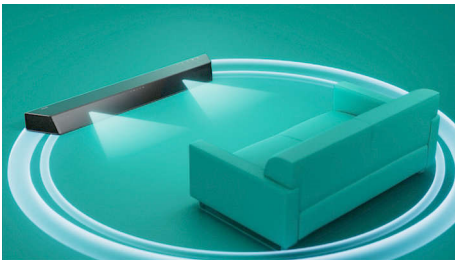

Virtualize the cinema experience in your home. This soundbar utilizes Dolby Digital Plus technology to immerse you in waves of virtual surround sound. Crystal clarity and great detail mean you can engage with your media like never before.

Wider soundstage



Widen the sound! Two extra tweeter speakers at either end of the soundbar broaden the audio to give you a clear separation of instruments. Pick them out easily and hear every instrument in the orchestra like you're really in the hall!

Stadium EQ Mode

Experience the excitement of live sports, right there in your living room. Stadium EQ Mode immerses you in ambient crowd noise, just like you were sitting in the stadium! Be thrilled by every crucial moment and still hear crystal-clear commentary.

Connect your favourite sources

Stream playlists from your mobile device via Bluetooth. Your media sounds richer, deeper, and clearer through this phenomenal soundbar and subwoofer. You can also connect via Audio in, Optical in, HDMI ARC or use a USB drive for music.

Roku TV Ready™



This Philips Soundbar is Roku TV Ready certified. That means you'll enjoy a simple setup,

one remote, and quick settings when you pair it with a Roku TV. Roku, the Roku logo, Roku TV, Roku TV Ready, and the Roku TV Ready logo are trademarks and/or registered trademarks of Roku, Inc. This product is Roku TV Ready-supported in the United States, Canada, Mexico, the United Kingdom, and Brazil. Countries are subject to change. For the most current list of countries in which this product is Roku TV Ready-supported, please email rokutvready@roku.com.

Philips Easylink

This fantastic soundbar features Philips Easylink technology for maximum ease and convenience. Whether you want to adjust the EQ modes, bass, treble, volume settings on your device or soundbar, only one remote control is needed!

Connect via HDMI ARC

Connect via HDMI ARC, Optical in, BT, Audio in or USB

Distinctive geometric design

Distinctive geometric design. Easy placement

HDMI ARC

The days of hunting for multiple remotes are over. This soundbar connects to your TV via HDMI ARC, allowing you to control soundbar volume with the same remote you use for your TV.

Operate via touch controls

Operate via touch controls on soundbar

Place on any flat surface

Place on your TV table, the wall, or any flat surface

Specifications

Sound

- Sound Enhancement: Treble and Bass Control
- Equalizer settings: Movie, Music, Voice, Stadium
- Total harmonic distortion: $\leq 10\%$
- Speaker system output power: 520W max / 260W RMS

Loudspeakers

- Subwoofer freq range: 35 - 150 Hz
- Subwoofer type: Active, Wireless subwoofer
- Subwoofer impedance: 3 ohm
- Number of sound channels: 2.1
- Number of woofers: 1
- Woofer diameter: 8"
- Soundbar freq range: 150 - 20k Hz
- Soundbar impedance: 8 ohm
- Front drivers: 2 full range (L+R), 2 tweeters (L+R)
- External subwoofer enclosure: Bass reflex

Connectivity

- Bluetooth: Receiver
- Bluetooth version: 5.0
- Bluetooth profiles: A2DP, AVRCP, Multipoint (Multipair) support, Streaming Format: SBC
- EasyLink (HDMI-CEC)
- USB playback
- Audio in: 1x 3.5mm
- Optical input x 1
- HDMI Out (ARC) x 1
- DLNA Standard: No
- Smart Home: None
- Wireless speaker connection: Subwoofer

Supported Audio Formats

- Bluetooth: SBC
- HDMI ARC: Dolby Digital, Dolby Digital plus, LPCM 2ch
- USB: MP3, WAV, FLAC
- Optical: Dolby Digital, LPCM 2ch

Outer Carton

- Number of consumer packagings: 2
- GTIN: 1 08 40063 20261 7

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch standby
- Remote Control
- Night mode: No

Power

- Main unit power supply: 100-240V AC, 50/60 Hz
- Subwoofer power supply: 100-240V AC, 50/60 Hz
- Subwoofer standby power: $\leq 0.5\text{ W}$
- Main unit standby power: $\leq 0.5\text{ W}$
- Auto standby

Packaging dimensions

- Height: 18.5 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 46 cm
- Depth: 97 cm
- Height: 7.3 inch
- Number of products included: 1
- Width: 18.1 inch
- Gross weight: 8.64 kg
- Depth: 38.2 inch
- Nett weight: 7.139 kg
- Gross weight: 19.048 lb
- Nett weight: 15.739 lb
- Tare weight: 1.501 kg
- Tare weight: 3.309 lb
- UPC: 8 40063 20261 0

Accessories


- Included accessories: Power cord, Remote Control (with battery), Wall mount bracket, Quick start guide, World Wide Warranty leaflet

Design

- Color: Black
- Wall mountable

Dimensions

- Main Unit (W x H x D): 800 x 65 x 106 mm
- Main Unit Weight: 2.1 kg
- Subwoofer (W x H x D): 150 x 400 x 300 mm
- Subwoofer Weight: 4.74 kg

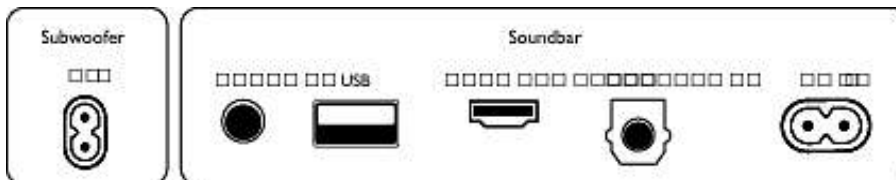

Issue date 2024-03-11

Version: 3.2.3

UPC: 8 40063 20261 0

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

