



Philips
Cordless phone

D200

1.6" display/ amber backlight
Speakerphone



D2001WP



Talk Handsfree

Our clever design gives you great sound reproduction without having to hold the phone to your ear – so you can talk completely handsfree. A true plug & play device with a user-friendly menu, a great chat has never been easier.

Nice and simple

- Freestanding handset with a speaker for easy handsfree calls
- Textured back cover for non-slip grip
- Easy to read 4.1cm (1.6") graphical display with backlight
- Menu in multiple local languages
- Up to 16 hours talk time on a single charge
- Programmable hot keys for quick dial
- Caller ID – so you always know who is calling*

Crystal clear sound

- Parametric Equalizer delivers pure and clear sound
- Optimized antenna layout for great reception in any room
- Advanced sound testing & tuning for superb voice quality

Eco-conscious product

- Low radiation and power consumption

PHILIPS

Cordless phone
D200 1.6" display/ amber backlight, Speakerphone

D2001WP/90

Highlights

Advanced sound testing




We test the sound quality of our DECT phones the same way as high-end headphone manufacturers do. Using an advanced ear simulator, we can accurately re-create the way people actually hear. This helps our acoustic engineers to measure and fine-tune things like frequency response, distortion and overall hearing perception, to create perfect voice reproduction for both handset and handsfree modes.

Optimized antenna layout



Our optimized antenna layout ensures strong and stable reception – even in areas of the house where cordless transmission is difficult. Now you can take a call wherever you are in the house, and enjoy a long, uninterrupted conversation even as you walk around.

Parametric Equalizer

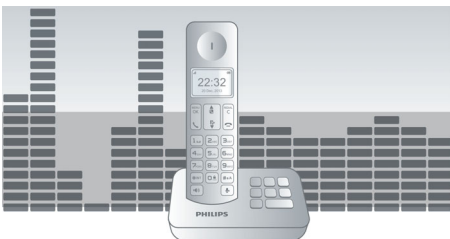

Our telephones use parametric equalization in the digital sound processing to fine-tune the sound response back to the intended linear

frequency response curve, delivering sound that is pure and clear, for each conversation.

4.1cm (1.6") graphical display

Easy to read 4.1 cm (1.6") graphical display with backlight

Handset speakerphone



Handsfree mode uses a built-in loud speaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

Menu in local languages




Enjoy easy set-up, navigation and control with intuitive menu available in local languages.

Programmable hot keys



Now calling the people you care about most is easier than ever. With simple one-touch dialing, you will never have to search for their number again. You can program up to 2 keys for instant calling.

Non-slip grip

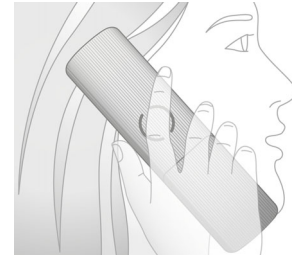

The rear of the handset is treated with a special texture for added comfort and better grip.

Up to 16 hours talk time



Up to 16 hours talk time on a single charge

Caller ID*



Sometimes it is good to know who is calling before you answer. And our Caller ID lets you keep track of who is on the other end of the line.

Eco-conscious product



Philips phones are energy efficient and designed to be respectful to the environment.

Specifications

Picture/Display

- Display size: 4.1 cm / 1.6"
- Display type: 1-line dot matrix + 2 line icons
- Backlight: Yes
- Backlight color: Amber

Memory Capacity

- Phonebook: 50 names and numbers
- Redial List Capacity: 10 last numbers
- Call log entries: 20 entries
- Phonebook store in the base

Sound

- Volume control on handset
- Ringtones on handset: 10 polyphonic

Convenience

- Speakerphone - talk handsfree
- Menu structure in the handset: List Menu
- Signal strength indicator: 3- bar indicator
- Battery level indicator: 3- bar battery icon
- Date / Time display
- Base Station keys: Paging key
- Battery charge indication
- Signal strength indication
- Programmable hot keys: Key 1 and 2
- Auto hang up
- Key tone on/off
- Call Management: Call Waiting*, Caller ID*, Microphone mute, Missed Calls, Received Calls
- Multi base capability: 1
- Multi handset capability: Up to 4
- Intercom - multiple handsets
- Line cord length: 1.8m
- Power cord length: 1.8m
- Charge time: 8 hours

- Up to 16 hrs talk time
- Range: Open field <300m; indoor <50m
- Up to 180 hrs standby time
- Non-slip grip: Circular texture
- Keypad lock
- Base ringer

Power

- Battery capacity: 550 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240V ~50/60Hz
- Power Consumption: <0.7W

Security

- Transmission encryption : Yes

Network Features

- Compatible: GAP

SAR Value

- Philips handsets: <0.1 W/kg

Eco Design

- Eco+
- Full ECO Mode (NEMO)

Packaging dimensions

- Packaging dimensions (W x H x D):
18,5 x 13,6 x 8 cm
- Nett weight: 0,323 kg
- Gross weight: 0,426 kg
- Tare weight: 0,103 kg
- EAN: 87 12581 68194 4
- Number of products included: 1
- Packaging type: Dummy
- Type of shelf placement: Dummy



Issue date 2015-01-23

Version: 3.1.3

12 NC: 8670 001 01475
EAN: 87 12581 68194 4

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com