




Philips Fidelio SoundHub  
2.1 Home theatre with  
Crystal Clear Sound

**3D Blu-ray**  
Titanium tweeters

SoundHub

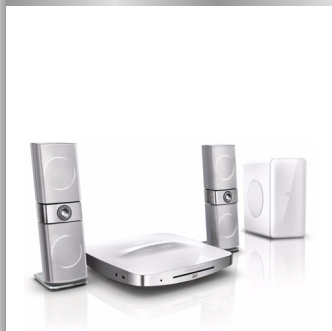

**HTS9241**

## Breathtaking clarity of all sound details

### Obsessed with Sound

Discover Crystal Clear Sound with the new SoundHub home cinema system HTS9241. The titanium tweeters deliver astonishing clarity of every sound detail. Start enjoying your favourite movies and music as they were meant to be heard.

#### Discover Crystal Clear Sound

- Crystal Clear Sound for superbly clear and detailed sound
- Titanium tweeters for undistorted sound with superb clarity
- Premium Class D Amplifiers to preserve every sound detail
- Virtual Surround Sound for a realistic movie experience

#### Designed to enhance your cinema at home

- Unique speakers with exposed tweeter for undisturbed sound
- Lifestyle design in high quality brushed aluminium and glass

#### Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Built-in dock for convenient playback from your iPod/iPhone
- Built-in Wi-Fi to enjoy your connected media wirelessly
- Smart TV to enjoy online services and access multimedia on your TV



[asimpleswitch.com](http://asimpleswitch.com)




[asimpleswitch.com](http://asimpleswitch.com)

**PHILIPS**  
**Fidelio**


# Highlights

## Titanium tweeters

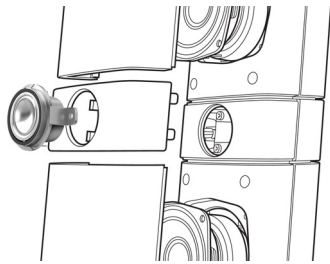

The co-developed tweeters, crafted in titanium, are very rigid and light to guarantee undistorted sound. Their incredible resistance to distortion and resonance through the whole audible frequency range guarantees superb clarity for all sound details.

## Premium Class D Amplifiers

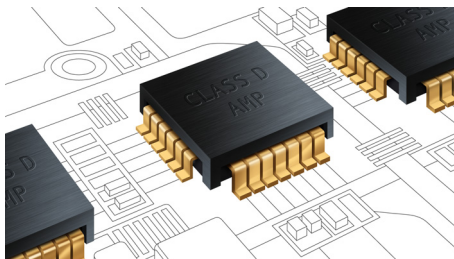

The Philips proprietary Premium Class D Amplifiers are designed to preserve the original sound source for greater audio signal accuracy, thus allowing acoustic details in music and movies to be delivered exactly as the artist or director intended.


## Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080 x 1920 HD resolution. Watching these images through special glasses with right and left lenses that are timed to open and close in

synchrony with alternating images creates the full HD 3D viewing experience in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high-quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

## Built-in dock for iPod/iPhone

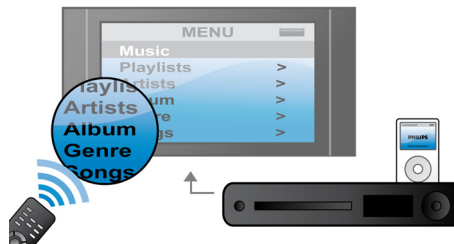


A built-in dock for iPod/iPhone lets you play movies, music and photos from your iPod/iPhone. What's more, you can charge and control the iPod/iPhone and browse through its contents on your TV screen - all with the home theatre's remote. Doing away with cumbersome cables and connections, the integrated dock brings portable entertainment into your home - with absolute ease.

## Smart TV



Philips home theatre systems with Smart TV offer you an array of enhanced features, including Net TV, DLNA and MyRemote. Net TV brings a wide range of online information and entertainment to your TV. Simply select Net TV in the Home Menu and start browsing for services like video-on-demand shops\* for the latest releases in HD, and Catch-up TV. With DLNA, you can access photos, music and movies stored on your PC from the comfort of your sofa. Can't find the remote control?

Simply use your smartphone or tablet PC to control your home theatre via the Philips MyRemote app.

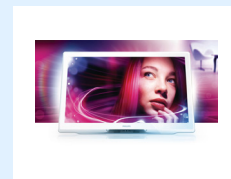

## Matches Philips DesignLine Edge TV\*

Matches Philips DesignLine Edge TV  
The perfect match for this home theatre is the Philips DesignLine Edge TV. The combined set features a beautiful lifestyle design to fit your living room. Pixel Precise HD and LED TV pictures together with Ambilight bring an immersive TV experience in to your living room. Both the TV and home theatre can be operated with just one remote control and the combined set ensures the best picture and sound performance with Philips Easylink via HDMI. In addition, they are both designed with the same materials and finishing for a perfect visual match!



## Philips Green Logo

Philips Green Products can reduce costs, energy consumption and CO2 emissions. How? They offer a significant environmental improvement in one or more of the Philips Green Focal Areas — Energy efficiency, Packaging, Hazardous substances, Weight, Recycling and disposal and Lifetime reliability.

# Specifications

## Sound

- Equalizer settings: Gaming, Movie, Music, News, Original
- Sound Enhancement: Dialogue Enhancer, DoubleBass, FullSound, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio
- Satellite speaker output power: 135 W x2
- Subwoofer output power: 230 W
- Total Power RMS @ 30% THD: 500 W

## Loudspeakers

- Loudspeaker types: 2 x Satellite speakers
- Drivers per Satellite speaker: 1 x 1" Titanium tweeter, 2 x 3" full range woofers
- Satellite speaker freq range: 150–20k Hz
- Satellite speaker impedance: 5 ohm
- Subwoofer type: Active
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20–150 Hz
- Subwoofer impedance: 3 ohm

## Connectivity

- Smart TV: DLNA, MyRemote, Net TV
- Front/Side connections: Music iLINK, USB
- Integrated Connections: Dock for iPod/iPhone, Wi-Fi
- Rear Connections: AUX IN 1, AUX IN 2, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), Mini Easy-Fit Speaker Jacks, SD/SDHC Card slot, Subwoofer out

## Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep colour

## Tuner/Reception/Transmission

- RDS: Station Name
- Tuner Bands: FM
- Number of Pre-set Channels: 40

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R/BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: aac, mka, mp3, wav, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, DivX, mkv, mp4, mpeg, mpg, wmv

## Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320 kbps

## Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, WMV HD, WMV SD

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Power

- Power consumption: 135 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: < 0.5 W

## Sustainability

- Packaging: 80% recycled corrugated board, Electronic User Manual, No polyfoam, Soya based ink

## Dimensions

- Main Unit (W x H x D): 307 x 66 x 304 mm
- Main Unit Weight: 3.87 kg
- Satellite Speaker (W x H x D): 131 x 334 x 99 mm
- Satellite Speaker Weight: 1.2 kg
- Satellite Speaker Cable length: 3 m
- Subwoofer (W x H x D): 196 x 397 x 342 mm
- Subwoofer Weight: 5.3 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 570 x 413 x 400 mm
- Weight incl. Packaging: 16.6 kg

## Accessories

- Included accessories: 2 x AAA Batteries, FM antenna, Power cord, Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

## Matching Philips Televisions\*

- DesignLine Edge: 32PDL7906, 42PDL7906



Issue date 2015-04-01

Version: 11.2.9

12 NC: 8670 000 71829  
EAN: 87 12581 58166 4

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)



\* The home theatre can also be matched with all other Philips TVs.  
\* To check whether Video on Demand is available in your country,  
please visit [www.philips.com/blu-ray](http://www.philips.com/blu-ray).