




Philips
Cordless phone

25-min answering machine
1.6" display/amber backlight
Speakerphone

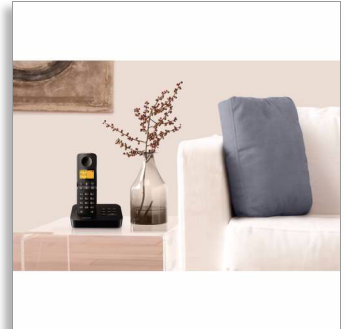

D2051B



Talk Hands-free

Great sound reproduction, without having to hold the phone to your ear – so you can talk completely hands-free. A true plug-and-play device with a user-friendly menu and an inbuilt answering machine. A great chat has never been easier.

Nice and simple

- Freestanding handset with a speaker for easy hands-free calls
- Up to 25 minutes of messages on your answering machine
- Textured back cover for non-slip grip
- Menu in multiple local languages
- Easy to read 1.6" (4.1 cm) graphical display with backlight
- Up to 16 hours of talk time on a single charge
- Programmable hot keys for quick dial
- Caller ID – so you always know who is calling*

Crystal clear sound

- The Parametric Equaliser delivers pure and clear sound
- Optimised antenna layout for great reception in any room
- Advanced sound testing and tuning for superb voice quality

Eco-conscious product

- Low radiation and power consumption

PHILIPS

Highlights

Advanced sound testing




We test the sound quality of our DECT phones the same way as high-end headphone manufacturers do. Using an advanced ear simulator, we can accurately re-create the way people actually hear. This helps our acoustic engineers to measure and fine-tune things like frequency response, distortion and overall hearing perception, to create perfect voice reproduction for both handset and hands-free modes.

Parametric Equaliser



Our telephones use parametric equalisation in the digital sound processing to fine tune the sound response back to the intended linear frequency response curve, delivering sound that is pure and clear, for each conversation.

Optimised antenna layout

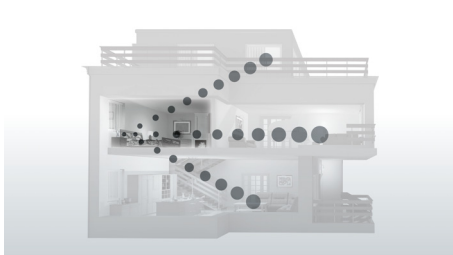

Our optimised antenna layout ensures strong and stable reception, even in areas of the house where cordless transmission is difficult. Now you can take a call wherever you are in

the house, and enjoy a long, uninterrupted conversation even as you walk around.

4.1-cm (1.6") graphical display

Easy to read 1.6" (4.1 cm) graphical display with backlight

Handset speakerphone



Hands-free mode uses a built-in loudspeaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

Menu in local languages



Enjoy easy setup, navigation and control with intuitive menu available in local languages.

Programmable hot keys




Now calling the people you care about most is easier than ever. With simple one-touch dialling, you will never have to search for their number again. You can programme up to 2 keys for instant calling.

Non-slip grip



The rear of the handset is treated with a special texture for added comfort and better grip.

Up to 25 min. recording

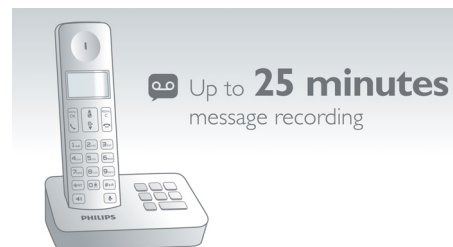

Up to 25 minutes of messages on your answering machine

Up to 16 hours talk time



Up to 16 hours of talk time on a single charge

Caller ID*



Sometimes it's good to know who's calling before you answer. And our Caller ID lets you keep track of who's on the other end of the line.

Specifications

Picture/Display

- Display size: 4.1 cm/1.6"
- Backlight: Yes
- Backlight colour: Amber
- Display type: 1-line dot matrix + 2 line icons

Answering Machine

- Recording time capacity: up to 25 minutes
- Pre-recorded OGM
- Message counter on base: LED (Soft Amber)
- Loud speaker on base
- Answering Machine control:: from base and handset

Sound

- Volume control on handset
- Ringtones on handset: 10 polyphonic

Convenience

- Menu structure in the handset: List Menu
- Signal strength indicator: 3- bar indicator
- Battery level indicator: 3- bar battery icon
- Date/Time display
- Base Station keys: Paging key
- Battery charge indication
- Charge time: 8 hours
- Programmable hot keys: Key 1 and 2
- Call Management: Call Waiting*, Caller ID*, Microphone mute, Missed Calls, Received Calls
- Key tone on/off
- Auto hang up
- Multi-base capability: 1
- Multi-handset capability: Up to 4
- Speakerphone — talk hands-free
- Range: Open field <300 m; indoor <50 m
- Up to 16 hrs talk time
- Line cord length: 1.8 m
- Power cord length: 1.8 m
- Non-slip grip: Circular texture

- Up to 180 hrs standby time
- Keypad lock
- Base ringer

Memory Capacity

- Phonebook: 50 names and numbers
- Redial List Capacity: 10 entries
- Call log entries: 20 entries
- Phonebook store in the base

Power

- Battery capacity: 550 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240 V ~50/60 Hz
- Power Consumption: <0.75 W

Security

- Transmission encryption: Yes

Network Features

- Compatible: GAP

SAR Value

- Philips handsets: <0.1 W/kg

Eco Design

- Eco+
- Full ECO Mode (NEMO)

Packaging dimensions

- EAN: 87 12581 68652 9
- Number of products included: 1
- Packaging type: Soother
- Type of shelf placement: Soother
- Packaging dimensions (W x H x D): 18.5 x 13.6 x 8 cm
- Gross weight: 0.45 kg
- Net weight: 0.347 kg
- Tare weight: 0.103 kg



Issue date 2015-02-06

Version: 2.1.4

12 NC: 8670 001 02632
EAN: 08 71258 16865 29

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com