



Philips
Car entertainment system



CSP410

Your mobile music theater

with 2-way stereo for vivid sound

Feel your music with the Philips Car stereo speakers CSP410. These 10cm 2-way speakers have peak power at 150W, and feature a light polypropylene cone with a soft PEI dome tweeter so you can enjoy vivid music details in clear sound.

Vivid sound on the road

- 30W RMS power handling
- Light polypropylene cone for clear sound delivery
- Soft PEI dome tweeter for warm and textured tones
- Sensitive cloth surround for maximum sound details
- Strong ferrite magnet for high power performance

High durability, sustainable performance

- Sturdy polypropylene cone for all-weather performance
- Stylish speaker grille protects against damages
- Endurance and performance stability in extreme conditions

Easy to use and install

- Fits perfectly in all 10cm speaker openings
- Simple wires plug-in for designated speaker terminals

PHILIPS
sense and simplicity

Highlights

30W RMS power handling


30W RMS power handling

Light polypropylene cone



Inside the speaker, a diaphragm sits on top of a voice coil to produce a signal waveform once an input signal is received. It transforms the signal wave into a sound wave. Polypropylene is one of the lightest plastics ever invented and is great material for speaker diaphragms due to its weight, high strength, stiffness and tolerance for high temperatures. These polypropylene cones deliver high quality music by reacting to even the smallest sound signal to produce clear, vivid sound.

Sensitive cloth surround

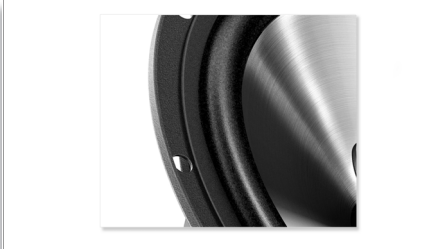

A highly sensitive cloth connects the woofer diaphragm to the speaker frame to form a surround suspension system. When a sound signal reaches the cone inside the woofer, the cloth surround assembly brings the cone back into position to be ready to receive another sound signal. By doing so, the woofer can capture every signal with a minimum of distortion, giving you clear, smooth sound no matter how loud or how quiet the music is played.

Soft PEI dome tweeter



PEI (Polyetherimide) is ideal material for tweeter domes due to its light weight, high tensile strength, high stability and tolerance for high temperatures. Inside the tweeter, the small diaphragm (the dome opening) produces high frequency tones. These PEI domes can capture even the highest musical notes to make your music textured with warm, full-range treble. The dome shape also spreads the sound around so that you can hear the high notes from every seat in the car.

Performance stability

Endurance and performance stability in extreme conditions.

Fits in all 10cm speaker

Fits perfectly in all 10cm speaker openings.


Simple wires plug-in

Simple wires plug-in for designated speaker terminals.

Sturdy polypropylene cone

Polypropylene is great material for speaker cone diaphragms due to its all-weather performance. When the weather is wet, the weight of the cone can increase; reducing its sensitivity. When the weather is hot, the cone (or only part of it) can expand and become larger. In both cases, the sound can become distorted. No matter what the weather, the sturdy polypropylene cones are not affected by these issues and they produce a clear, vivid sound every time.

Stylish speaker grille

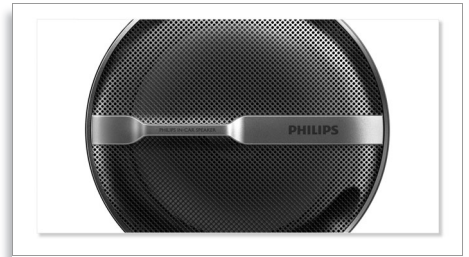

The speaker grille has been designed to give cars the look of luxury. Composed of two parts - a detachable metal mesh casing and a plastic ring, when installed over the speaker, it fully covers the tweeter dome and speaker cone. Hard and durable, it protects the speakers from accidental kicks and curious fingers, both of which can be damaging to their sound performance.

Strong ferrite magnet



Ferrite is a lightweight but strong material with a permanent and coherent magnetic field. It is the key speaker component that induces the movement of the voice coil and the diaphragm. When an input signal is received, the voice coil acts as an electromagnet that causes the woofer and tweeter diaphragm to either attract or repel. The ferrite magnet produces an even magnetic field for smooth diaphragm movement, ensuring sound output with lower distortion. Using such a stable and highly coercive magnet like ferrite, the voice coil can produce loud sounds while keeping the tone smooth.

Specifications

Sound

- Output power (RMS): 30W
- Peak Music Power: 150W
- Sensitivity: 88dB
- Frequency response: 50-30k Hz
- Impedance: 4 Ohms

Loudspeakers

- Speaker type: Coaxial speaker
- Number of ways: 2-way
- Speaker size: 10cm (4")
- Number of Loudspeakers: 2

Woofers

- Diaphragm: Cone
- Diaphragm material: Polypropylene
- Surround: Cloth
- Magnet: Ferrite
- Magnet mass: 4.4 Oz
- Voice coil: Single

- Voice coil material: Copper
- Damper: Conex

Tweeter

- Size: 28mm (1-1/10")
- Diaphragm: Dome
- Diaphragm material: PEI
- Magnet: Neodymium

Accessories

- Speaker grille: With metal net
- Quick start guide: English, Simplified Chinese
- Cables: Speaker wires

Dimensions

- Product dimensions (W x H x D):
134 x 63 x 134 mm
- Mounting depth: 46 mm
- Tweeter protrusion: 4 mm



Issue date 2011-10-18

Version: 1.0.3

12 NC: 8670 000 56212
EAN: 87 12581 50417 5

© 2011 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com