



Philips  
SoundBar Home theatre  
with Ambisound

Blu-ray 3D playback



HTS9140

## Superior surround sound without the clutter

### Obsessed with Sound

Over 80% of people who took the sound challenge\* preferred Philips Ambisound. This Philips SoundBar with Ambisound incorporates a complete home theatre system, including high definition 3D Blu-Ray Disc Playback, in a single unit.

#### Ultimate listening experience

- Ambisound for surround sound from fewer speakers
- Dolby TrueHD and DTS-HD for high fidelity surround sound

#### Designed to enhance your living space

- Slim and premium design in high-quality brushed aluminium
- SoundBar design best fits a 102 cm (40") flat TV or larger

#### Connect and enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Philips Net TV with Wi-Fi for online services on your TV
- DLNA Network Link to enjoy music and videos from your PC



product  
design  
award

2011



reddot design award  
product design 2011




asimpleswitch.com

# PHILIPS

sense and simplicity

# Highlights

## Ambisound

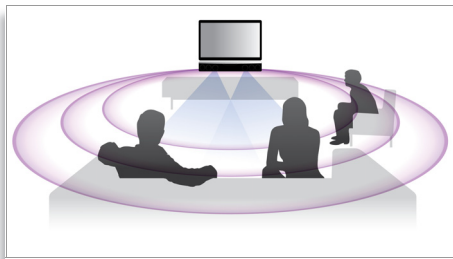

Ambisound technology produces truly embracing multi-channel surround sound from fewer speakers. It delivers an immersive 5.1 sound experience without the constraints of sitting position, room shape or size, and without the clutter of multiple speakers and cables. Through the combined effect of psychoacoustic phenomena, array processing and precisely angled driver positioning, Ambisound delivers more sound from fewer speakers.

## Full HD 3D Blu-ray




Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080 x 1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

## Philips Net TV with Wi-Fi



Experience a rich selection of online services with Net TV. Enjoy movies, pictures, infotainment and other online content directly on your TV whenever you like. Simply connect your home theatre directly to your home network through the Ethernet connection, and navigate and select what you want to watch with the remote control. The Philips menu gives you access to popular Net TV services fitted for your TV screen. Additionally, with the DLNA certified PC network you can watch videos or access pictures stored on your computer using your remote control.

## DLNA Network Link

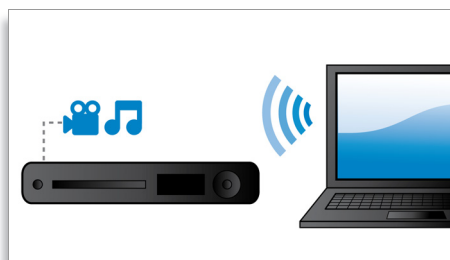

The DLNA Network link provides easy access to personal photos, music, videos or movies on your PC or Home Network. It uses the Ethernet (LAN) connection with DLNA protocol that ensures that DLNA-certified products will work together seamlessly. By connecting your TV, home theatre or Blu-ray Disc player to your home network, you will be able to access information from all DLNA-certified devices. You can access your world of entertainment at the simple push of a button with the intuitive user interface, which is designed for easy browsing.

## Dolby TrueHD and DTS-HD

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your

Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

## iF award

iF award: product design 2011

The Soundbar Home Theatre with Ambisound HTS9140 resolves the

design conundrum of how to achieve cinematic quality surround sound and excellent picture quality from a home theatre system without the clutter of multiple speakers and cables. The device is exceptionally slim both in depth and height. The touch controls are housed on top of the device so as not to detract from what is on the TV. The front is curved to optimise the virtual surround sound from the angled Ambisound speakers. The use of high-gloss chrome and aluminium makes this an elegant yet powerful complement to your living room.



## red dot award

red dot award: product design 2011  
Encapsulating the Philips motto of "Sense and Simplicity", the SoundBar Home theatre with Ambisound was designed to solve the challenge of speaker and cable clutter, which is associated with conventional 5.1 home theatres. Philips' state-of-the-art Ambisound technology of psychoacoustic innovation and precise driver positioning delivers a truly immersive, cinematic surround sound experience within a single bar. This smart technology is matched by equally intelligent design. The HTS9140 has a sophisticated, minimalist, brushed-aluminium and black surround, which blends in with any decor.

# Specifications

## Accessories

- Compatible accessories: DCK3060 Dock for iPod/iPhone, STS1100 Table top stand, STS1300 Floor stand, WUB1110 Wi-Fi USB Adaptor
- Included accessories: 2 x AAA Batteries, FM antenna, HDMI cable, MP3 Line-in cable, Power cord, Quick start guide, Remote Control, Screws for wall mounting x 2, User Manual, Wall mounting bracket, World Wide Warranty leaflet

## Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 112–320 kbps

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

## Video Playback

- Compression formats: AVCHD, AVCSD, DivX Ultra, MPEG1, MPEG2, MPEG4, WMV SD
- Video disc playback system: NTSC, PAL

## Optical Playback Media

- Playable Discs: AVCHD, AVCREC, BD, BD R/BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: asf, avi, DivX, mkv, mp4, mpeg, mpg, wmv

## Connectivity

- Access to Content: DLNA, Net TV, Video on Demand\*
- Front/Side connections: MP3 Link, USB
- Rear Connections: AUX in, Component Video output, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Easy-Fit Speaker Connectors, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, Subwoofer out, Wi-Fi USB

## Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough
- HDMI Features: 3D, Audio Return Channel (ARC), Deep colour

## Dimensions

- Main Unit (W x H x D): 955 x 155 x 96 mm

- Main Unit Weight: 6.6 kg
- Subwoofer (W x H x D): 196 x 397 x 342 mm
- Subwoofer cable length: 4 m
- Subwoofer Weight: 6.03 kg
- Packaging (W x H x D): 1040 x 400 x 390 mm
- Weight incl. Packaging: 21 kg

## Loudspeakers

- Loudspeaker types: Integrated with main unit, 2 Integrated centre speakers, 4 Integrated surround speakers
- Drivers per Centre speaker: 1 x 2.5" Full range woofer
- Centre speaker freq. range: 150–20k Hz
- Centre speaker impedance: 4 ohm
- Drivers per Surround speaker: 2 x 2.5" Full range woofers
- Surround speaker freq range: 150–20k Hz
- Surround speaker impedance: 6 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20–150 Hz
- Subwoofer impedance: 4 ohm

## Picture/Display

- D/A converter: 12 bit, 150 MHz
- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Power

- Power consumption: 115 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: < 0.22 W

## Sound

- D/A converter: 24 bit, 96 kHz
- Equalizer settings: Action, Classic, Concert, Drama, Gaming, Jazz, News, Rock, Sports
- Frequency response: 20 - 20k Hz
- Signal to noise ratio: > 65 dB
- Sound Enhancement: Auto Volume Leveller, Dialogue Enhancer, Dolby Digital Prologic II, DoubleBass, FullSound, Night Mode, Treble, Mid and Bass Control
- Sound System: Ambisound, Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS 96/24, DTS Digital Surround, dts ES, DTS-HD High Resolution Audio, DTS-HD Master Resolution
- Total Power RMS @ 30% THD: 600 W

## Tuner/Reception/Transmission

- No. of pre-set Audio Channels: 40
- RDS: Station Name
- Tuner Bands: FM



Issue date 2012-07-24

Version: 24.2.12

12 NC: 8670 000 59454  
EAN: 87 12581 52158 5

© 2012 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\* Based on consumer sound tests carried out by Synovate in Nov 2010 in Germany vs. a leading competitor. Data on file.  
\* To check whether Video on Demand is available in your country, please visit [www.philips.com/blu-ray](http://www.philips.com/blu-ray).