

Philips
CD Soundmachine

Lifestyle design

MP3-CD
Black silver

AZ1137



Enjoy music wherever you go

You take pleasure in the simple things in life and delight in convenience. The sleek and portable Philips CD soundmachine lets you indulge in the pleasures of enjoying your favourite MP3 music with the help of easy-to-use functions.

Enjoy your favourite music from different sources

- Play MP3/WMA-CD, CD and CD-RW
- MP3 Link for portable music playback
- FM/MW tuner for radio enjoyment

Easy to use

- 20-track CD programmable
- Compatible with CD-Recordable and CD-ReWritable

PHILIPS

Specifications

Audio playback

- Playback media: MP3-CD, CD, CD-R, CD-RW, WMA-CD
- Disc playback modes: fast forward/reverse, next/previous track search, repeat/shuffle/programme

Tuner/Reception/Transmission

- Antenna: FM antenna
- Tuner bands: FM, MW

Sound

- Sound system: stereo
- Volume control: rotary (analogue)
- Output power: 2 x 1 W RMS

Loudspeakers

- No. of built-in speakers: 2
- Speaker grille finishing: metal

Convenience

- Display type: LCD display
- Display Digits: 3
- Loader type: top

Connectivity

- MP3 Link: 3.5 mm stereo line in

Power

- Battery type: C size (LR14)
- Battery voltage: 1.5 V
- Power supply: 220 - 240 V
- Number of batteries: 6

Accessories

- Cables/Connection: 3.5-mm stereo line-in cable, power cord
- User Manual: multi-lingual
- Warranty: Worldwide Guarantee booklet

Dimensions

- Gross weight: 2.4 kg
- Packaging depth: 139 mm
- Packaging height: 262 mm
- Packaging width: 371 mm
- Weight: 1.9 kg
- Main unit depth: 236 mm
- Main unit height: 122 mm
- Main unit width: 341 mm



Highlights

Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorised music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.

MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.


20-track CD programmable

The CD programmable playback feature allows you to enjoy your favourite tracks in the order you want.

CD-R/RW Compatible

CD-ReWritable Compatible means that your audio set can play both CD-Recordable (CD-R) and CD-ReWritable (CD-RW) discs. CD-R discs are recordable once and can be played on any audio CD player while CD-RW discs can be recorded and re-written multiple times and can only be played back on compatible audio CD players. The laser pick-up and CD decoder circuitry of CD-RW compatible players are specially designed to read the special audio CD-RW phase-change recording layer, ensuring you can always play your home-recorded discs on your audio CD system.

FM/MW tuner

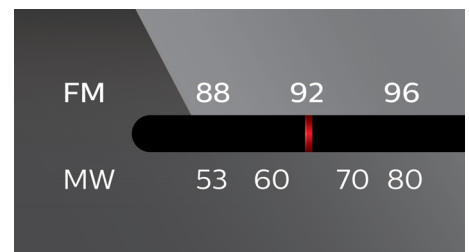

FM/MW (AM) stereo tuner



Issue date 2015-01-22

Version: 2.0.3

12 NC: 8670 000 62123
EAN: 87 12581 53761 6

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com