



Philips  
wireless portable speaker

**Bluetooth®**

Built-in microphone for calls  
Rechargeable battery  
10W

**SB2700G**

## Designed to go places

Compact and very portable, the SB2700G wireless speaker is designed to play your music wirelessly from any Bluetooth-enabled mobile devices and tablets.

### **Sound that blows you away**

- wOOx technology for rich yet precise bass without distortion
- DBB to preserve low tones for deep bass at any volume level
- 10W RMS total output power

### **Made to go places**

- Elegant, slim and compact design to fit into any briefcase

### **Truly portable and versatile**

- Wireless music streaming via Bluetooth
- Built-in microphone for speaker phone conversation
- Built-in rechargeable battery for even better portability
- Audio-in for easy portable music playback


# PHILIPS

wireless portable speaker  
Bluetooth® Built-in microphone for calls, Rechargeable battery, 10W

SB2700G/12

## Highlights

### Wireless music streaming

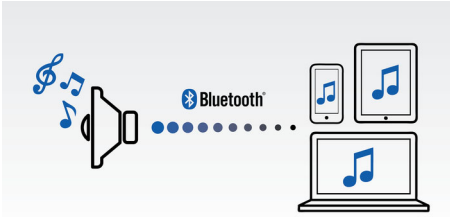

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

### wOOx technology



wOOx technology is a revolutionary loudspeaker concept that allows you to hear and feel profoundly deep bass that is richer than any other audio system. Special speaker drivers work in harmony with the wOOx bass radiator, and precise tuning between the main driver and the tweeter ensures smooth transitions from low-mid to high frequencies. Dual suspension and a totally symmetrical sandwich construction deliver low and precise base without noticeable distortion. wOOx produces exceptionally deep and dynamic bass by using the speaker box full volume to truly magnify the impact of the music.

### Dynamic Bass Boost (DBB)



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

### AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

## Specifications

### Compatibility

- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5
- iPod touch: 3rd generation or later
- Android tablets & smartphones
- other Bluetooth-enabled device

### Connectivity

- Bluetooth profiles: A2DP, AVRCP, SPP
- Bluetooth range: line of sight, 10M or 30FT
- Bluetooth version: 2.1
- Audio in (3.5mm)

### Sound

- Output power (RMS): 10W
- Sound Enhancement: Dynamic Bass Boost
- Sound System: Stereo
- Volume Control: Volume Control up/down

### Loudspeakers

- Neodymium magnet system

### Power

- Power supply: 100-240VAC, 50/60Hz, Battery
- Operating time on battery: 8 hr
- Battery Type: Built-in battery

### Dimensions

- Product dimensions (WxDxH): 311 x 38 x 111 mm
- Packaging dimensions (WxDxH): 431 x 76 x 163 mm
- Product weight: 0.28 kg
- Weight incl. Packaging: 1.08 kg



Issue date 2020-07-08

Version: 1.0.4

12 NC: 8670 001 05183  
EAN: 87 12581 69380 0

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)