




Philips
Mini Hi-Fi System

Party machine

CD, MP3-CD, USB Direct
Rip CD onto USB
240W, extendable with FWP1000

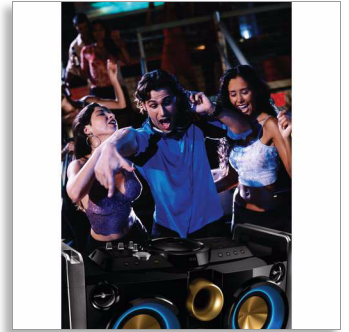

FWP2000



The ideal party machine

Obsessed with sound

This FWP2000/12 Hi-Fi system lets you enjoy music in more ways. Play MP3, WMA files from USB devices & portable music players, or rip CD music onto USB devices. MAX Sound delivers more power & dynamic lighting adds punch to your parties.

Enjoy your music from multiple sources

- Play MP3-CD, CD and CD-R/RW
- USB Direct for easy MP3 music playback
- MP3 Link for portable music playback
- Rip music from CD onto USB device

Enrich your sound experience

- MAX Sound for instant power boost
- Dynamic Bass Boost for deep and dramatic sound
- Digital Sound Control for optimized music style settings
- Treble and Bass Control for easy high and low tone settings
- 300W RMS total output power

Extend your party machine music

- Simple setup with any Philips party machines
- Flexible placement around the house
- Dynamic lighting for dancing to the beat

PHILIPS

Highlights

Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high - at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

MAX Sound



MAX Sound technology produces an instant boost in bass, maximizing volume performance and instantly creating the most impressive listening experience with just the touch of a button. Its sophisticated electronic circuitry calibrates existing sound and volume settings, instantly boosting bass and volume

to maximum levels without distortion. The end result is a noticeable amplifying of both sound spectrum and volume and a potent audio boost that will add mileage to any music.

Dynamic lighting



Step in time to the dazzling beat of music. Cool lights blink to the rhythm of songs, adding fun and excitement to tunes. When you don't want the lights on, you can simply turn the feature off. Add glam and spice to dance parties, sizzling celebrations and cool events with these sensational dynamic lights.

USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

Specifications

Sound

- Total Sound Power (RMS): 300 W
- Sound enhancement: MAX sound, digital sound control 4 modes, Dynamic Bass Boost 3 steps, incredible surround, virtual ambience control

Loudspeakers

- Number of speaker boxes: 1
- Speaker drivers: 2" tweeter, 6.5" woofer
- Loudspeaker enhancement: 2-way
- Speaker types: bass reflex speaker system

Tuner/Reception/Transmission

- Antenna: FM antenna
- Station presets: 20
- Tuner bands: FM
- Tuner enhancement: auto digital tuning, auto scan, Easy set (plug & play)

Connectivity

- Microphone: dual microphone sockets
- USB: USB host
- MP3 Link: 3.5mm stereo line in

Convenience

- Karaoke: MIC volume
- Display type: VFD display

Accessories

- Remote control: 13-key
- User Manual: Spanish, B-Portuguese, English
- Others: Quick start guide, batteries for remote control
- Warranty: World Wide Guarantee booklet

Dimensions

- Packaging height: 442 mm
- Packaging width: 780 mm
- Packaging depth: 430 mm
- Gross weight: 17.3 kg
- Net Weight: 15 kg
- Product dimensions (WxDxH): 704 x 364 x 385 mm

Power

- Power supply: 100 - 240V AC, 50/60Hz

Audio playback

- Disc playback modes: repeat/shuffle/program, repeat/one/all/program
- Playback media: CD, CD-R, CD-RW, MP3-CD
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, program play, repeat, shuffle, stop

Audio recording

- USB recording sources: CD
- USB recording modes: instant record, single disc, single track
- Recording media: USB device



Issue date 2015-01-15

Version: 2.0.4

12 NC: 8670 000 92599
EAN: 87 12581 65242 5

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Avoid extensive use of the set in a volume higher than 85 decibel because this may damage your hearing.