



Philips
5.1 3D Blu-ray Home
theater

HDMI ARC & USB
1000W

HTB3570

Powerful cinematic surround sound with deep bass

Pump up your home entertainment experience with the Philips home cinema system HTB3570. Exposed speakers drivers offering powerful 1000W with double basepipes and immersive 3D Blu-ray Disc playback.

Great listening experience

- 1000W RMS power delivers great sound for movies and music
- Dolby TrueHD and DTS-HD for high fidelity surround sound
- Powerful speakers with double basspipes for great sound

Designed to enhance your cinema at home

- Modern design to complement your home environment

Simply enjoy all your entertainment

- Audio in to enjoy music from iPod/iPhone/MP3 player
- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- DivX Plus HD Certified for high definition DivX playback
- EasyLink to control all HDMI CEC devices via a single remote
- Turn your Smartphone into a remote for Philips AV products
- HDMI for high definition movies and picture quality
- SimplyShare to connect & stream all entertainment wirelessly
- Karaoke for endless singing entertainment at home

PHILIPS

Highlights

Full HD 3D Blu-ray




Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

1000W RMS power



1000W RMS power delivers great sound for movies and music

Dolby TrueHD and DTS-HD

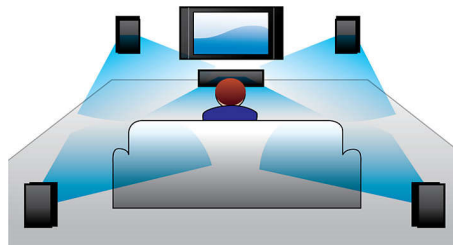

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

Double Bass Sound



Powerful speakers with a bass-reflex system and double basspipes enhance the lower frequencies and deliver rock-solid, deep bass sounds. You'll be able to hear the lowest murmur or the deepest roar.

HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital

multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures.

Philips MyRemote



The Philips MyRemote app lets you use your smartphone or tablet as a remote to control your Philips AV products that are connected to your home Wi-Fi network, and gives you instant control from anywhere in your home. It also comes with useful functions such as SimplyShare to connect and stream all entertainment wirelessly; and MySound to customize your listening preferences.

SimplyShare



Philips SimplyShare lets you share your music, movies & photos from tablet, smartphone & PCs to your home theater & Blu-ray player. You can stream all entertainment directly from your DLNA-enabled devices or use remote control to access & stream media files from your PC. For the best wireless experience, install the SimplyShare app on your tablet/smartphone. You are now ready to enjoy all your entertainment effortlessly.

Specifications

Sound

- Sound Enhancement: Night Mode, Auto Volume Leveler, Double Bass Sound, Treble and Bass Control
- Sound System: Dolby Digital Plus, Dolby True HD, DTS-HD Master Audio Essential
- Subwoofer output power: 166W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Center speaker output power: 166W
- Satellite speaker output power: 4X166W
- Total Power RMS @ 30% THD: 1000 W

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Tallboy speakers
- Center speaker drivers: 1 x 3" Full range woofer
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer freq range: 20 - 150 Hz
- Center speaker impedance: 4 ohm
- Subwoofer driver: 1 x 8" woofer
- Subwoofer type: Passive
- Center speaker freq range: 150 - 20k Hz
- Drivers per Satellite speaker: 1 x 3" Full range woofer
- Subwoofer impedance: 4 ohm

Connectivity

- Front Connections: Audio in, Hi-Speed USB, Microphone In
- Rear Connections: Composite video (CVBS) output, Digital coaxial in, Digital optical in, Easy-Fit Speaker Jacks, Ethernet, HDMI 1.4 output (ARC), Fixed FM Antenna, USB (For VOD/BD-LIVE only), AUX in

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40
- RDS: Station Name

Outer Carton

- EAN: 87 12581 68406 8
- Length: 66.9 cm
- Number of consumer packagings: 1
- Width: 40 cm
- Gross weight: 21.66 kg
- Height: 54.7 cm
- Nett weight: 19.84 kg
- Tare weight: 1.82 kg

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, 21:9 format subtitle support, Dynamic Lipsync, System standby
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color

Power

- Power consumption: 160 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.5 W

Packaging dimensions

- Height: 54.7 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 66.9 cm
- Depth: 40 cm
- Number of products included: 1
- EAN: 87 12581 68406 8
- Gross weight: 21.66 kg
- Nett weight: 19.84 kg
- Tare weight: 1.82 kg

Product dimensions

- Height: 5.8 cm
- Width: 43.5 cm
- Depth: 28 cm
- Weight: 2.64 kg

Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, HDMI cable, User Manual, FM antenna

Dimensions

- Main Unit (W x H x D): 435X56.3X286.5 mm
- Main Unit Weight: 2.66 kg
- Center Speaker (W x H x D): 223 x 100x 80 mm
- Center Speaker Weight: 0.57 kg
- Centre Speaker cable length: 2 m
- Subwoofer (W x H x D): 178 x 303 x 343 mm
- Subwoofer Weight: 3.67 kg
- Tallboy Speaker (W x D x H): 247 x 242 x 1090 mm
- Tallboy Speaker Weight: 2.66 kg
- Tallboy Speaker Cable length: 10 m
- Subwoofer cable length: 3 m

Audio Playback

- Compression format: AAC, FLAC, MP3, Ogg Vorbis, WAV, WMA, Dolby Digital, DTS
- MP3 bit rates: 32 - 320kbps

File Format

- Audio: aac, mka, mp3, wma
- Video: avi, divx, mkv, mp4, mpeg, mpg, wmv
- Picture: GIF, JPEG, JPG

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Specifications

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Zoom

Video Playback

- Compression formats: AVCHD, DivX Plus HD, MPEG1, MPEG2, MPEG4, H.264, ISO, WMV 9



Issue date 2024-05-02

Version: 6.0.2

EAN: 87 12581 68406 8

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* To check whether Video on Demand is available in your country,
please visit www.philips.com/blu-ray.

* DivX, DivX Certified, and associated logos are trademarks of
DivXNetworks, Inc. and are used under license.

* Dolby and the double-D symbol are registered trademarks of Dolby
Laboratories Inc.