



Philips Fidelio  
Headphones with mic

### High-resolution audio

In-ear  
Ultra-soft silicone caps  
Flat cable



S1SB

## High fidelity, premium quality

Wherever you go

Philips Fidelio S1 headphones are precisely engineered to deliver natural, balanced sound, revealing every detail as the artist intended. Amazing sound presented in a lightweight yet durable design for true comfort and pleasure on the go.

#### Designed for precision

- High-resolution audio reproduces music in its purest form
- High-powered 13.5-mm neodymium drivers for exceptional sound
- Semi-closed back design for sound balance and bass extension
- Engineered metal housing reduces vibration and resonance
- Handpicked, tuned and tested drivers for a precise match

#### Listen in comfort

- Lightweight aluminium housing with refined brushed finish
- Ergonomic earphones fit perfectly while dispersing pressure
- Elasticised ring for in-ear stability and super-secure fit
- Comply™ Foam Tips for superb custom fit and noise isolation
- Ultra-soft silicone tips in 3 sizes for a custom, snug fit

#### Created for convenience

- Switch between music and calls with in-line control and mic
- Durable flat cable keeps your headphones tangle-free

**PHILIPS**  
Fidelio

Headphones with mic  
High-resolution audio In-ear, Ultra-soft silicone caps, Flat cable

# Highlights

## 13.5-mm neodymium drivers



Each speaker driver is carefully handpicked, tuned and tested before being paired to ensure delivery of the most balanced, natural sound. The 13.5-mm drivers utilise high-power neodymium magnets to deliver deep bass impact, transparent mid-range and refined high frequencies.

## Comply™ Foam Tips




Enhance your listening experience with the supplied Comply™ Foam Tips. The tips provide a stay-in-place fit coupled with amazing all-day comfort, while providing noise insulation, allowing you to tune out from the world and into your music.

## Elasticised ring

Elasticised ring for in-ear stability and super-secure fit

## 3 sizes of soft silicone tips

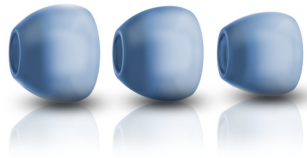

The Fidelio S1 in-ear headphones come with 3 pairs of acoustically sealed silicone tips to ensure a snug fit as well as longer wearing comfort.

## Engineered metal housing



The metal housing is meticulously engineered to reduce resonance and vibration, delivering authentically precise sound marked by incredible sound detail.

## Ergonomic earphones



The Fidelio S1 earphones are ergonomically shaped to fit your ear's natural curve, all the

S1SB/00

while dispersing pressure. Their lightweight aluminium construction and superior materials ensure long-lasting comfort, allowing you to experience true comfort as you enjoy your music to the fullest.

## Handpicked, tuned and tested



Each speaker driver is specially tested and handpicked for ideal stereo pairs, together delivering superbly deep bass, transparent mid-range and refined high frequencies.

## Lightweight aluminium housing



Lightweight aluminium housing with refined brushed finish

## Soft and durable flat cable

Durable flat cable keeps your headphones tangle-free

# Specifications

## Sound

- Frequency response: 5 - 40,000 Hz
- Sensitivity: 107 dB
- Speaker diameter: 13.5 mm
- Maximum power input: 40 mW
- Impedance: 32 ohm
- Acoustic system: Semi-closed

## Connectivity

- Cable Connection: 3.5 mm 4 pole (1.2 M)
- Compatible with: iPhone®, BlackBerry®, HTC, LG, MOTOROLA, Sony, Nokia\*, SAMSUNG\*.  
\*Extra connector available through customer support for Sony Ericsson and older models from NOKIA and SAMSUNG

## Accessories

- Storage pouch



Issue date 2015-10-30

Version: 5.0.4

12 NC: 8670 001 08921  
EAN: 06 92341 07245 92

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)