



Philips  
Soundbar 2.1 with wireless  
subwoofer

240 W max. Wireless subwoofer

Dolby Atmos®  
DTS Play-Fi compatible  
Connects with voice assistants



TAB8405

## The one with front-row sound

Heighten the sound of every movie, sports event and playlist. This sleek soundbar with wireless subwoofer and Dolby Atmos gives you better bass and clearer voices. Plus it's easy to incorporate into a multi-room setup.

### Easy control. Distinctive looks.

- Distinctive geometric design. Easy placement
- Connects to your favourite voice assistant-enabled devices
- Easily connect to your favourite sources

### Unpack. Connect. Enjoy.

- 4K pass-through. Dual HDMI inputs
- HDMI eARC. Enjoy the latest surround-sound formats
- Play-Fi. From multi-room audio to surround sound
- Spotify Connect. Bluetooth. Apple AirPlay 2. Optical-in

### The sound that you want for the content that you love

- 2.1 channels. 200 W RMS. 240 W max (10% THD)
- Dolby Atmos. Heighten the excitement
- Smart soundbar. Cinematic sound
- Stadium EQ Mode. You'll feel like you're there


# PHILIPS

Soundbar 2.1 with wireless subwoofer  
240 W max. Wireless subwoofer Dolby Atmos®, DTS Play-Fi compatible, Connects with voice assistants

TAB8405/10

# Highlights

## Cinematic sound

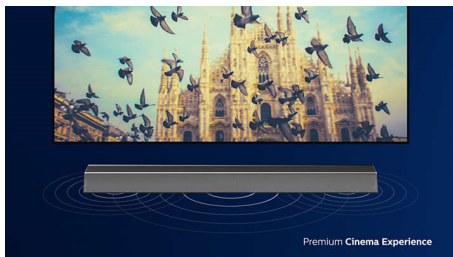

This soundbar brings a new dimension of sound to everything you watch and every track you love. 2.1 channels make soundtracks richer, effects more thunderous and dialogue clearer. The wireless subwoofer adds impact to every explosion and every beat.

## Dolby Atmos®




Increase the drama no matter what you watch. This Dolby Atmos-compatible soundbar reproduces depth as well as height, creating virtual three-dimensional surround sound that flows above and around you.

## Stadium EQ Mode

Experience the excitement of live sports, right there in your living room. Stadium EQ Mode immerses you in ambient crowd noise, just like you were sitting in the stadium! Be thrilled by

every crucial moment—and still hear crystal-clear commentary.

## Play-Fi. Multi-room and more

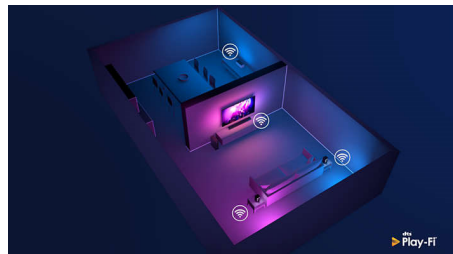

Easy Play-Fi compatibility will make this soundbar the star of your multi-room set-up. You can sync Play-Fi-compatible speakers for multi-room audio or even create a true surround-sound system—all via the Philips Sound app or the Play-Fi app.


## All of your favourite sources

For music, Spotify Connect lets you stream Spotify's best-quality signal over Wi-Fi. You can also stream hi-res playlists from your mobile device via Apple AirPlay 2 or Bluetooth. For movies and gaming, 4K pass-through lets you connect 4K HDR video sources with no loss of resolution.

## HDMI eARC

Lose nothing from the mix when you're immersed in the drama. This soundbar is compatible with HDMI eARC, a high-speed connection that lets you experience the full effect of advanced audio formats like Dolby Atmos. The soundbar also has dual HDMI inputs.

## Connect with voice assistants

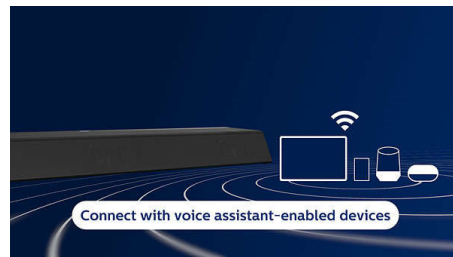

Ask Alexa-enabled devices, or any speaker that works with the Google Assistant, to play music through the soundbar. Prefer Siri? This soundbar works with Apple AirPlay 2, so you can ask her too. Turn the music up. Skip tracks. All completely hands-free.

## Distinctive geometric design

This soundbar boasts a unique slanted design and a low profile. When it comes to placement, the included wall brackets keep your options open. The compact design of the powerful subwoofer makes it easy to conceal.

## 2.1 channels. 240 W max

2.1 channels. 200 W RMS. 240 W max (10% THD)

## 4K pass-through. Dual HDMI-in

4K pass-through. Dual HDMI inputs

## Spotify Connect. Bluetooth.

Spotify Connect. Bluetooth. Apple AirPlay 2. Optical-in



# Specifications

## Sound

- Sound Enhancement: Treble and Bass Control, Subwoofer volume control
- Equalizer settings: Movie, Music, Voice, Stadium, Custom
- Total harmonic distortion: 10%
- Speaker system output power: 240 W max/200 W RMS (10 % THD)

## Loudspeakers

- Subwoofer freq range: 40 - 160 Hz
- Subwoofer type: Active, Wireless subwoofer
- Subwoofer impedance: 3 ohm
- Number of sound channels: 2.1
- Number of woofers: 1
- Woofer diameter: 5.25"
- Soundbar freq range: 160 - 20k Hz
- Soundbar impedance: 8 ohm x 2 + 4 ohm
- Front drivers: 2 full range (L+R), 2 tweeters (L+R)
- External subwoofer enclosure: Bass reflex

## Connectivity

- Bluetooth: Receiver
- Bluetooth version: 4.2
- Bluetooth profiles: A2DP, AVRCP, Multipoint (Multipair) support, Streaming Format: SBC
- EasyLink (HDMI-CEC)
- Aux in: 3.5 mm
- USB playback
- Optical input x 1
- HDMI content protection: HDCP 1.4/2.3
- HDMI IN x 2
- HDMI Out (eARC/ARC) x 1
- Wi-Fi: IEEE 802.11 a/b/g/n/ac, 2.4 GHz/5 GHz
- DLNA Standard: No
- Multiple speaker connection
- Multiple speaker technology: DTS Play-Fi Multi-room
- Smart Home: Works with OK Google, Works with Alexa, Works with Apple AirPlay 2, Built-in Chromecast, Spotify Connect
- Wireless speaker connection: Subwoofer

## Supported Audio Formats

- HDMI ARC/eARC: Dolby Atmos®, Dolby Digital, Dolby Digital plus, Dolby TrueHD, LPCM 2ch, Dolby MAT
- Play-Fi: AIFF, FLAC, MP3, WAV, MPEG4 AAC, MPEG4 M4A
- Bluetooth: SBC

- HDMI IN1/IN2: Dolby Atmos®, Dolby Digital, Dolby Digital plus, Dolby TrueHD, LPCM 2ch, Dolby MAT
- USB: MP3, WAV, FLAC
- Optical: Dolby Digital, LPCM 2ch

## Outer Carton

- Length: 105.5 cm
- Number of consumer packages: 2
- Width: 57 cm
- Gross weight: 20 kg
- Height: 18 cm
- GTIN: 1 48 95229 10995 4
- Net weight: 14.4 kg
- Tare weight: 5.6 kg

## Convenience

- Remote Control
- Night mode: No

## Compatibility

- Smartphone/tablet APP control

## Power

- Main unit power supply: 100-240 V AC, 50/60 Hz
- Subwoofer power supply: 100-240 V AC, 50/60 Hz
- Subwoofer standby power: < 0.5 W
- Main unit standby power: < 0.5 W
- Auto standby

## Packaging dimensions

- Height: 15 cm
- Packaging type: Box
- Type of shelf placement: Laying
- Width: 103 cm
- Depth: 42.5 cm
- Number of products included: 1
- EAN: 48 95229 10995 7
- Gross weight: 9.3 kg
- Net weight: 7.2 kg
- Tare weight: 2.1 kg

## Accessories

- Included accessories: Remote Control, 1 x CR2025 Battery, Power cord, Wall mount bracket, Quick start guide, World Wide Warranty leaflet

## Design


- Colour: Dark grey
- Wall mountable

## Dimensions

- Main Unit (W x H x D): 900 x 57 x 110 mm
- Main Unit Weight: 2.4 kg
- Subwoofer (W x H x D): 122 x 403 x 300 mm
- Subwoofer Weight: 4.8 kg

## Video

- 3D pass-through
- Video Enhancement: 4K Video Pass-through, Dolby Vision, HDR10, HDR10+, HLG

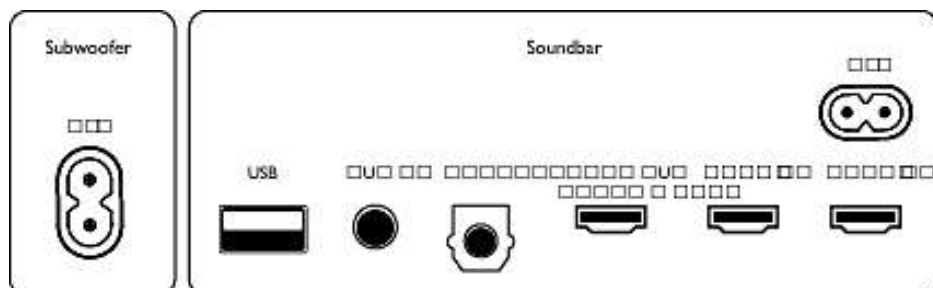

Issue date 2024-04-05

Version: 7.1.1

EAN: 48 95229 10995 7

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

