



Philips
5.1 Home theatre with
FullSound™

1000 W RMS power

DVD playback

HTS3375X

Spectacular surround sound with deep powerful bass

High definition pictures and surround sound delivered by this system provide amazing home entertainment. Enjoy crisp pictures with 1080p HDMI upscaling, and playback from USB drives, portable media players and virtually any sort of disc.

Brings audio and video to life

- DoubleBASS for an extended, deep bass experience
- Clear Voice for more audible vocals in movies and music
- FullSound™ to bring your MP3 music to life
- HDMI 1080p upscales to high definition for sharper pictures
- Karaoke scoring for fun and exciting song contests at home

Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays video/music from USB flash drives

Easy to set up and use

- HDMI cable included
- EasyLink controls all EasyLink products with a single remote

Plays all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays WMV, DivX, WMA, MP3 and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW, DVD+R DL


PHILIPS

sense and simplicity

5.1 Home theatre with FullSound™
1000 W RMS power DVD playback

Highlights

FullSound™

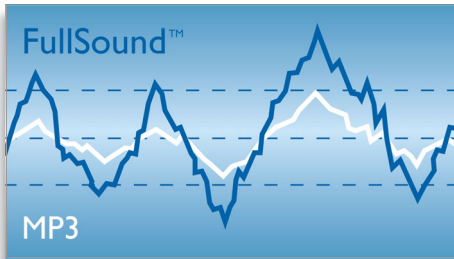

Philips' innovative FullSound technology faithfully restores sonic details to compressed MP3 music, dramatically enriching and enhancing it, so you can experience CD music without any distortion. Based on an audio post-processing algorithm, FullSound combines Philips' renowned expertise in music reproduction with the power of the latest generation Digital Signal Processor (DSP). The result is fuller bass with more depth and impact, boosted voice and instrument clarity, and rich detail. Rediscover your compressed MP3 music in true-to-life sound that will touch your soul and move your feet.

HDMI 1080p




HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analogue - delivering perfect picture and sound quality, completely free from noise.

EasyLink




EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Hi-Speed USB 2.0 Link

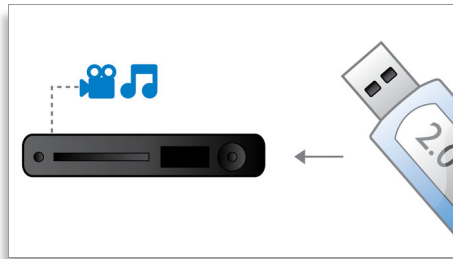

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Karaoke scoring

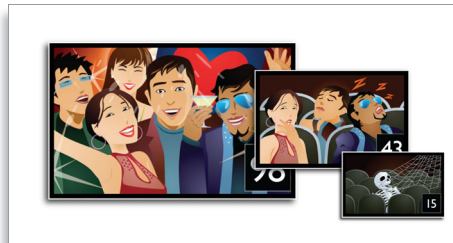

Add a dash of fun to your Karaoke sessions with Karaoke Scoring. Allow your

HTS3375X/78


performance to be judged for further improvement, or for friendly competitions. Karaoke Scoring automatically rates your singing and gives you a humorous picture that is tied to how well you did. The fun never ends.

DivX Ultra Certified



With DivX support, you can enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files such as movies, trailers and music videos on media, e.g. CD-R/RW and DVD recordable discs. DivX Ultra merges DivX playback with great features including integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Plays it all

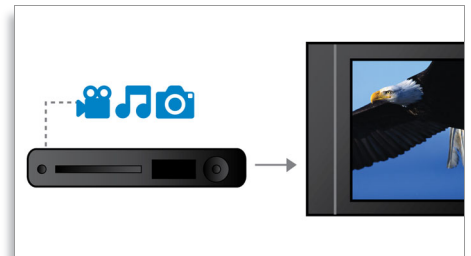

Play virtually any media format you want - whether they are WMV, DivX, MP3s or JPEGs. Experience the unbeatable convenience of great playability and the luxury of sharing media files on your TV or home theatre system - in the comfort of your living room.



Specifications

Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video Upscaling (720p, 1080i/p)

Sound

- Output power (RMS): 6 x 167 W
- D/A converter: 24-bit, 192 kHz
- Frequency response: 40-20,000 Hz
- Signal to noise ratio: >60 dB
- Sound System: DTS, Dolby Digital, Dolby Prologic II, Stereo
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode
- Equalizer settings: Action, Rock, Classic, Concert, Drama, Lounge, Gaming, Sports

Video Playback

- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, WMV, MPEG4
- Playback Media: DVD-Video, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD, CD-R/CD-RW
- Video disc playback system: NTSC, PAL

Audio Playback

- Compression format: MP3, WMA
- Playback Media: DVD+R/+RW, DVD-R/-RW
- MP3 bit rates: 32-256 kbps and VBR

Still Picture Playback

- Picture Compression Format: JPEG
- Playback Media: DVD+R/+RW, CD-R/RW, DVD-R/-RW, USB flash drive
- Picture Enhancement: Rotate, Zoom, Slideshow with music playback

Tuner/Reception/Transmission

- Tuner Bands: FM

Connectivity

- Front/Side connections: Hi-Speed USB, MP3 Line-in, Microphone input 3.5 mm jack
- Rear Connections: HDMI output, Component

Video output, Composite video (CVBS) output, AUX in, FM Antenna, Easy-Fit speaker connectors, Digital coaxial in, Digital optical in

Power

- Power supply: 120/230 VAC, 50/60 Hz
- Standby power consumption: < 1 W
- Power consumption: 180 W

Loudspeakers

- Satellite Speaker: 2 Floor standing pillars
- Satellite speaker drivers: 3" full-range woofer
- Satellite speaker impedance: 4 ohm
- Satellite speaker freq range: 150-20,000 Hz
- Centre speaker drivers: 3" full-range woofer
- Centre speaker impedance: 4 ohm
- Centre freq range: 150-20,000 Hz
- Subwoofer driver: 6.5" high-efficiency woofer
- Subwoofer impedance: 4 ohm
- Subwoofer freq range: 40-150 Hz
- Subwoofer type: Passive

Accessories

- Included accessories: Remote Control, 2 x AAA Batteries, HDMI cable, CVBS video cable, FM antenna, Quick start guide, User Manual, World Wide Warranty leaflet

Dimensions

- Set dimensions (W x H x D): 360 x 57 x 331 mm
- Set weight: 3.10 kg
- Surround Speaker dimensions (W x H x D): 103 x 203 x 71 mm
- Surround Speaker Weight: 0.58 kg
- Center speaker dimensions (W x H x D): 244 x 103 x 74 mm
- Centre Speaker Weight: 0.849 kg
- Subwoofer dimensions (W x H x D): 163 x 363 x 369 mm
- Subwoofer Weight: 4.703 kg
- Packaging dimensions (W x H x D): 455 x 434 x 445 mm
- Weight incl. Packaging: 13.3 kg



Issue date 2010-04-21

Version: 6.2.7

12 NC: 8670 000 51369
EAN: 87 12581 47605 2

© 2010 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

* Avoid extensive use of the set at a volume higher than 85 decibels because this may damage your hearing.
* Adapter supplied is needed for all Latin American countries, except in Brazil.