



Philips
Micro music system

Bluetooth®

DVD, DivX
CD, USB, FM
70W max



BTD2180

Sound that fits your home

Obsessed with sound

Listen to all your digital music from your Smartphone via Bluetooth®. The Philips sound system also plays DVDs, DivX titles, CDs and MP3-CDs. Enjoy your favorites in true style.

Enrich your sound experience

- Bass Reflex Speaker System delivers a powerful, deeper bass
- Digital Sound Control
- 70W RMS maximum output power

Easy to use

- Wireless music streaming via Bluetooth
- FM digital tuning to preset up to 20 stations
- Motorized CD loader for convenience access
- Wake up and sleep timer functions


Enjoy your favorite movies and music

- Play DVD, (S)VCD, MP3-CD, CD(RW) and Picture CD
- Dolby Digital for ultimate movie experience
- USB Direct for easy MP3 music playback
- Karaoke for endless singing entertainment at home

PHILIPS

Highlights

Wireless music streaming

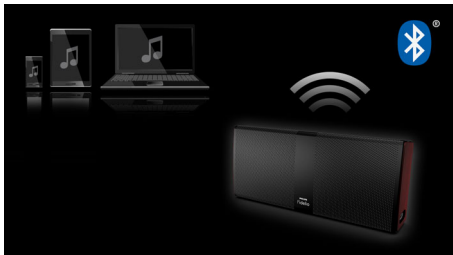

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker

box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

Digital Sound Control

Digital Sound Control offers you a choice of pre-set balanced, clear, powerful, warm and bright controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

Karaoke for endless singing



Karaoke for endless singing entertainment at home

Specifications

Sound

- Sound Enhancement: Digital Sound Control
- Sound System: Dolby Digital
- Maximum output power (RMS): 70W

Loudspeakers

- Speaker drivers: Dome Tweeter with 4" woofer

Video Playback

- Playback Media: DivX, DVD-Video, Picture CD, Video CD/SVCD, DVD+R/+RW, DVD-R/-RW
- Disc Playback Modes: A-B Repeat, Angle, PBC, Slow Motion, Zoom, Parental control, Disc Menu, Fast Backward, Fast Forward, OSD, Resume Playback from Stop
- DVD Region.: 3
- Video Enhancement: Progressive Scan

Audio Playback

- Playback Media: MP3-CD, CD, CD-R, CD-RW
- Disc Playback Modes: Repeat/one/all/program, Fast Forward/Backward, Next/Previous Track Search
- Loader Type: Motorised, Tray
- USB Direct Modes: Fast Backward/Fast Forward, Play/Pause, Previous/Next, Program Play, Repeat, Stop

Still Picture Playback

- Picture Compression Format: JPEG
- Picture Enhancement: Slideshow with MP3 playback
- Playback Media: Picture CD, CD-R/RW, DVD+R/+RW

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning

- Tuner Enhancements: Auto Store
- Station presets: 20

Connectivity

- Video Output - Analog: Composite CVBS (yellow cinch), Component Y Pb Pr (cinch)
- Audio Connections: Analogue Audio In (L/R)
- USB: USB host
- Bluetooth profiles: A2DP
- Microphone: Microphone socket

Convenience

- Alarms: CD Alarm, Sleep timer, Radio Alarm, USB alarm
- Clock: On main display
- Indications: DIM mode

Accessories

- Included accessories: Composite video cable (Y), AC Power Cord
- User Manual: Multi-languages
- Remote control

Dimensions

- Gross weight: 6.7 kg
- Main unit depth: 220.4 mm
- Main unit height: 119 mm
- Main unit width: 180 mm
- Main speaker dimensions (W x D): 140 x 185 mm
- Main speaker height: 260 mm
- Packaging depth: 208 mm
- Packaging height: 315 mm
- Packaging width: 663 mm

Power

- Power supply: 110-240V, 50/60 Hz



Issue date 2014-07-03

Version: 2.0.3

12 NC: 8670 001 03801
EAN: 87 12581 69111 0

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com