



Philips Fidelio
SoundCurve wireless
speaker

with AirPlay



DS8800W

Experience true fidelity

with this wireless speaker

Get more out of your music, gaming and video experience now. Smart and chic, this Philips DS8800W/10 speaker delivers stunning sound and ensures convenience with wireless streaming from iPod Touch, iPhone, iPad and iTunes via AirPlay.

Exceptional sound performance

- SoundCurve for superb crystal-clear sound
- FullSound enhances sound detail for rich and powerful sound
- Bass-reflex design for deep, tight bass reproduction
- 30W RMS total output power

Chic and classy

- Stylish design in an aluminum and fabric finish

Advanced versatility

- Stream music with AirPlay wireless technology
- Charge your iPod/iPhone/iPad via USB port
- AUX-in for easy connection to almost any electronic device

Intuitive control

- SoundStudio app for complete control of audio settings
- Remote control complements speaker design and finishing




product
design award

2012

PHILIPS
Fidelio


Highlights

SoundCurve

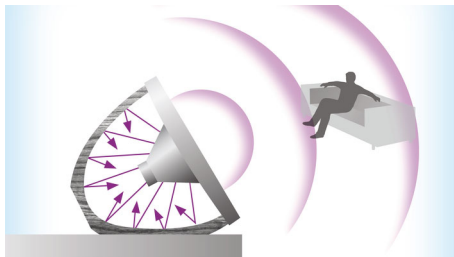

The carefully designed curved back cover of this Philips docking speaker creates a highly effective acoustic structure for sound reproduction. Its clean curve enforces the rigidity of the speaker cabinet, dramatically reducing internal resonance and eliminating the vibration and distortion of sound. You get to enjoy superb crystal-clear sound in stunning looking speakers.

FullSound™

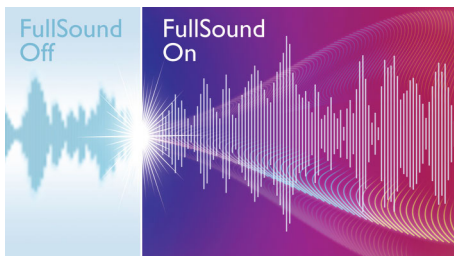

Philips' proprietary FullSound technology uses latest-generation Digital Signal Processing to faithfully enhance music rendering. Music content is dynamically analyzed and optimized to let you experience music with great detail and warmth.

Bass-reflex design


Bass-reflex acoustic load uses a bass pipe tuned to the acoustic volume of the speaker box, in order to reproduce deep bass from compact enclosures. The carefully designed profiled bass-pipe helps air flow and allows for deep and impactful bass, even at loud volumes while minimizing air turbulence that may cause distortion.

AirPlay wireless technology



AirPlay lets you stream your entire iTunes music collection to your Fidelio docking stations. It plays wirelessly from the iTunes program on your computer, iPhone, iPad or iPod Touch - to any AirPlay-enabled speaker in your home. All you have to do is ensure your speakers are connected to your Wi-Fi network. AirPlay also lets you play simultaneously on every speaker in every room. Get your favorite tunes to follow you whichever room you go.

SoundStudio App

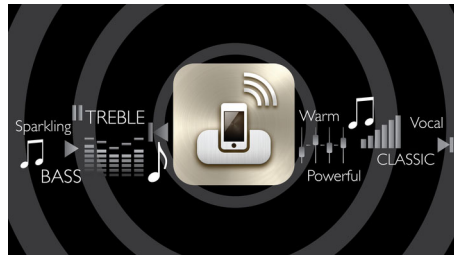

Have music the way you like it now. SoundStudio truly puts the power over your music into the palm of your hands. It lets you change every aspect of sound, using only your iPhone, with controls that are intuitive and simple. Now you can tweak, tailor and create your desired sound experience and have your favorite songs come to new life. SoundStudio also lets you listen to thousands of Internet radio stations worldwide, broadening your music experience even further.

USB charging

This docking device is equipped with a USB port which allows you to charge your iPod, iPhone or iPad.

Specifications

Compatibility

- Compatible with: all iPod, iPhone and iPad

iPod/iPhone/iPad App

- App name: SoundStudio, Free download from App store
- Compatibility: iOS 4.3 to iOS 10.3
- Compatibility: iPod touch, iPhone, iPad iOS 4.3 or later

Loudspeakers

- Speaker drivers: 2 x 3" / 8cm full-range driver
- Output power (RMS): 30W

Accessories

- Included accessories: Remote Control, 3.5mm stereo line in cable, AC Power Cord, Quick start guide, Warranty certificate, World Wide Warranty leaflet

Connectivity

- AirPlay
- Aux in
- USB: for charging iPod/iPhone/iPad

Dimensions

- Product dimensions (WxDxH): 455 x 150 x 165 mm
- Packaging dimensions (WxDxH): 525 x 225 x 215 mm
- Product weight: 2.5 kg
- Weight incl. Packaging: 3.5 kg

Power

- Power supply: 100 - 240V AC, 50/60Hz



Issue date 2020-07-08

Version: 6.0.11

12 NC: 8670 000 66131
EAN: 87 12581 55630 3

© 2020 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com