

Philips  
Blu-ray Disc player



BDP7300



## Astound your senses with HD audio & video

Enjoy the thrill of full high definition pictures delivered by the BDP7300. Indulge in every detail, silky smooth action and vivid colors with x.v. Colour. Current DVD collection can also be enjoyed, with upscaling to 1080p via HDMI.

### See more

- Blu-ray Disc playback for sharp images in full HD 1080p
- 1080p at 24 fps for cinema-like images
- DivX Ultra for enhanced playback of DivX media files
- DVD video upscaling to 1080p via HDMI for near-HD images

### Hear more


- Dolby TrueHD and DTS-HD MA for HD 7.1 surround sound

### Engage more

- BD-Live (Profile 2.0) to enjoy online Blu-ray bonus content
- Hi-Speed USB 2.0 Link plays video/music from USB flash drive
- Enjoy all your movies and music from CD and DVD
- EasyLink to control all HDMI CEC devices via a single remote
- AVCHD enables you to enjoy HD camcorder videos on your TV


# Highlights

## Blu-ray Disc playback

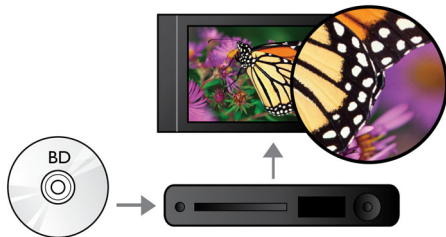

Blu-ray Discs have the capacity to carry high definition data, along with pictures in the 1920 x 1080 resolution that defines full high definition images. Scenes come to life as details leap at you, movements smoothen and images turn crystal clear. Blu-ray also delivers uncompressed surround sound - so your audio experience becomes unbelievably real. The high storage capacity of Blu-ray Discs also allow a host of interactive possibilities to be built in. Seamless navigation during playback and other exciting features like pop-up menus bring a whole new dimension to home entertainment.

## Dolby TrueHD and DTS-HD MA

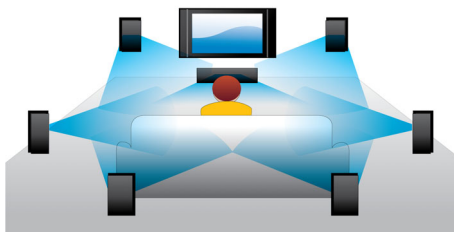

DTS-HD Master Audio and Dolby TrueHD delivers 7.1 channels of the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. DTS-HD Master Audio and Dolby TrueHD complete your high definition entertainment experience.

## BD-Live (Profile 2.0)



BD-Live opens up your world of high definition even further. Receive up-to-date content just by connecting your Blu-ray Disc player to the internet. Exciting new things like exclusive downloadable content, live events, live chats, gaming and on-line shopping all await you. Ride the high definition wave with Blu-ray Disc playback and BD-Live

## 1080p at 24 fps



Bring true cinema experience into your living room with 24 frames-per-second video. Original films are all recorded at this frame rate, providing an ambience and image texture that is so unique. Philips Blu-ray Disc players are equipped to bring you 24fps directly from Blu-ray Discs - thus giving you sensational cinema-like high definition images that will astound you.-

## DVD video upscaling



HDMI 1080p upscaling delivers images that are crystal clear. DVD movies in standard

definition can now be enjoyed in high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multi-channel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

## DivX Ultra



DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

# Specifications

## Picture/Display

- Aspect ratio: 16:9, 4:3
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling
- D/A converter: 12 bit / 150MHz

## Video Playback

- Playback Media: BD Video, BD-R/RE 2.0, DVD, DVD-Video, DVD+R/+RW, DVD-R/-RW, DivX, Video CD, CD, CD-R/CD-RW, USB flash drive
- Compression formats: H.264, VC-1, MPEG2, DivX Ultra, AVCHD, WMV, XviD
- Disc Playback Modes: Standard Play, Pause, Search forward/reverse, Slow Forward, Resume Playback from Stop, Skip, Disc Menu, Repeat, A-B Repeat, Zoom, Angle
- Video Enhancement: Deep Color, x.v. Color, Video Upscaling, Progressive Scan
- BD Region Code: B
- DVD Region.: 2

## Sound

- Sound System: DTS-HD Master Audio Essential, Dolby True HD, Dolby Digital Plus, DTS, Dolby Digital
- D/A converter: 24 bit, 192 kHz
- Dynamic Range (1kHz): 100 dB
- Frequency response: 100 Hz
- Signal to noise ratio: 110 dB

## Audio Playback

- Playback Media: CD, CD-R/RW, MP3-CD, MP3-DVD, USB flash drive
- Compression format: DTS, Dolby Digital, MP3, WMA, PCM

## Digital Photo Playback

- Playback Media: USB flash drive, DVD+R/+RW, DVD-R/-RW, CD-R/RW
- Picture Compression Format: JPEG
- Picture Enhancement: High Definition Resolution,

Slideshow, Rotate, Zoom

## Connectivity

- Rear Connections: HDMI output, Component Video output, Digital optical out, Digital coaxial out, Analog audio 5.1 channel out, Composite video (CVBS) output, Analog audio Left/Right out, Ethernet
- Front / Side connections: USB 2.0

## Convenience

- EasyLink (HDMI-CEC): One touch play, One touch standby
- Child Protection: Parental Control
- On-Screen Display languages: English, German, French, Dutch, Italian, Portuguese, Spanish, Danish, Finnish, Polish, Swedish, Turkish, Norwegian
- BD-Live (Internal 1GB memory)

## Accessories

- Included accessories: HDMI cable, Audio/Video cable, CD-R (User Manual), Quick start guide, Product Registration Card, Remote Control, 2 x AAA Batteries, User Manual
- User Manual: English, German, French, Dutch, Italian, Spanish, Portuguese, Danish/Norwegian, Finnish, Swedish, Polish, Greek, Turkish

## Power

- Power supply: 220-240V, 50/60 Hz
- Power consumption: 32 W
- Standby power consumption: 0.25W

## Dimensions

- Set dimensions (W x H x D): 0 x 0 x 0 mm
- Packaging dimensions (W x H x D): 520 x 138 x 395 mm
- Weight incl. Packaging: 5.36 kg
- Product dimensions (W x H x D): 435 x 58 x 308 mm
- Product weight: 3.42 kg



Issue date 2015-09-03

Version: 9.2.11

12 NC: 8670 000 48299  
EAN: 87 12581 45616 0

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)