

Philips
MP3 Mini Hi-Fi System

FWM582



Rip and play music instantly

with USB Rip-All

Get ready for a non-stop party! The FWM582 will let you enjoy ripped music files from your Hi-Fi system with your friends. Ultimate powerful bass and virtual surround sound, life's just a big, continuous concert!

Powerful sound you can hear and feel

- 420 W RMS total output power
- 2-Way Bass Reflex Speaker System for powerful sound
- Dual amplifier for better sound performance

Longer listening, greater enjoyment

- 3-disc changer for WMA/MP3-CD music playback
- Digital tuning with 40 pre-set stations for extra convenience
- 60 hours of WMA-CD or 30 hours of MP3-CD music playback
- Rip music from CDs, radio and karaoke onto a USB device
- Karaoke for endless karaoke entertainment at home

Personalized sound settings

- 3-step Dynamic Bass Boost
- Digital Sound Control for optimized music style settings
- Incredible Surround™ for enhanced audio enjoyment
- MAX Sound for instant power boost

PHILIPS
sense and simplicity

Highlights

3-disc changer for WMA/MP3-CD



3-disc changer for WMA/MP3-CD music playback

40-preset digital tuning



Digital tuning with 40 pre-set stations for extra convenience

3-step Dynamic Bass Boost



3-step Dynamic Bass Boost

Digital Sound Control



Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classical controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

60 hours of WMA-MP3-CD music



60 hours of WMA-CD or 30 hours of MP3-CD music playback

USB Rip All

With this smart feature you can easily listen to the music content of your portable MP3 player on your Hi-Fi system. Simply rip karaoke tunes and other desired music content from CDs, radio programmes or line-in music from your system directly to your USB device. Store your favourite cassette tapes and convert their content into MP3 format - without using a PC.


You can also pre-set a timer recording of your favourite radio show on your system and it will automatically record the show onto your USB device.

Karaoke




The Karaoke feature on your DVD player provides endless entertainment and maximum audio and singing enjoyment. You can enhance your performance by adding an 'echo' effect to your voice. The key controls allows you to choose the optimal key for your personal vocal range.

MAX Sound

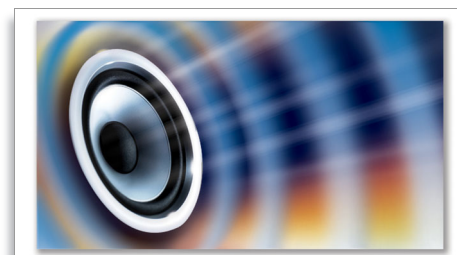

MAX Sound technology produces an instant boost in bass, maximizing volume performance and instantly creating the most impressive listening experience with just the touch of a button. Its sophisticated electronic circuitry calibrates existing sound and volume settings, instantly boosting bass and volume to maximum levels without distortion. The end result is a noticeable amplifying of both sound spectrum and volume and a potent audio boost that will add mileage to any music.



Specifications

Sound

- Total Sound Power (RMS): 420 W
- Output Power: 5400W PMPO
- Sound Enhancement: MAX Sound, Incredible Surround, Dynamic Bass Boost 3 steps, Digital Sound Control 4 modes, Virtual Ambience Control

Loudspeakers

- Number of Loudspeakers: 2
- Main Speaker: 6.5" woofer, 2" tweeter, 2 way, Bass Reflex Speaker System

Audio Playback

- Loader Type: 3 CD Carousel
- Number of Discs: 3
- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD
- Disc Playback Modes: Repeat/one/disc/programme, Shuffle Play, 40-Track Programmable
- USB Direct Modes: Play/Pause, Stop, Previous/Next, Fast Backward/Fast Forward, Repeat, Shuffle, Delete

Audio Recording

- Recording Media: USB device
- USB recording modes: Instant record, Programmed tracks, Schedule radio program, Single disc, Single track
- USB recording sources: CD, Tuner, Microphone in, Aux

Tuner/Reception/Transmission

- Auto digital tuning
- Station presets: 40
- Tuner Bands: FM, MW
- Tuner Enhancements: Auto Store, Easy Set (Plug &

Play)

Connectivity

- Audio Connections: RCA Aux in
- USB: USB host
- Headphone: 3.5 mm
- Microphone: Dual Microphone sockets
- Other connections: FM Antenna, MW Antenna

Convenience

- Alarms: CD Alarm, Radio Alarm, USB alarm, Sleep timer
- Clock: On main display
- Display Type: FTD
- Indications: DIM mode
- Karaoke: MIC volume, Echo control

Accessories

- Remote control: 36-key with 2xAA batteries
- User Manual: 16 language
- Quick start guide
- Guarantee booklet: Global version
- Included Accessories: FM/MW Antenna, Batteries for remote control

Dimensions

- Set dimensions (W x H x D): 265 x 310 x 384 mm
- Speaker Width: 273 mm
- Speaker Height: 310 mm
- Speaker Depth: 265 mm
- Packaging dimensions (W x H x D): 910 x 440 x 378 mm
- Weight incl. Packaging: 18.8 kg

Power

- Power supply: 100-240VAC, 50/60Hz



Issue date 2010-07-31

Version: 1.1.2

12 NC: 8670 000 47354
EAN: 87 12581 45031 1

© 2010 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com