



Philips Fidelio  
Micro music system

Bluetooth® aptX and NFC

Desktop or wall-mount option  
CD, USB, FM  
40W max

**BTM8010**

## Enjoy music wirelessly with Bluetooth®

### Obsessed with sound

Play CDs or radio, or stream wirelessly from devices with this Philips Fidelio music system. Bluetooth® aptX offers high quality sound, while NFC connects to devices automatically and instantly. Also enjoy the power of wOOx.

#### **Enrich your sound experience**

- 40W RMS maximum output power
- wOOx™ loudspeaker Technology for deep and powerful bass
- Fullsound™ to bring your MP3 music to life
- Dynamic Bass Boost for deep and dramatic sound

#### **Ease of Use**

- One-Touch with NFC-enabled smartphones for Bluetooth pairing

#### **Enjoy your music from multiple sources**

- Wireless music streaming via Bluetooth with Aptx support
- Play MP3/WMA-CD, CD and CD-RW
- USB Direct for MP3/WMA music playback
- Digital tuning with preset stations for extra convenience

**PHILIPS**  
Fidelio

# Highlights

## Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

## USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

## Play MP3/WMA-CD, CD and CD-RW



Audio compression technology allows large digital music files to be reduced up to 10 times in size without radically degrading their audio quality. MP3 or WMA are two of the

compression formats that let you enjoy a world of digital music on your Philips player. Download MP3 or WMA songs from authorized music sites on the Internet or create your own MP3 or WMA music files by ripping your audio CDs and transferring them onto your player.


## Digital tuning with presets



Simply tune into the station that you want to preset, press and hold the preset button to memorize the frequency. With preset radio stations that can be stored, you can quickly access your favorite radio station without having to manually tune the frequencies each time.

**40W RMS maximum output power**  
40W RMS maximum output power

## NFC technology

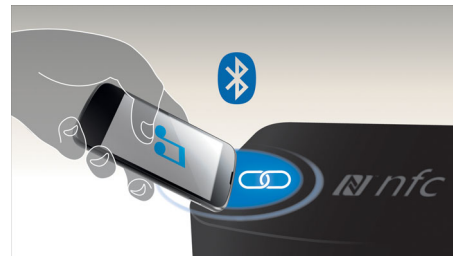

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing, and begin streaming music.

## Bluetooth with AptX support


Wireless music streaming via Bluetooth with Aptx support

## wOOx™ Technology



wOOx technology is a revolutionary loudspeaker concept that allows you to hear and feel profoundly deep bass that is richer than any other audio system. Special speaker drivers work in harmony with the wOOx bass radiator, and precise tuning between the main driver and the tweeter ensures smooth transitions from low-mid to high frequencies. Dual suspension and a totally symmetrical sandwich construction deliver low and precise base without noticeable distortion. wOOx produces exceptionally deep and dynamic bass by using the speaker box full volume to truly magnify the impact of the music.

## FullSound™

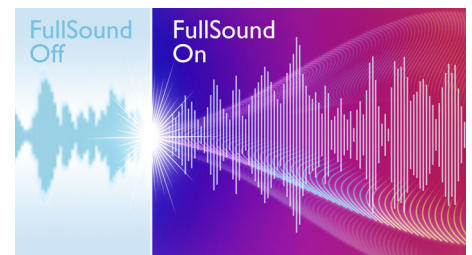

Philips' innovative FullSound technology faithfully restores sonic details to compressed MP3 music, dramatically enriching and enhancing it, so you can experience CD music without any distortion. Based on an audio post-processing algorithm, FullSound combines Philips' renowned expertise in music reproduction with the power of the latest generation Digital Signal Processor (DSP). The result is fuller bass with more depth and impact, boosted voice and instrument clarity, and rich detail. Rediscover your compressed MP3 music in true-to-life sound that will touch your soul and move your feet.



# Specifications

## Sound

- Sound enhancement: digital sound control, Dynamic Bass Boost, wOOx™ Technology
- Volume control: up/down
- Total Sound Power (RMS): 40 W

## Loudspeakers

- No. of built-in speakers: 2
- Speaker drivers: 2.75" woofer

## Audio playback

- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- Playback media: CD, CD-R/RW, MP3-CD, USB flash drive, WMA-CD
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop

## Tuner/Reception/Transmission

- Tuner bands: FM mono, FM stereo
- Station presets: 20
- RDS: program type, radio text, RDS clock set, station name
- Antenna: FM antenna (75 ohm)
- Tuner enhancement: auto digital tuning, auto scan, Easy set (plug & play)

## Connectivity

- MP3 Link: 3.5mm stereo line in

- USB: USB host
- Bluetooth profiles: A2DP, apt-X, AVRCP
- Bluetooth: Bluetooth V2.1

## Convenience

- Alarms: CD Alarm, Radio Alarm, USB alarm
- Clock: On main display, sleep timer
- Display Type: VFD display

## Accessories

- Included accessories: AC-DC Adapter, FM antenna
- Remote control: 31-key remote
- User Manual: Short user manual

## Dimensions

- Set dimensions (W x D): 500 x 164 mm
- Set height (with stand): 234 mm
- Packaging width: 456 mm
- Packaging height: 251 mm
- Packaging depth: 197 mm
- Gross weight: 4.2 kg
- Net weight: 3.1 kg

## Power

- Power supply: 110-240V, 50/60 Hz

## Audio Playback

- Loader Type: Slot



Issue date 2014-08-09

Version: 1.4.4

12 NC: 8670 001 06294  
EAN: 08 71258 16969 86

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)