

Philips
Cube micro sound system

Dock for iPod

DCM105



Obsessed with sound

Sound that fits your home

Dock your iPod player. Listen to your music from one simple control. Great sound and stylish design. Sit back and relax, enjoy your music all day, your way.

Enjoy your music from multiple sources

- Play and charge your iPod simultaneously
- Play CD, CD-R and CD-RW
- Digital tuning with preset stations for extra convenience

Superb sound quality

- 10 W RMS total output power
- Dynamic Bass Boost for deep and dramatic sound

Design that blends into your interior

- Compact design fits any space, any lifestyle
- Integrated dock for portable music enjoyment without clutter


PHILIPS

Highlights

Compact design

Compact design fits any space, any lifestyle. The compact set fits in every room due to its sleek design and size.

Play and charge your iPod

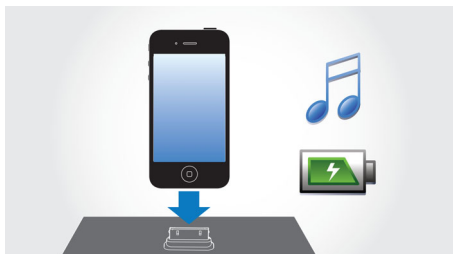

Enjoy your favourite MP3 music while charging your iPod! The dock lets you connect your iPod directly to the Docking entertainment system so you can listen to your favourite music in superb quality. It also charges your iPod while it plays so you can enjoy your music and not have to worry about your iPod battery running out. Use the remote control to navigate, select and playback the music stored on your iPod. The Docking entertainment system automatically charges your iPod while it is docked.

Play CD, CD-R and CD-RW



Philips is known for making products that are compatible with many discs available on the market. This audio system lets you enjoy music

from CD, CD-R and CD-RW. CD-RW (CD-Rewritable Compatible) means that your audio system can play both CD-Recordable (CD-R) and CD-Rewritable (CD-RW) discs. CD-R discs are recordable once and can be played on any audio CD player while CD-RW discs can be recorded and rewritten multiple times and can only be played back on compatible audio CD players.

10 W RMS



This Philips music system has 10 W RMS total output power. RMS refers to Root Mean Square, which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determine the sound power that is generated. The higher the wattage, the better the sound power emitted by the speaker.

Integrated dock


Convenient integrated dock.

Dynamic Bass Boost



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Digital tuning with presets

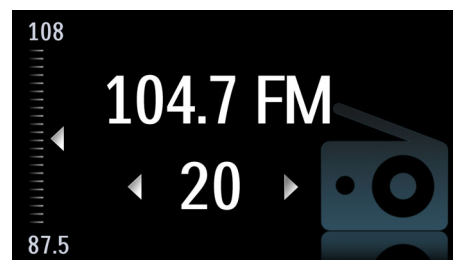

Simply tune into the station that you want to preset, then press and hold the preset button to memorise the frequency. With preset radio stations that can be stored, you can quickly access your favourite radio station without having to manually tune the frequencies each time.



Specifications

Audio playback

- Playback media: CD, CD-R, CD-RW
- Disc playback modes: repeat/shuffle/programme
- Docking playback modes: fast forward and reverse, next and previous track, play and pause

Sound

- Output power: 2 x 5 W RMS
- Sound enhancement: Dynamic Bass Boost, digital sound control
- Volume control: up/down

Loudspeakers

- Speaker drivers: 3.5" woofer
- Speaker types: bass reflex speaker system

Tuner/Reception/Transmission

- Tuner bands: FM stereo

Connectivity

- Audio/Video output: Headphone (3.5 mm)
- MP3 Link: 3.5 mm stereo line in

Convenience

- Alarms: CD alarm, radio alarm
- Clock: on main display, sleep timer
- Loader type: top
- Display type: LCD display

- Backlight colour: white
- Charging device: iPod

iPod compatibility

- Compatible with: iPod, iPod mini, iPod nano, iPod touch, iPod with colour display, iPod 5th generation

Accessories

- Cables/Connection: MP3 Link cable
- User Manual: multi-lingual
- Warranty: Worldwide Guarantee booklet

Dimensions

- Gross weight: 5.48 kg
- Main speaker dimensions (W x D): 150 x 197 mm
- Main speaker height: 152 mm
- Main unit depth: 250 mm
- Packaging width: 531 mm
- Main unit height: 152 mm
- Packaging height: 302 mm
- Main unit width: 150 mm
- Packaging depth: 202 mm

Power

- Power supply: 50 Hz
- Power supply: 220 - 240 V



Issue date 2013-12-10

Version: 1.0.3

12 NC: 8670 000 62365
EAN: 87 12581 53964 1

© 2013 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com