

Philips  
Soundbar speaker

3.1 CH wired subwoofer

Bluetooth®  
HDMI ARC  
150W

HTL2193B



## Unmatched voice clarity from 3.1 Ch

with Bluetooth and FM Radio

Upgrade your TV with enhanced voice clarity and virtual surround sound for a better cinematic experience, plus wireless music streaming over Bluetooth.

### Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Touch panel for intuitive playback and volume control

### Richer sound for watching TV and movies

- Dedicated center-channel speaker for superior voice clarity
- Virtual Surround Sound for a realistic movie experience
- Dolby Digital and Pro Logic II surround sound
- External subwoofer adds thrill to the action

### Connect and enjoy all your entertainment

- Wireless music streaming via Bluetooth
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Audio in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote
- FM digital tuning with auto scan and presets for ease of use
- Enjoy MP3 music directly from your portable USB devices

# PHILIPS

Soundbar speaker  
3.1 CH wired subwoofer Bluetooth®, HDMI ARC, 150W

HTL2193B/98


# Highlights

## Center-channel speaker




A centre-channel speaker dedicated especially to voice frequencies anchor speech to the centre of the screen. This offers improved voice positioning and clarity, increasing immersion in movies.

## Virtual Surround Sound

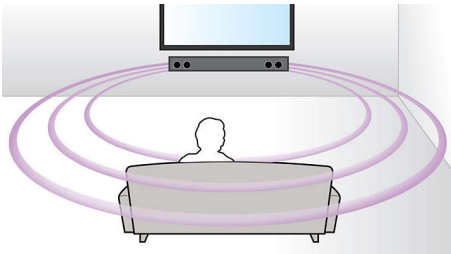

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## Dolby Digital and Pro Logic II

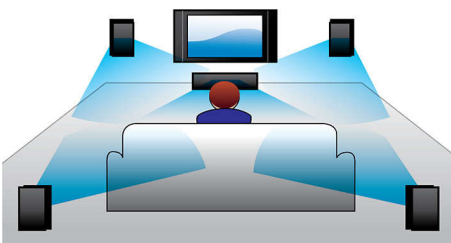

A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all


six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

## Bluetooth



Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

## FM digital tuning

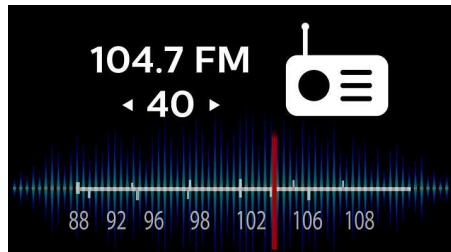

Digital FM radio delivers new music options and entertainment to your soundbar speaker, speaker system and home theater system. Auto scan is available for radio stations, so searching for your favorite channel will never take more than a few seconds. Preset radio stations can be stored, giving you instant access to all your favorite stations without manual tuning each time.

## USB playback



Simply plug in your device to the USB port on your Philips Soundbar speaker. Your digital music will be played directly from the device. Now you can share your favorite moments with family and friends.

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your Philips home cinema system. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## Low-rise profile



Low-rise profile for the perfect fit in front of your TV

## Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players



# Specifications

## Sound

- Sound Enhancement: Virtual Surround Sound, Treble and Bass Control, Night Mode, Audio sync, Movie, Music, Voice
- Sound System: Dolby Digital, Dolby pro-logic 2
- Subwoofer output power: 55 W
- Speaker output power: 32W x 3
- Total Power RMS @ 10% THD: 150 W

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer type: Passive
- Subwoofer impedance: 2 ohm
- Speaker Impedance: 4 ohm
- Drivers per Soundbar: 3 x race track woofers

## Connectivity

- Integrated Connections: Bluetooth
- Rear Connections: Digital coaxial in, Digital optical in, Subwoofer out, AUX in, HDMI 1.4 output (ARC), FM Antenna Socket
- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Top connections: Audio In (3.5mm), USB 2.0

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play,

One touch standby, Remote Control-Passthrough, System standby

## Power

- Power consumption: 30 W
- Power supply: 100-240VAC, 50-60Hz
- Standby power consumption: < 0.5 W

## Accessories

- Included accessories: AAA Battery (x1), Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, AC Adapter, FM antenna, Screws (x6), Optical audio cable

## Design

- Wall mountable

## Dimensions

- Main Unit (W x H x D): 950 x 51 x 69 mm
- Weight incl. Packaging: 6.6 kg
- Main Unit Weight: 1.62 kg
- Packaging (W x H x D): 395 x 418 x 295 mm
- Subwoofer (W x H x D): 165 x 240 x 295 mm
- Subwoofer Weight: 2.78 kg
- Subwoofer cable length: 3 m

## Audio Playback

- Compression format: MP3



Issue date 2024-04-13

Version: 4.1.7

EAN: 48 95185 61035 1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)