



Philips
docking speaker with
Bluetooth®

Bluetooth®
with Lightning connector
for iPod/iPhone
8W, rechargeable battery



AD385

Enjoy music from your iPhone 5, wirelessly

with this docking speaker

On your desk or anywhere else, the AD385 docking speaker delivers crystal-clear sound that fills the room. Compatible with iPhone 5/latest iPods via the Lightning connector, features Bluetooth and rechargeable battery for wireless music.

Crystal clear sound

- Wireless music streaming via Bluetooth
- Bass Reflex Speaker System delivers a powerful, deeper bass
- Shielding technology to block mobile phone interference

Enjoy your favorite music

- Fast charging and play music via Lightning connector
- Audio-in for portable music playback

Advanced versatility

- Built-in rechargeable battery for even better portability

PHILIPS

Docking speaker with Bluetooth®
Bluetooth® with Lightning connector, for iPod/iPhone, 8W, rechargeable battery

AD385/12

Highlights

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.


Play and charge via Lightning



Enjoy your favorite music while charging your iPod/iPhone via the new Lightning connector! Just dock it directly on the speaker to play your hand-picked tunes in superb sound. It also charges your device

quickly while playing, so you don't have to work about the battery running out.

Wireless music streaming

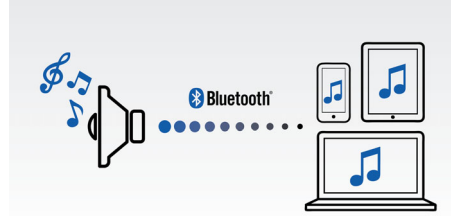

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

Audio-in



The Audio in connectivity allows direct playback of Audio in content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

Specifications

iPad compatibility

- via Bluetooth: iPad, iPad 2, iPad mini, iPad 4

iPhone compatibility

- via Lightning connector: iPhone 5, iPhone 5C, iPhone 5S
- via Bluetooth: iPhone 3G, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S

iPod compatibility

- via Lightning connector: iPod nano 7th generation, iPod touch 5th generation
- via Bluetooth: iPod nano 7th generation, iPod touch 5th generation, iPod touch 3rd generation, iPod touch 4th generation

Sound

- Output power: 8 W RMS
- Sound system: stereo
- Volume control: up/down

Connectivity

- Bluetooth profiles: A2DP
- Bluetooth range: line of sight, 10M or 30FT
- Bluetooth version: 2.1
- Audio in (3.5mm)

Dimensions

- Product dimensions (WxDxH): 300 x 133 x 116 mm
- Packaging dimensions (WxDxH): 387 x 161 x 143 mm
- Product weight: 1.3 kg
- Weight incl. Packaging: 1.65 kg

Power

- Power supply: 100 - 240V AC, 50/60Hz
- Battery type: Li-Polymer
- Battery life time: 5 hr



Issue date 2014-07-24

Version: 4.0.4

12 NC: 8670 001 03923
EAN: 87 12581 69141 7

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com