

Sound that fits your home

Obsessed with sound

Get more out of your music, gaming and video experience now. Smart and chic, this speaker delivers stunning sound from your iPod, iPhone or iPad, and ensures convenience with a built-in rechargeable battery and wireless Bluetooth streaming.

Exceptional sound performance

- Superb gaming sound effects via Bluetooth
- · Pure digital processing technology for best sound clarity
- Optimal acoustic volume to match speakers' requirements
- · Precisely tuned bass pipes for deep, tight bass reproduction

Chic and classy

- SoundCurve for superb crystal-clear sound
- · Great look with or without iPod/iPhone docked

Advanced flexibility and control

- Built-in rechargeable battery for even better portability
- Comfortable hand grip for easy relocation
- Dock any iPod/iPhone, even in its case
- Free DockStudio app for internet radio & other cool feature
- · Video stand for hands-free iPad movie enjoyment





DS8550









Specifications

iPad compatibility

· Compatible with: iPad

iPod/iPhone/iPad App

Compatibility: iOS 4.3 to iOS 10.3

iPhone compatibility

· Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4

iPod compatibility

· Compatible with: iPod, iPod mini, iPod with color display, iPod nano 2nd Generation, iPod nano 3rd Generation, iPod classic, iPod touch, iPod nano 1st Generation, iPod nano 4th Generation, iPod nano 5th Generation, iPod touch 2nd Generation, iPod touch 2nd Gen 8/16/32GB, iPod 5th Generation, iPod nano 6th generation

iPod/iPhone App

- App name: DockStudio
- Free download from App store
- Playback: Album/track navigation, Playback controls
- · Sound settings: 5 band equalizer, DBB, DSC-Flat, Pop, Rock, Jazz, Classic
- · Clock: Analog display, Digital display
- Alarm: Multiple alarms, Sleep timer, Wake up to music, Wake up to nature sounds, Wake up to
- · Battery status: Speaker battery status

Connectivity

- Bluetooth
- Bluetooth profiles: A2DP, AVRCP
- Bluetooth range: Line of sight, 10M or 30FT
- Aux in





Audio Playback

· Cradle playback mode: Charging iPhone, Charging iPod, Play and Pause, Next and Previous track

- Output power (RMS): 2x15 W
- Sound System: Stereo
- Loudspeaker types: Bass Reflex Speaker System
- Volume Control: Volume Control up/down

Loudspeakers

Speaker Drivers: 2 x 3" full range woofers

Convenience

- Backlight
- · Remote Control: Multi-functional

- Power supply: 100-240VAC, 50/60Hz, Battery
- · Battery Type: Built-in battery
- Operating time on battery: 5 hr

Accessories

 Included accessories: AC Power Cord, Remote Control, 3.5mm stereo line in cable, Warranty certificate, World Wide Warranty leaflet, Quick install guide, User Manual

Dimensions

- Product dimensions (W x H x D): 421 x 158 x 139 mm
- Packaging dimensions (W x H x D): 484 x 220 x 158 mm

Highlights


Pure digital sound



Advanced pure digital sound processing technology offers vastly superior sound performance compared to the conventional analog audio processing technology that is found in docking players that use the analog audio output from an iPod/iPhone. By collecting the iPod's/iPhone's digital audio output and employing digital processing at each stage of the circuit, a much higher Signal-to-Noise ratio is produced. The result is unsurpassed sound clarity that is in perfect balance.

Built-in rechargeable batteryBuilt-in rechargeable battery for even better portability

SoundCurve

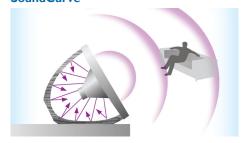

The carefully designed curved back cover of this Philips docking speaker creates a highly effective acoustic structure for sound reproduction. Its clean curve enforces the rigidity of the speaker cabinet, dramatically reducing internal resonance and eliminating the vibration and distortion of sound. You get to enjoy superb crystal-clear sound in stunning looking speakers.

Optimal acoustic volume

Smart sound design brings you the best bass reproduction possible. The acoustic volume allocated to each midrange driver perfectly matches its acoustic requirements. Low tones come out deep and tight delivering strong and rich bass.

Superb gaming sound effects

The gaming experience is never complete without great sound effects. Now your games from Smartphone or any portable device can be made even more thrilling, thanks to Philips docking speaker that puts the boom in the sound. Hear all the sounds loud and clear, and boost your experience to new levels. What's more, you can do this with outstanding convenience, via Bluetooth. Simply make the wireless Bluetooth connection between your portable device and the docking speaker, and play away.

Video stand for iPad

Video stand for hands-free iPad movie enjoyment



Issue date 2017-12-31

Version: 7.1.3

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

12 NC: 8670 000 67122 UPC: 6 09585 19465 6

www.philips.com

All Rights reserved.

© 2017 Koninklijke Philips N.V.