

Philips
DVD home theater system



HTS3568DW

Powerful surround, high definition video

with wireless rear speakers

Enjoy an incredible home theater experience with this powerful system. Wireless rear speakers eliminate cable clutter and deliver high quality surround sound. Also enjoy sharp pictures with HDMI 1080p upscaling and convenient iPod docking.

Connect and enjoy multiple sources

- Dock included for iPod
- Hi-Speed USB 2.0 Link plays video/music from USB flash drives

Brings audio and video to life

- HDMI 1080p upscales to high definition for sharper pictures
- DoubleBASS for an extended, deep bass experience
- DTS, Dolby Digital and Pro Logic II surround sound
- Karaoke Scoring for fun and exciting song contests at home

Plays all your movies and music

- DivX Ultra Certified for enhanced playback of DivX videos
- Plays WMV, DivX, WMA, MP3 and JPEG digital camera photos
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW, DVD+R DL


Easy to set up and use

- Wireless rear speakers for fewer wires across your room
- EasyLink controls all EasyLink products with a single remote

PHILIPS
sense and simplicity


Highlights

Wireless rear speakers

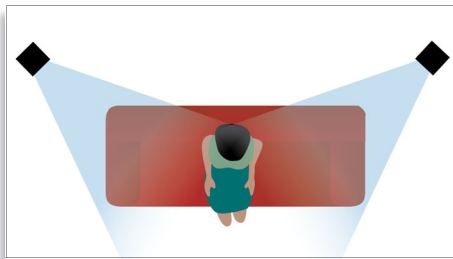

Wireless rear speakers give you scalability and mobility in speaker placement. Developed using interference-free technology, wireless speakers provide full surround sound without unsightly wire connections.

Hi-Speed USB 2.0 Link

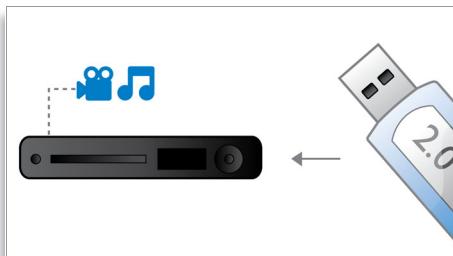

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can


now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

EasyLink



EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

DTS, DolbyDigital, ProLogic II

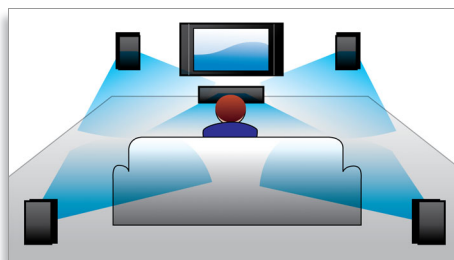

A built-in DTS and Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and

dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

DivX Ultra Certified



With DivX support, you are able to enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

Karaoke Scoring



Add a dash of fun to your Karaoke sessions with Karaoke Scoring. Allow your performance to be judged for further improvement, or for friendly competitions. Karaoke Scoring automatically rates your singing and gives you a humorous picture that is tied to how well you did. The fun never ends.



Specifications

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive Scan

Sound

- Output power (RMS): 4 x 125 W, 2 x 250 W
- Total Output Power: 1000 W
- D/A converter: 24 bit, 192 kHz
- Frequency response: 180-14000 Hz
- Signal to noise ratio: >65 dB
- Sound System: DTS, Dolby Digital, Dolby Prologic II, Stereo
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode
- Equalizer settings: Rock, Action, Classic, Concert, Drama, Lounge, Gaming, Sports

Video Playback

- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2, WMV
- Playback Media: DVD-Video, CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD
- Video disc playback system: NTSC, PAL

Audio Playback

- Compression format: MP3, WMA
- Playback Media: DVD+R/+RW, CD-R/CD-RW, DVD-R/-RW, USB flash drive
- MP3 bit rates: 32-256 kbps and VBR

Still Picture Playback

- Picture compression format: JPEG
- Playback Media: DVD+R/+RW, CD-R/CD-RW, DVD-R/-RW, USB flash drive
- Picture enhancement: Rotate, Zoom, Slideshow with music playback

Tuner/Reception/Transmission

- No. of pre-set Audio Channels: 40
- Tuner Bands: FM

Connectivity

- Front / Side connections: Microphone input 3.5mm jack, Hi-Speed USB, MP3 Line-in
- Rear Connections: HDMI output, Component Video output, S-Video out, Composite video (CVBS) output, AUX in, Wireless Ready Connector, FM Antenna, Easy-Fit speaker connectors, Digital coaxial in

Power

- Power supply: 120/230VAC, 50/60Hz
- Standby power consumption: < 1 W
- Power consumption: 180 W

Loudspeakers

- Satellite Speaker: 4 Floor standing pillars, Wireless rear speakers
- Satellite speaker drivers: 3" full range woofer
- Satellite speaker impedance: 6 ohm

- Satellite speaker freq range: 150-20000 Hz
- Center Speaker: Magnetically shielded, 3 way
- Center speaker drivers: 1 x 2" tweeter, 2 x 2.5" woofers
- Center freq range: 150-20000 Hz
- Center speaker impedance: 3 ohm
- Subwoofer driver: 8" high efficiency woofer
- Subwoofer freq range: 40-150 Hz
- Subwoofer impedance: 8 ohm
- Subwoofer type: Passive

Accessories

- Included Accessories: Dock for iPod, Wireless transmitter, Wireless receiver, Remote Control, 2 x AAA Batteries, CVBS video cable, FM antenna, Power cord, Quick start guide, User Manual, World Wide Warranty leaflet

Dimensions

- Set dimensions (W x H x D): 435 x 58 x 360 mm
- Set weight: 4.04 kg
- Transmitter dimensions (W x H x D): 48.5 x 88.3 x 49 mm
- Receiver dimensions (W x H x D): 126 x 131.5 x 126 mm
- Surround Speaker dimensions (W x H x D): 262 x 1199 x 264 mm
- Surround speaker Weight: 3.53 kg
- Center speaker dimensions (W x H x D): 440 x 105 x 75 mm
- Center Speaker Weight: 1.39 kg
- Subwoofer dimensions (W x H x D): 163 x 363 x 369 mm
- Subwoofer Weight: 5.08 kg
- Packaging dimensions (W x H x D): 765 x 620 x 410 mm
- Weight incl. Packaging: 28 kg

Outer Carton

- EAN: 87 12581 43744 2
- Gross weight: 29.53 kg
- Outer carton (L x W x H): 76.5 x 41 x 62 cm
- Nett weight: 25.73 kg
- Number of consumer packagings: 1
- Tare weight: 3.8 kg

Packaging dimensions

- Packaging dimensions (W x H x D): 76.5 x 62 x 41 cm
- EAN: 87 12581 43744 2
- Gross weight: 29.53 kg
- Nett weight: 25.73 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 3.8 kg

Product dimensions

- Cable length: 0 cm
- Product dimensions (W x H x D): 0 x 0 x 0 cm
- Weight: 0 kg



Issue date 2009-05-19

Version: 2.0.3

12 NC: 8670 000 41621
EAN: 87 12581 43744 2

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com