

Philips
DVD Micro Theater



MCD139

Turn Any Rooms into Theatre

You're in touch with the latest and the coolest - now get a load of the hot 2-in-1 Micro Hi-Fi with DVD, WMA-CD and MP3-CD playback! Relax to your fave movies and music. Home entertainment will never be the same again!

Enjoy your favorite movies, photos and music

- Play DVD, (S)VCD, MP3-CD, WMA-CD, CD(RW) & Picture CD
- Dolby Digital for ultimate movie experience
- Progressive Scan component video for optimized image quality

Enrich your sound experience

- Digital Sound Control for optimized music style settings
- Dynamic Bass Boost for deep and dramatic sound
- Total 100W RMS

Start the day your way

- Wake-Up and Sleep Timer
- Digital tuning with 20 preset stations for extra convenience

PHILIPS
sense and simplicity

Highlights

Digital Sound Control




Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classic controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

Dynamic Bass Boost



Dynamic Bass Boost maximizes your music enjoyment by emphasizing the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

Progressive Scan

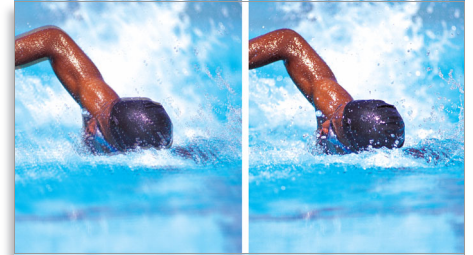

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.



Specifications

Sound

- Output Power: 2x25W + 50W RMS / 1800W PMPO
- Sound Enhancement: Digital Sound Control 4 modes, Dynamic Bass Boost
- Sound System: Dolby Digital

Loudspeakers

- Main Speaker: 3" woofer
- Subwoofer type: Passive

Video Playback

- Playback Media: DVD+RW, DVD-Video, Picture CD, Video CD/SVCD
- Disc Playback Modes: A-B Repeat, Angle, PBC, Slow Motion, Zoom, Parental control, OSD, Resume Playback from Stop
- DVD Region.: 4
- Video Enhancement: Progressive Scan

Audio Playback

- Playback Media: WMA-CD, MP3-CD, CD, CD-R, CD-RW
- Disc Playback Modes: 20-Track Programmable, Repeat/one/all/program, Shuffle Play
- Loader Type: Top

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning
- Station presets: 20

Connectivity

- Video Output - Analog: Component Y Pb Pr (cinch), Composite CVBS (yellow cinch), S-Video (on Hosiden)
- Aux in: 1x(L/R)/ RCA
- Other connections: Digital audio coaxial out, FM Antenna, Line out, DIN connection

Convenience

- Alarms: CD Alarm, Sleep timer, Radio Alarm
- Clock: On main display
- Display Type: White FTD
- OSD Languages: English, Simplified Chinese

Accessories

- Included Accessories: Composite video cable (Y), FM antenna
- Remote control: 38-key with Lithium battery
- Cables: Din

Dimensions

- Set dimensions (W x H x D): 218 x 90 x 221.5 mm
- Main speaker dimensions (W x H x D): 125 x 250 x 232 mm
- Packaging dimensions (W x H x D): 550 x 314 x 330 mm
- Weight incl. Packaging: 13 kg
- Subwoofer dimensions (W x H x D): 147 x 250 x 232 mm



Issue date 2009-07-17

Version: 1.0.4

12 NC: 8670 000 26824
EAN: 87 12581 31455 2

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com