


Philips  
wireless portable speaker

Bluetooth  
Blue

BT150A

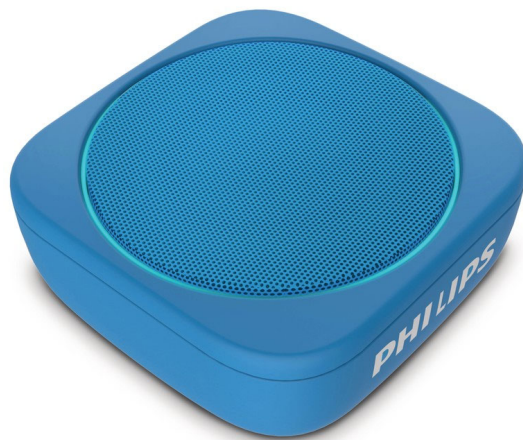

## Pool party. Shower party. Your party.

Wherever. Whenever. This waterproof Bluetooth speaker packs chunky bass into a tiny package and gives you surprisingly big sound. You get eight hours of play time and audio-in. From the pool to the shower—make it your kind of party.

### Turn it up. In the pool. In the shower.

- Waterproof to 1 m for up to 30 minutes. IPX7 rated
- 1.5" full-range speaker. A passive radiator boosts bass
- Anti-clipping function. Play it loud without distortion
- 8 hours of play time. USB charging. Micro USB cable included

### Music or calls

- Built-in mic. Take your calls via the speaker
- Audio-in. Connect to almost any source
- Up to 10 m wireless range

### Bring the tunes. Anywhere.

- Hang it from your bag or on your bike. 9.5 x 9.5 x 3.8 cm
- Finely knitted detachable carry strap
- Buttons on speaker for play and volume/skip tracks
- LED lights around the speaker grille. Blue/random colours

# PHILIPS

# Specifications

## Accessories

- Included accessories: Quick install guide, World Wide Warranty leaflet, carrying strap
- Cable: USB charging cable

## Power

- Battery type: lithium polymer (built-in)
- Operating time on battery: up to 10 hr

## Sound

- Output power (RMS): 4 W
- Sound System: Mono

## Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10 m or 30 ft
- Audio in (3.5 mm)
- Bluetooth version: 4.2

## Compatibility

- other Bluetooth-enabled device
- work with: up to iOS 10.2, Bluetooth 4.2 or below

## Convenience

- Display type: LED display (multi-colour)
- Water resistance: IPX7

## Design and finishing

- Colour: Blue

## Dimensions

- Packaging dimensions (WxDxH): 11.5 x 5 x 15 cm
- Product weight: 0.21 kg
- Weight incl. Packaging: 0.3 kg
- Product dimensions (WxDxH): 9.5 x 9.5 x 3.95 cm

# Highlights

## Waterproof and ready to go

Poolside, lakeside, in the shower. This waterproof IPX7-rated speaker floats and can withstand being submerged in depths of up to 1 m for up to 30 minutes.

## 8 hrs of play time. USB charging.

The battery gives you 8 hours of play time from a full charge. Charging takes around 3 hours and is easy via the included micro USB cable.

## Control your music

Control the music from buttons on the side of the speaker. Press to play and double-press the volume up/down buttons to skip tracks. The speaker grille has LED lights that glow a steady blue or flash random colours.

## Crisp sound. Punchy bass.

The 1.5" full-range speaker delivers crisp, clear sound even when you play it loud. A passive radiator boosts the bass giving you that much more punch on the low-end tones.

## Built-in mic

Power on the speaker and it's ready to pair with your Bluetooth device. The wireless range is 10 m and the built-in mic lets you take calls out loud. When a call comes in, the music pauses automatically.

## Audio-in for easy connection

Want to connect to an external audio source like a turntable or MP3 player? The audio-in socket at the back of the speaker lets you connect to almost any electronic device.



Issue date 2020-12-24

Version: 2.0.3

12 NC: 8670 001 63797  
EAN: 69 51613 99728 4

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)