

Register your product and get support at
www.philips.com/welcome









Indoor wireless headphones

SHC5100



EN User manual

PHILIPS

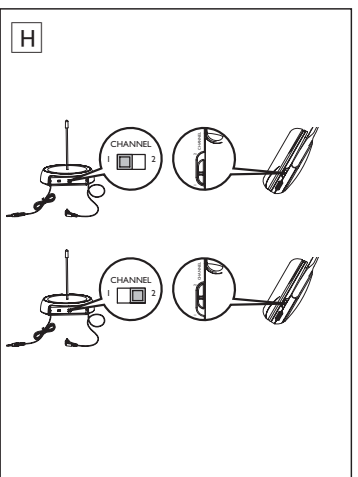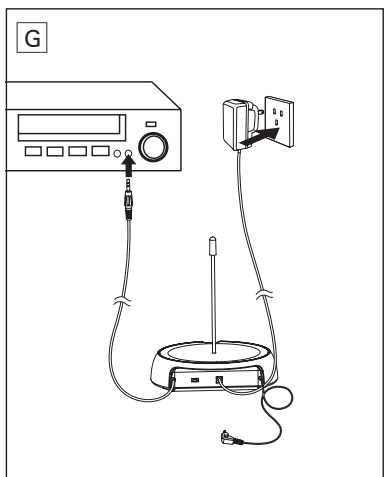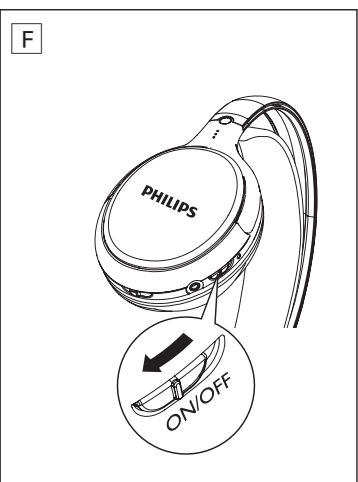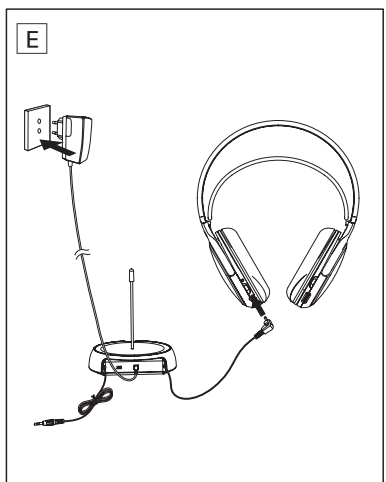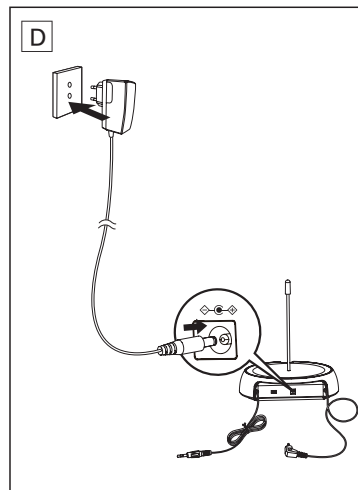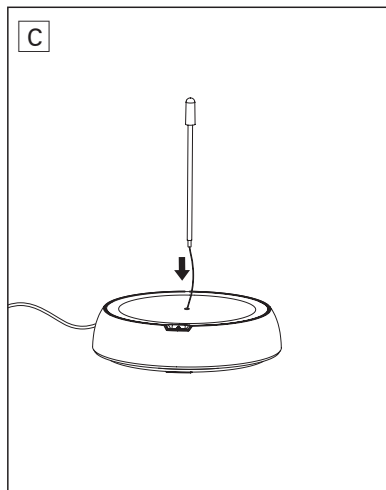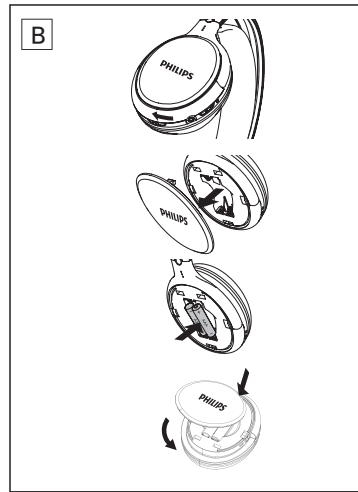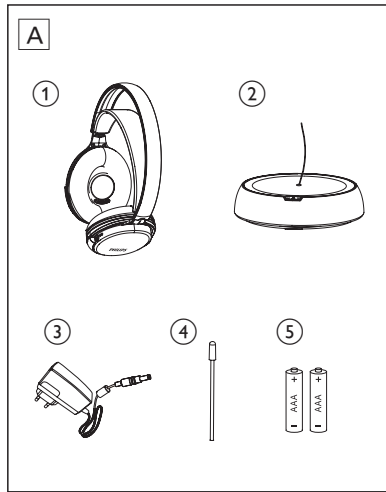

Contents

1	What's in the box	4
2	Get started	5
3	Product version table	6

1 What's in the box

1) Headphone	2) Transmitter
3) AC/DC adaptor	4) Antenna tube
5) 2 × AAA rechargeable shortened sleeve NiMH batteries (SBC HB550L)	

2 Get started

Note

- Before using the headphones for the first time, charge the supplied batteries for at least 10 hours.
- **Only use Philips rechargeable shortened sleeve NiMH batteries with your headphones. Other types of rechargeable batteries cannot be charged with this system.**
- **AAA alkaline batteries can be used to operate the headphones, but cannot be charged with this system.**
- If the volume of the audio source is insufficient, the transmitter automatically turns off.

- 1 Install/Replace supplied batteries (Fig. B).
- 2 Install the antenna tube into the transmitter (Fig. C).
- 3 Power on the transmitter (Fig. D).
 - ↳ Red LED is on when audio source is connected.
 - ↳ Red LED blinks if no audio source is connected for two minutes.
 - ↳ Red LED is off if no audio source is connected for four minutes.
- 4 To charge the headphones, connect the charging cable with the headphones (Fig. E).
 - ↳ Headphones: red LED is off during charge.
 - ↳ Transmitter: green LED is on during charge and is off when headphones are fully charged.
- 5 Power on the headphones and red LED is on (Fig. F).
- 6 Connect the audio device with the transmitter (Fig. G).
 - ↳ Red LED is on when audio source is connected.

Tip

- If there is interference, tune the transmitter and the headphones to the same channel (Fig. H).

3 Product version table

Version / Region	Adaptor type number	Input voltage / frequency	Output voltage	Carrier / Reception frequency	
				Channel 1	Channel 2
/69 Singapore	SVV-005-080-020-A2	100-240V / 50/60Hz	8V 200mA	924.25MHz	924.75MHz
/30 Hong Kong	SBH-005-080-020-A2	100-240V / 50/60Hz	8V 200mA	820MHz	821MHz
/79 AUS/NZ	SSH-005-080-020-A2	100-240V / 50/60Hz	8V 200mA	924.25MHz	925.25MHz
/93 China	SCV-005-080-020-A2	100-240V / 50/60Hz	8V 200mA	766MHz	768MHz

For further product support, please visit www.philips.com/welcome

