

Philips 3000 series  
DVD player



DVP3800



## Enjoy it all - from DVD

Does size matter? Ever heard of less is more? Introducing the best value DVD player. No complications! Just a simple set that plays practically any disc format, including your digital photos with absolutely no compromise to picture quality.

### Bring audio and video to life

- 12-bit/108MHz video processing for sharp and natural images
- 192kHz/24 bit audio DAC enhances analogue sound input
- High quality outputs for analog and digital audio
- Screen Fit for optimal viewing every time
- Smart Picture provides personalized image settings

### Play all your movies and music

- ProReader Drive for smooth playback on virtually any disc
- DivX Ultra Certified for enhanced DivX video playback
- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG

### Fits any space, any lifestyle

- Ultra-slim design that fits anywhere



asimpleswitch.com

# PHILIPS

# Specifications

## Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

## Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 100
- Distortion and Noise (1kHz): 85 dB
- Crosstalk (1kHz): 100 dB
- Dynamic Range (1kHz): 90 dB
- Sound System: Dolby Digital

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD-R/-RW, DVD+R/+RW, DVD-Video, DivX
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0
- Video disc playback system: PAL, NTSC

## Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3, WMA, PCM

## Still Picture Playback

- Playback Media: DVD-R/-RW, DVD+R/+RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate,

Slideshow, Zoom, Slideshow with MP3 playback

## Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3

## Connectivity

- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, Scart

## Convenience

- Child Protection: Parental Control, Child Lock
- On-Screen Display languages: English, Czech, Danish, Dutch, Finnish, French, German, Greek, Italian, Norwegian, Polish, Portuguese, Spanish, Swedish, Turkish

## Power

- Power consumption: < 10 W
- Standby power consumption: < 0.5W
- Power supply: 110-240V, 50/60 Hz

## Accessories

- Included accessories: Remote Control, World Wide Warranty leaflet, User Manual, AAA Battery (x1)

## Dimensions

- Set dimensions (W x H x D): 360 x 42 x 209 mm
- Packaging dimensions (W x H x D): 400 x 80 x 284 mm
- Set weight: 1.3 kg
- Weight incl. Packaging: 2.4 kg




# Highlights

## Multimedia DivX


Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG

## 12-bit/108MHz video processing

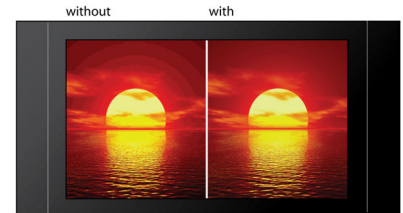


12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.

## 192kHz/24 bit audio DAC

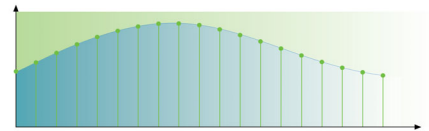

192KHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

## Screen Fit



Whatever you're watching, and on any TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full-screen



Issue date 2017-04-04

Version: 1.2.4

12 NC: 8670 000 79885  
EAN: 87 12581 61303 7

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)