



Philips
HD camcorder



CAM295BL



Capturing and sharing great moments — made easy

With touch-screen control

Taking full HD videos and photos is a cinch with this ESee camcorder CAM300. Its 3" touch-screen hands you intuitive control, while the instant editing and quick impression features let you share what you want right away, on TV and online.

Take quick and easy videos in full HD quality

- Relive memories in great detail with full HD videos
- Up to 12 megapixel resolution for high quality photos
- 3" touch-screen for smooth and intuitive control
- Flash, auto focus, face and smile detection

Share your favourite photos and videos effortlessly

- Integrated USB plug for no-fuss connection to your PC/Mac
- Instant video editor for simple editing on the camcorder
- Dual format recording for full HD and email-friendly formats
- Quick sharing for emailing and posting on Facebook/YouTube
- Direct TV connection via HDMI for viewing your videos in HD

Bring it with you anywhere

- Small and slim design to fit easily into your pocket
- Extra long battery life lets you shoot more

PHILIPS
sense and simplicity

Highlights

Direct TV connection via HDMI




Direct TV connection via HDMI for viewing your videos in HD

Integrated USB plug



Integrated USB plug for no-fuss connection to your PC/Mac

Dual format recording

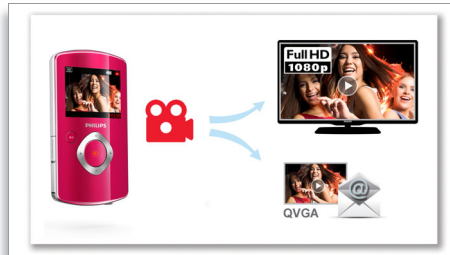

Full HD videos are great for watching on HD TVs. But should you want to email the video or share it online, the large HD file will have to be compressed and converted into an email-friendly format. Your camcorder takes away that hassle by offering dual format recording. Turn the feature on and your videos are recorded in two formats—full HD (1080p) and email-friendly QVGA (240p)—simultaneously. This lets you enjoy your videos to the fullest on your HD TV, and gives you a format you can immediately share electronically.

Full HD (1080p) videos



Capture and enjoy videos in full high definition quality (full HD 1080p). "1080" refers to the

display resolution in terms of the number of horizontal lines on screen. "p" stands for progressive scan, or the sequential appearance of the lines in each frame. 1080p gives video quality that is superior to that found in typical mobile phones and digital cameras. In addition, the camcorder uses the same video format as Blu-ray players and discs — H.264. This highly sophisticated format delivers superb HD picture quality, letting you savour crystal clear memories on video.

Quick sharing



With the built-in Windows software, you can post your movies on websites like YouTube, Facebook, Twitter and Vimeo with no fuss. For Mac users, you can easily organise, edit and share with iMovie from iLife. With an advanced compression technique, the HD video format (H.264) used by the Philips camcorder can generate smaller files than those from standard camcorders, digital cameras and mobile phones without any loss in video quality, so you can share them faster! These files can also be used by other programs like iPhoto and Windows Movie Maker.

Specifications

Video Quality

- Resolution: Full HD (1920 x 1080p) at 30 fps, Sport Mode (1280 x 720p) at 60 fps, SD (640 x 480) at 30 fps
- Photo Resolution: 12 MP, 8 MP
- Formats: H.264 video compression, AAC Audio compression, MP4 files format
- Scene Mode: Auto, Snow/Beach, Night, Back-light, Sunset, Fine-Skin
- Effects: Normal, Sepia, Black and White, Negative, Seventies, Analogue, Colour filter
- White Balance: Automatic white balance
- Exposure: Automatic exposure control

Lens and Sensor

- Lens: Auto Focus (0.1 m to infinity)
- Aperture: F2.8
- Zoom: Fast multi-step 5x digital
- Sensor: 1:3.2 inch, 8 MP CMOS sensor

Camcorder features

- Quick Impression: for video highlights in video
- Simple editing: On camcorder movie editing
- Dual Record: in full HD format, in email-friendly format
- Enhancement: Autofocus, Face tracking, Smile detection
- Flash Light: LED Flash for dark environment
- 3 Second Pre-Recording
- Power-up Time: 2 seconds
- Auto Shut-Down: 3 minutes
- Tripod Mount

Display

- 3 inch LCD (diagonal) touch
- 960 by 240 pixel resolution

Philips Arcsoft software

- Easy Sharing: direct upload to Facebook, direct upload to YouTube, upload button for websites, upload button for email
- Video Editing: add titles, music and credits, create

movies, cut video

Battery

- Type: Li-Ion Battery
- Life: 120 Minutes
- Charge Time: 3.5 hrs. via adaptor, 5.5 hrs. via computer USB

Capacity

- Internal memory: 128 MB
- Recording Media: Micro SD Card (up to 32 GB)
- Recording Time: 1 hour @ 4 GB for Full HD, 1 hour @ 1 GB for SD

Input and Output

- TV Out: HDMI
- USB: Built-in flip-out USB (USB 2.0)
- Audio-out: via HDMI
- Speaker: Built-in Speaker
- Microphone: Wind-noise reduction, Stereo directional microphone

Dimensions

- Product dimensions (W x H x D):
54 x 110 x 21.5 mm

Minimum Requirements

- Windows: Windows XP, Windows Vista, Windows 7, Internet Explorer 6.0, PENTIUM 4 - 2.8 GHz processor, 1 GB RAM and 64 MB Video RAM
- MAC: MACINTOSH 10.4, MACINTOSH 10.5, MACINTOSH 10.6, MAC 1.66 GHz Intel Core Duo, Safari 1.1
- Other: 1024 x 768 display resolution, 300 MB free hard disc space, USB v1.1

Accessories included

- Quick Start Guide
- Philips Arcsoft Software: .



Issue date 2013-04-08

Version: 2.1.7

12 NC: 8670 000 87318
EAN: 87 12581 63587 9

© 2013 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com