

PHILIPS

Cordless phone

1.6" display/amber backlight

Handset speakerphone

D2601B



Talk Hands-free

Our clever design gives you great sound reproduction without having to hold the phone to your ear - so you can talk completely hands-free. A true plug-and-play device with a user-friendly menu. A great chat has never been easier.

Eco-conscious product

- Low radiation and power consumption

Nice and simple

- Easy to read 1.6" (4.1 cm) graphical display with backlight
- Freestanding handset with a speaker for easy hands-free calls
- Menu in multiple local languages
- Programmable hot keys for quick dial
- Textured back cover for non-slip grip
- Up to 16 hours of talk time on a single charge
- Caller ID – so you always know who is calling*

Crystal clear sound

- The Parametric Equaliser delivers pure and clear sound
- Optimised antenna layout for great reception in any room
- Advanced sound testing and tuning for superb voice quality

Highlights

4.1-cm (1.6") graphical display

Easy to read 1.6" (4.1 cm) graphical display with backlight

Advanced sound testing



We test the sound quality of our DECT phones the same way as high-end headphone manufacturers do. Using an advanced ear simulator, we can accurately re-create the way people actually hear. This helps our acoustic engineers to measure and fine-tune things like frequency response, distortion and overall hearing perception, to create perfect voice reproduction for both handset and hands-free modes.

Eco-conscious product



Philips phones are energy efficient and designed to be respectful to the environment.

Handset speakerphone



Hands-free mode uses a built-in loudspeaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

Menu in local languages




Enjoy easy setup, navigation and control with intuitive menu available in local languages.

Non-slip grip



The rear of the handset is treated with a special texture for added comfort and better grip.

Optimised antenna layout

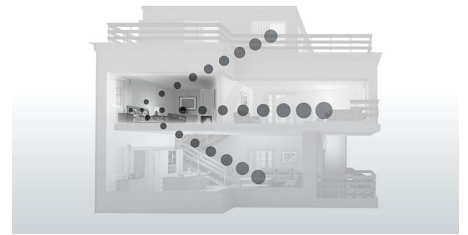

Our optimised antenna layout ensures strong and stable reception, even in areas of the house where cordless transmission is difficult. Now you can take a call wherever you are in the house, and enjoy a long, uninterrupted conversation even as you walk around.

Parametric Equaliser



Our telephones use parametric equalisation in the digital sound processing to fine tune the sound response back to the intended linear frequency response curve, delivering sound that is pure and clear, for each conversation.

Highlights

Programmable hot keys



Now calling the people you care about most is easier than ever. With simple one-touch dialling, you will never have to search for their number again. You can programme up to 2 keys for instant calling.

Up to 16 hours talk time



Up to 16 hours of talk time on a single charge

Caller ID*



Sometimes it's good to know who's calling before you answer. And our Caller ID lets you keep track of who's on the other end of the line.

Specifications

Sound

Volume control on handset

Ringtones on handset: 10 polyphonic

Convenience

Menu structure in the handset: List Menu

Base Station keys: Paging key

Speakerphone — talk hands-free

Call Management: Call Waiting*, Caller ID*,

Microphone mute, Missed Calls, Received Calls

Signal strength indication

Signal strength indicator: 3 bar indicator

Battery level indicator: 3 bar battery icon

Date/Time display

Multi-base capability: 1

Battery charge indication

Programmable hot keys: Key 1 and 2

Keypad lock

Key tone on/off

Auto hang up

Up to 16 hrs talk time

Up to 180 hrs standby time

Charge time: 8 hours

Line cord length: 1.8 m

Power cord length: 1.8 m

Range: Open field <300 m; indoor <50 m

Non-slip grip: Circular texture

Power

Battery Capacity: 550 mAh

Mains power: AC 100-240 V ~50/60 Hz

Battery type: AAA NiMH Rechargeable

Power Consumption: <0.7 W

Packaging dimensions

Height: 13.6 cm

Packaging type: Carton

Type of shelf placement: Laying

Width: 18.5 cm

Depth: 6 cm

Number of products included: 1

EAN: 48 95229 12595 7

Gross weight: 0.358 kg

Net weight: 0.282 kg

Tare weight: 0.076 kg

Picture/Display

Display size: 4.1 cm/1.6"

Backlight colour: Amber

Display type: 1-line dot matrix + 1-line numeric + icons

Backlight: Yes

Memory Capacity

Call log entries: 20 entries

Phonebook: 50 names and numbers

Redial List Capacity: Last 10 numbers

Phonebook store in the base

Security

Transmission encryption: Yes

SAR Value

Philips handsets: <0.1 W/kg

Eco Design

Full ECO Mode (NEMO)

Eco+

Network Features

Compatible: GAP

